

GANT

TIME

PARK AVENUE 28

USER INSTRUCTIONS

SPECIFICATIONS

GANT ID: G1260

MOVEMENT ID: Miyota GL30

BATTERY: SR621SW

SETTING HOUR, MINUTE & SECOND

1. Pull the crown out to position 2.
2. Turn the crown to set the hour and minute hands.
3. When the crown is pushed back to the normal position, second hand begins to run.

DISPLAY

