

GANT

TIME

PARK AVENUE 32

USER INSTRUCTIONS

SPECIFICATIONS

GANT ID: G1270

MOVEMENT ID: Miyota GL20

BATTERY: SR621SW

SETTING HOUR, MINUTE & SECOND

1. Pull the crown out to position 2.
2. Turn the crown to set the hour and minute hands.
3. Push the crown back to Normal Position

DISPLAY

