

GANT

TIME

PARK AVENUE

DAY-DATE

USER INSTRUCTIONS


SPECIFICATIONS

GANT ID: G1280

MOVEMENT ID: Seiko VX3PE

BATTERY: SR920SW

DISPLAY

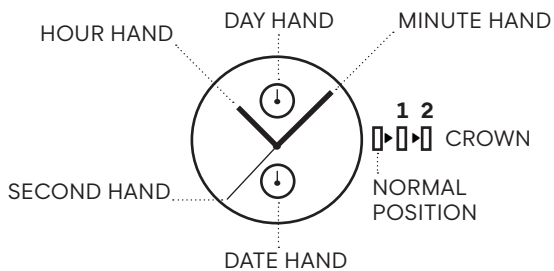

SETTING HOUR, MINUTE & SECOND

Pull the crown to position 2 when the second hand reaches the 12 o'clock position and stops there. Then set the hour and minute hands. When setting the minute hand, put it 4 to 5 minutes earlier than the time to be set, and turn it back to the correct time.

SETTING CALENDAR

Pull the crown to position 1 and turn counter-clockwise to adjust the date. If the date is set between 9:00 pm and 0:00 am, the date will not change correctly.