

GANT

TIME

# NORWOOD

## USER INSTRUCTIONS


### SPECIFICATIONS

GANT ID: G1330

MOVEMENT ID: Miyota 9T22

BATTERY: SR616SW

### DISPLAY

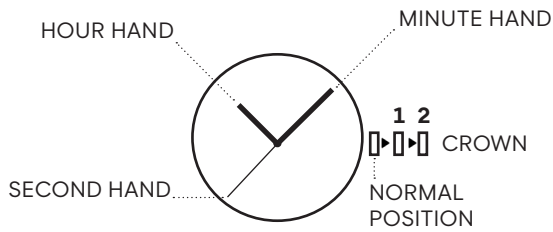

### SETTING HOUR, MINUTE & SECOND

1. Pull the crown out to position 2.
2. Turn the crown to set the hour and minute hands.
3. When the crown is pushed back to the normal position, second hand begins to run.