

GANT

TIME

SPENCER

USER INSTRUCTIONS


SPECIFICATIONS

GANT ID: G1350

MOVEMENT ID: Seiko VD31

BATTERY: SR920SW

DISPLAY

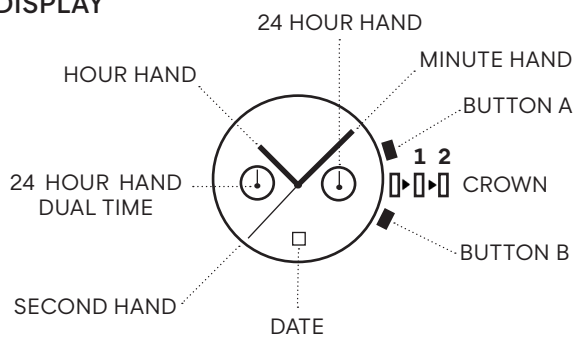

SETTING THE DUAL TIME

1. Pull out the crown when the second hand is at the 12 o'clock position.
[Crown position]
VD31C second click.
VD32C first click.
2. To adjust the time by pressing the buttons A or B.
By pressing button A the hands move counter clockwise.

SETTING THE TIME

1. Pull out the crown when the second hand is at the 12 o'clock position.
[Crown position]
VD31C second click.
VD32C first click.
2. Turn the crown to set the hour and minute hands.
(Check that 24 hour hand is set correctly)
3. Push the crown back normal position in accordance with a time signal.

Note

*The 24 hour hand moves correspondingly with the hour hand.

*The moment of the date changes is midnight. when setting the hour hand, make sure that AM/PM is correctly set by using the 24 hour hand as an AM/PM indicator.

SETTING THE DATE

1. Pull out the crown to the first click.
2. Turn the crown to clockwise until the next date appears.
3. Push the crown back in to the normal position.

USING THE TIME DIFFERENCE CORRECTION

When moving to a country or area which is in a different time-zone, the current time in the local time can be corrected.

1. Crown at the normal position.
2. To adjust the time by pressing the button A or B.
*By pressing button A the hands move counter clockwise.
-1hour / push
*By pressing button B the hands move clockwise. +1hour / push