

# GANT

TIME

# SUSSEX

## USER INSTRUCTIONS


### SPECIFICATIONS

GANT ID: G1360

MOVEMENT ID: Miyota 2115

BATTERY: SR626SW

### DISPLAY

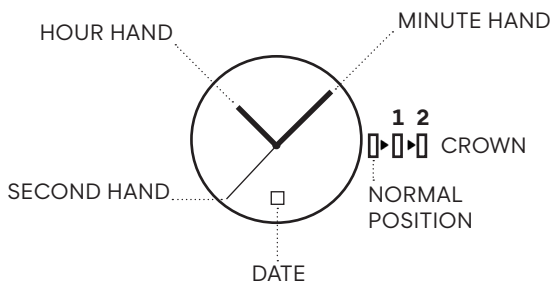

### SETTING HOUR, MINUTE & SECOND

1. Pull the crown out to position 2.
2. Turn the crown to set the hour and minute hands.
3. When the crown is pushed back to the normal position, second hand begins to run.

### SETTING THE DATE

1. Pull the crown out to position 1.
2. Turn the crown counter-clockwise to set the date.

\* If the date is set between the hours of around 9:00 PM and 1:00 AM, the date may not change the following day.

3. After the date has been set, push the crown back to the normal position.