

# GANT

TIME

# WALWORTH

## USER INSTRUCTIONS


### SPECIFICATIONS

GANT ID: G1440

MOVEMENT ID: Seiko VD32

BATTERY: SR920SW

### DISPLAY

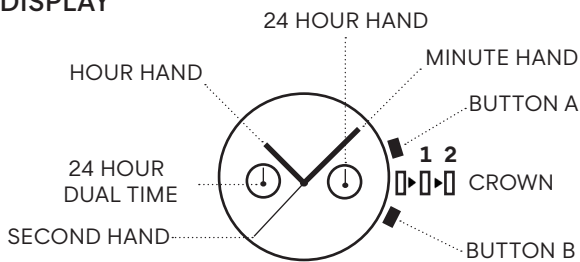

### SETTING THE DAY

1. Pull the crown out to the 2nd Click Position.
2. Turn the crown clockwise to set the day.
3. After the day has been set, push the crown back to the Normal position.

\* The day is changed during the period from 0AM to 5AM.

### SETTING THE DATE

1. Pull the crown out to the 1st Click Position.
2. Turn the crown clockwise to set the date.
3. After the date has been set, push the crown back to the Normal position.

### SETTING THE TIME

1. Pull the crown out to the 2nd Click Position.
2. Turn the crown clockwise to set hour and minute hands.
3. After the time has been set, push the crown back to the Normal position.

### SETTING THE DUAL TIME

Press button "A" to set the dual time hand forward in units of 15 minutes.

Press button "B" to set the dual time hand back in units of 15 minutes.

\*The dual time hand can be put rapidly by continuously pressing button "A" or "B".