




SPECIFICATIONS GANT ID: G1510

**MOVEMENT ID:** Miyota GM15

**BATTERY:** SR621SW

## **DISPLAY**

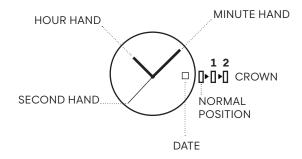

## **SETTING HOUR, MINUTE & SECOND**

- 1. Pull the crown out to position 2.
- 2. Turn the crown to set the hour and minute hands.
- 3. When the crown is pushed back to the normal position, second hand begins to run.

## SETTING THE DATE

- 1. Pull the crown out to position 1.
- 2. Turn the crown counter-clockwise to set the date.
- \* If the date is set between the hours of around 9:00 PM and 1:00 AM, the date may not change the following day.
- 3. After the date has been set, push the crown back to the normal position.