

SUSSEX 44

USER INSTRUCTIONS


SPECIFICATIONS

GANT ID: G1660

MOVEMENT ID: Seiko VX62

BATTERY: SR927SW

DISPLAY

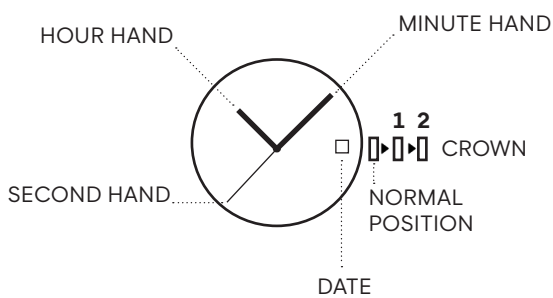

SETTING HOUR, MINUTE & SECOND

1. Pull the crown out to position 2.
2. Turn the crown to set the hour and minute hands.
3. When the crown is pushed back to the normal position, second hand begins to run.

SETTING THE DATE

1. Pull the crown out to position 1.
2. Turn the crown counter-clockwise to set the date.
3. After the date has been set, push the crown back to the normal position.

* If the date is set between the hours of around 9:00 PM and 1:00 AM, the date may not change the following day.

GANT

TIME