

# SOUTHAMPTON

## USER INSTRUCTIONS


### SPECIFICATIONS

**GANT ID:** G1750

**MOVEMENT ID:** Seiko VX9P

**BATTERY:** SR927SW

### DISPLAY

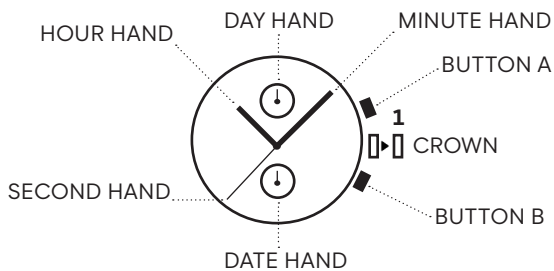

### SETTING HOUR, MINUTE & SECOND

Pull the crown to position 1 when the second hand reaches the 12 o'clock position and stops there. Then set the hour and minute hands. When setting the minute hand, put it 4 to 5 minutes earlier than the time to be set, and turn it back to the correct time.

### SETTING THE DATE

Press button A to change the day. Press the button B to change the date. If the date is set between 9:00 pm and 0:00 am, the date will not change correctly.

\* If the date is set between the hours of around 9:00 PM and 1:00 AM, the date may not change the following day.

# GANT

## TIME