

# EAST HAMPTON

## USER INSTRUCTIONS


### SPECIFICATIONS

**GANT ID:** G1770

**MOVEMENT ID:** Miyota 6P29

**BATTERY:** SR621SW

### DISPLAY

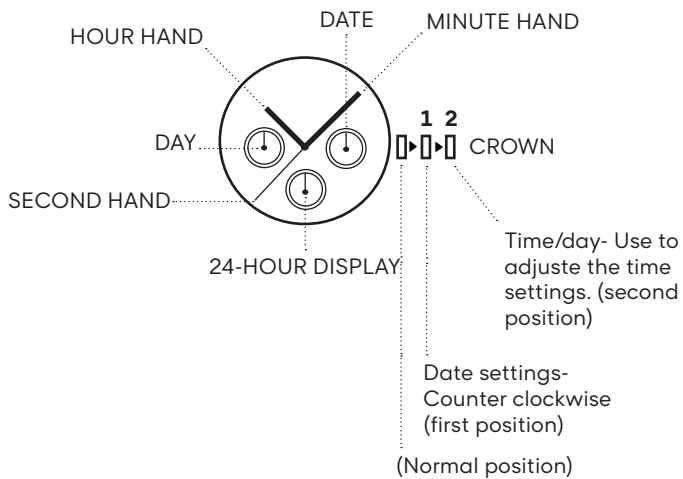

### SETTING TIME/DAY

Pull the crown to 2nd position when the second hand points to 0 (12 o'clock). After setting the time, use a time signal to synchronize the watch by pushing the crown to the normal position to start the second hand going.

- You can not quickly adjust the day of the week. In order to adjust the day, you must advance the hour hand by 24 hours per day.

- Always rotate the hour and minute hands in a clockwise direction to set the day. If you rotate the hands in a counter-clockwise direction, it may not always change the day correctly.

### SETTING THE DATE

Pull the crown out to the first position. Turn the crown to the left to set the date. You can not adjust the date between approximately 9pm and 0:30am. After setting the time/date/day of the week, please push the crown back to its normal position before using.

# GANT

## TIME