

# SUSSEX MINI

## USER INSTRUCTIONS


### SPECIFICATIONS

**GANT ID:** G18100

**MOVEMENT ID:** MIYOTA GN12

**BATTERY:** SR621SW

### DISPLAY

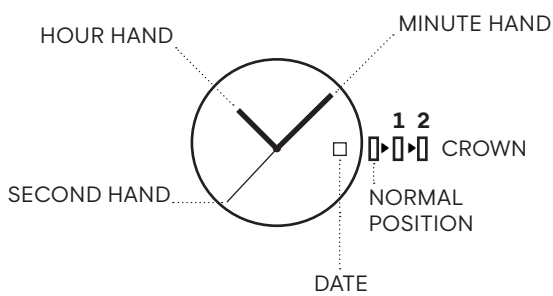

### SETTING HOUR, MINUTE & SECOND

1. Pull the crown out to position 2.
2. Turn the crown to set the hour and minute hands.
3. When the crown is pushed back to the normal position, second hand begins to run.

### SETTING THE DATE

1. Pull the crown out to position 1.
2. Turn the crown counter-clockwise to set the date.
3. After the date has been set, push the crown back to the normal position.

\* If the date is set between the hours of around 9:00 PM and 1:00 AM, the date may not change the following day.

# GANT

## TIME