

FALL RIVER

USER INSTRUCTIONS


SPECIFICATIONS

GANT ID: G1870

MOVEMENT ID: SEIKO Y121F

BATTERY: SR626SW

DISPLAY

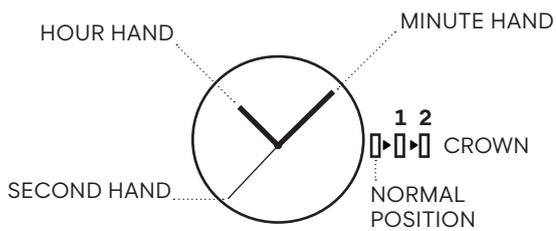

SETTING HOUR, MINUTE & SECOND

1. Pull the crown out to position 2.
2. Turn the crown to set the hour and minute hands.
3. When the crown is pushed back to the normal position, second hand begins to run.

GANT

TIME