

RHODE ISLAND HERITAGE

USER INSTRUCTIONS


SPECIFICATIONS

GANT ID: G1730

MOVEMENT ID: Seiko Y121

BATTERY: SR621SW

DISPLAY

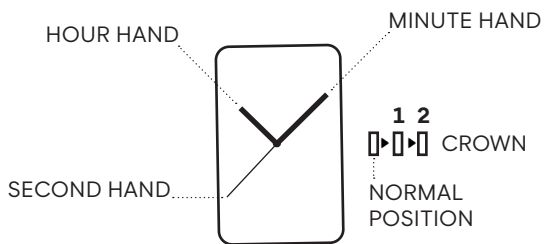

SETTING HOUR, MINUTE & SECOND

1. Pull the crown out to position 2.
2. Turn the crown to set the hour and minute hands.
3. When the crown is pushed back to the normal position, second hand begins to run.

GANT
TIME