


SPECIFICATIONS

GANT ID: G1780

MOVEMENT ID: Seiko Y121

BATTERY: SR621SW

DISPLAY

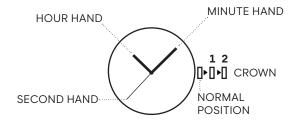

SETTING HOUR, MINUTE & SECOND

- 1. Pull the crown out to position 2.
- 2. Turn the crown to set the hour and minute hands.
- 3. When the crown is pushed back to the normal position, second hand begins to run.



TIME