


# GRADUATE

## USER INSTRUCTIONS

### SPECIFICATIONS

**GANT ID:** K280001 - 16  
**MOVEMENT ID:** SEIKO Y121-F  
**BATTERY:** SR626SW

### DISPLAY

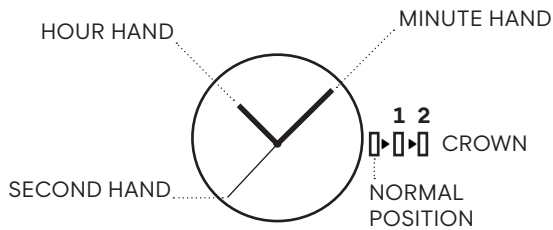

### SETTING HOUR, MINUTE & SECOND

1. Pull the crown out to position 2.
2. Turn the crown to set the hour and minute hands.
3. When the crown is pushed back to the normal position, second hand begins to run.

# GANT

## TIME