


TACHYMETER SCALE

USER INSTRUCTIONS

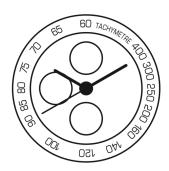

TACHYMETER

This feature is found on watches taht are made for speed measurement. The tachymeter scale is located on the case top ring or inner dial ring. It can be used to measure average units per hour (i.e. miles or kilometers), using the scale on the ring.

EXAMPLE OF USAGE

In arriving race, the par passes the first mile post when the second hand is at the 12:00 position (60 seconds mark). Commence measurement. At the 40 second mark, the car passes the second mile post, you will see the car travelled at a distance of one mile at an average speed of 90 mph.