# AREA WARE



# IMPORTANT INFORMATION

Before using this product, please carefully read this user manual and keep it for future reference.

### TECHNICAL DATA

This product is supplied with a G9 LED light source. The expected lifespan of the G9 LED light source is 25,000 hours (equal to 8-10 years of general use). When the light source reaches the end of its lifespan, the G9 LED bulb should be replaced.

Replaceable G9 LED bulb. Rotary dimmer knob.

Maximum supported wattage: 25W.

Designated voltage: 120V AC.

#### **ATTENTION**

The Doko Lamp uses soft geometry to elicit feelings of empathy

and playfulness. In keeping with Talbot & Yoon's TOON design

practice, it has an anthropomorphic form that looks as though

has a weighted ceramic base and features a dimmable, frosted

the lamp is carefully carrying its bulb on its shoulders. Made

with the highest quality standards and thoughtful details, it

glass bulb, brass knob and matching fabric cord.

Ensure that the power supply has clearly been turned OFF before installing this product. This product is designed for a voltage of 120V AC 60Hz. In some countries, electrical installation must be done by authorized electricians or contractors; please check with your local authority for guidance. Modifications of this product are strictly prohibited. Areaware accepts no responsibility for any products that have been modified or tampered with. The external flexible cable or cord of this product cannot be replaced. If the cord is damaged, the product should be replaced. Do not use this product in humid environments, such as near bathrooms, showers, or swimming pools. Do not allow water to enter the product. This product is designed for indoor use only.

## CARE AND MAINTENANCE

Clean the product with a soft damp cloth and gentle detergent, or a dry microfiber cloth. Do not use alcohol or any other solvents. Do not use abrasive or rough sponges. Ensure the power supply has been turned off before cleaning

#### ASSEMBLY AND USE INSTRUCTIONS

- Unpack all parts and make sure you have received all parts listed above. Insert the G9 LED bulb into the socket located at the top of the lamp base. Place the glass globe shade over the G9 LED bulb and gently turn clockwise onto the base of the lamp to secure. Do not use force for risk of breaking the the glass.
- 2. Plug the corded cable into the power supply.
- 3. To operate the lamp, turn the knob clockwise until it clicks on. Continue to turn the knob to reach full brightness. The brightness can be adjusted by turning the knob clockwise to make it brighter, and counter-clockwise to make it dimmer. Continue to turn counter-clockwise to turn it off.
- When the G9 LED bulb has reached its lifespan, it should be replaced. To replace the G9 LED bulb, first turn the lamp off and unplug the corded cable from the power source. Remove the glass globe shade by gently turning counter-clockwise and set aside. Pull the old G9 LED bulb out of the socket located at the top of the lamp base and replace with the new G9 LED bulb. Repeat steps 1-3 above.

Designed by Talbot & Yoon Manufactured for Areaware 232 Neilston St. Columbus, OH 43215 areaware.com @ Areaware All rights reserved.

Made in China

Fabriqué en Chine















