

BLAZEMASTER SERIES

BRIGGS & STRATTON PETROL BLAZEMASTER ELECTRIC START SETUP

All Blazemaster Electric start pumps come with a positive and a negative lead, both are one metre long.

Be careful not to connect the battery in reverse polarity, as this will short circuit the battery charging system. Always connect the positive (+) battery cable to the battery terminal before connecting the negative (-) battery cable, so your tools cannot cause a short circuit if they touch a grounded part while tightening the positive (+) battery cable end.

WARNING

- A battery can explode if you do not follow the correct procedure, seriously injuring anyone nearby.
- Keep all sparks, open flames, and smoking materials away from the battery.

WARNING

- The battery contains sulfuric acid (electrolyte), which is highly corrosive and poisonous.
- Getting electrolyte in your eyes or on your skin can cause serious burns.
- Wear protective clothing and eye protection when working near the battery.
- KEEP CHILDREN AWAY FROM THE BATTERY.

Recommended Battery

5HP 6HP	12 V – 14 Ah-12 V – 30 Ah
10HP	12 V – 18 Ah-12 V – 30 Ah

WARNING

Battery posts, terminals, and related accessories contain lead and lead compounds. Wash hands after handling.

1. Connect the battery positive (+) cable to the starter solenoid terminal as shown.
2. Connect the battery negative (-) cable to an engine mounting bolt, frame bolt, or other good engine ground connection.
3. Connect the battery positive (+) cable to the battery positive (+) terminal as shown.
4. Connect the battery (-) cable to the battery negative (-) terminal as shown.
5. Coat the terminals and cable ends with grease.

