

peachtree audio

Wireless Music System



User Manual



Congratulations

Congratulations on your Peachtree Audio deepblue purchase. We recommend that you read this manually thoroughly so that you can fully utilize this exciting product. Please keep it for your records.

Package Content

- | | | | |
|---|-----|-------------------------|-----|
| • Main Unit | × 1 | • Detachable power cord | × 1 |
| • Remote control function
with battery type CR2025
(included) | × 1 | • 3.5 mm AUX IN cable | × 1 |
| | | • Instruction Manual | × 1 |

Features

- 3.5 mm AUX IN jack to connect your MP3 player
- Bluetooth® enabled to wirelessly play your music
- Full function remote control

Safety Precaution

Read, keep and follow these instructions.

Heed all warnings on the product and in the instruction manual. For your safety, read and follow this manual carefully to ensure proper use of the product and avoid any danger or physical damage.

- Place the unit on a flat surface and ventilated condition. The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, tablecloths, curtains, etc. to avoid overheating and malfunction.

- No naked flame sources, such as lighted candles, should be placed on the apparatus.
- Keep the appliance away from rain and any moisture. Do not place the unit in moist and humid conditions, which could lead to malfunction.
- When the unit is suddenly moved from a cold environment to a warm one, if moisture forms inside it, it may not operate properly. To correct this problem wait about one hour for the moisture to evaporate.
- The apparatus shall not be exposed to dripping or splashing, no objects filled with liquids, such as vases, shall be placed on the apparatus.
- Do not expose the unit under direct sunlight or nearby objects that radiate heat to avoid damaging the unit.
- The apparatus should be used in moderate climate.
- The plug of the appliance shall remain readily operable.
- Do not pull on the connection cord, but rather on the plug, to separate the appliance from the mains.
- The On / Off button does not completely isolate the product from the power supply. To disconnect the product from the mains power supply, you must unplug the power cord.
- Pull out the mains plug if the appliance is not to be used over a longer period of time.
- Disconnect the main plug during thunderstorms.

Servicing - Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage. Refer all servicing to qualified service personnel.

Damage Requiring Service - Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- When the power-supply cord or plug is damaged.
- If liquid has been spilled, or objects have fallen into the product. If the product has been exposed to rain or water.

- If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as improper adjustment may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
- If the product has been dropped or damaged in any way.

 
WARNINGS

- Batteries are to be inserted with the correct polarity.
- Never use batteries that show signs of electrolyte leaks or cracking.
- Never dispose of used batteries in an open fire, risk of explosion.
- Keep batteries out of reach of children.
- Never short circuit battery terminals.
- Exhausted batteries are to be removed from the product.
- Remove batteries from the appliance before disposing of it at the end of its service life, or during long periods of non-use.
- Do not try to open the batteries.
- Batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.
- Ensure the battery compartment panel is secure.
- Danger of explosion if battery is incorrectly replaced.
- Replace only with the same or equivalent type.
- Do not charge non-rechargeable batteries.

IMPORTANT

- When replacing used batteries, please comply with applicable regulation relating to their disposal.
- Please return them to a suitable collection facility for environmentally friendly disposal.

This Transmitter must be installed to provide a separation distance of at least 20 cm from all persons.

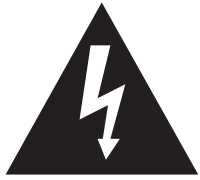

The lightning flash symbol within an equilateral triangle is intended to alert the user to the presence of un-insulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

CAUTION
RISK OF
ELECTRIC SHOCK
DO NOT OPEN

WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK), NO USER SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

For indoor use only.

 
This is CLASS II apparatus with double insulation, and no protective earth provided.

Technical Specifications


- Power supply: AC 100–240V, 50/60Hz
- Battery for remote control (provided) : 3V (1 × CR2025)
- Power consumption: 140W
- Output power: 240W max.
- Standby mode consumption: 0.45W
- Bluetooth® effective distance: 10 meters open air
- AUX IN jack: 3.5mm
- Bluetooth version: V2.1 +EDR

Installation and Maintenance


TOP PANEL

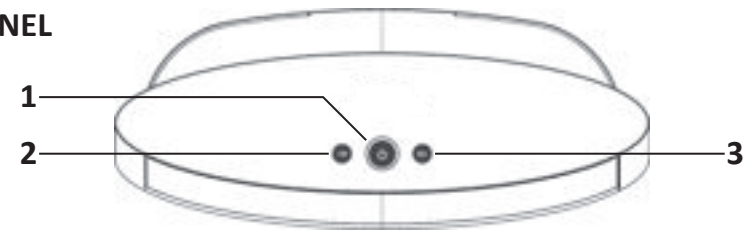

FRONT PANEL

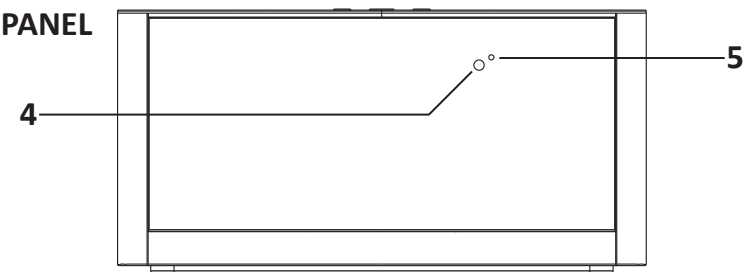 


REAR PANEL

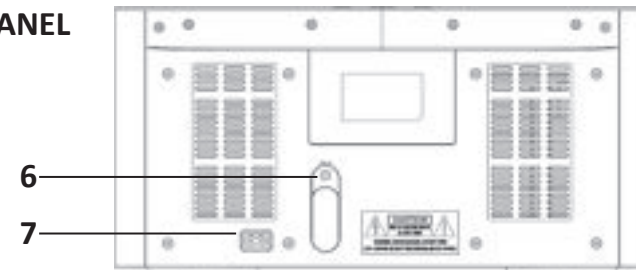 


1. Power / Pairing / Function
2. (Volume down)
3. (Volume up)
4. AUX (Green) / Bluetooth® (Blue) / Standby (Red) indicator
5. Remote sensor
6. **AUX IN** jack
7. AC Socket

 REMOTE CONTROL

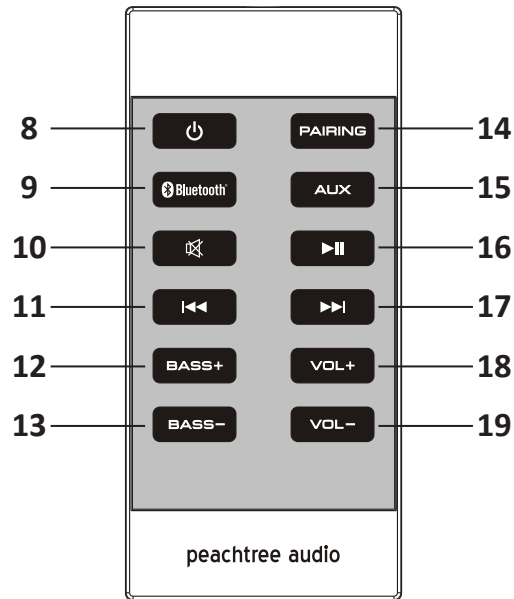

8. Power
9. Bluetooth® switch
10. Mute
11. Previous
12. Bass+
13. Bass-
14. PAIRING
15. AUX switch
16. Play/Pause
17. Next
18. VOL+ (Volume up)
19. VOL- (Volume down)

 REMOTE CONTROL BATTERY

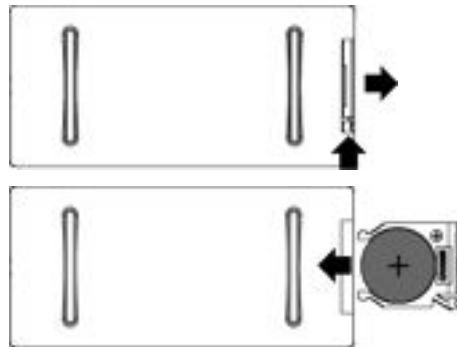

1. Slide and hold the battery release tab in the direction of the arrow.
2. Pull out the battery holder and remove the old battery.
3. Replace with a new battery (CR2025).
4. Insert the battery holder back into the remote control.

Operation

To power the player ON:

1. Plug AC cord into AC jack, and plug into a live AC wall outlet.
2. Press the [Power / Pairing / Function] button on the top panel or the [Power] button on the remote control to switch the player to ON mode.
3. Press and hold the [Power / Pairing / Function] button on the top panel for 1 to 5 seconds or press the [Power] button on the remote control to switch the player to Standby mode.

Note: To save power, the player will switch to economic standby mode when the speaker is idle for 12 hours.

Using Bluetooth® Function: Paring Your Device

Before your start:

Your Bluetooth device (cellphone, MP3 player, computer, etc.) must support the A2DP Bluetooth® profile (Commonly known as stereo audio profile) to work with the player. Many of the latest mobile phones and PCs with built-in Bluetooth® functionality will support this profile. For accurate information about your product, please refer to your Bluetooth® device's user manual for details on the Bluetooth® profiles it supports and on how to set the device's Bluetooth pairing /searching /setup mode.

Pairing your Bluetooth® device with the player

1. Press and hold the [Power / Pairing / Function] button on the top panel for 5 seconds or the [PAIRING] button on the remote control for 2 seconds at ON mode until blue light flashes slowly to begin pairing operation.

Please Note: Maximum broadcast distance for Bluetooth in open space is typically 33 feet. Walls and other obstructions may reduce this distance significantly

LED Status:

- Flashing quickly – No device paired
- Flashing Slowly – Device pairing
- Steady ON – Device paired


***Once the device is paired the blue light will turn off after 15 seconds**

2. Activate Bluetooth® on your device according to the device's user manual to link to the player. Typically, Bluetooth® controls are found on the device's tools or settings menu. Turn on Bluetooth® connectivity and make your device "discoverable".
3. Search the device name "Peachtree BT" on your Bluetooth® device listed and select it as your audio speaker.
4. Once paired with a device, the Blue light will stop flashing and glow steadily. A beep sound will also indicate that the connection is established.
5. Pairing remains intact even when the player or the Bluetooth® device is powered off or is taken out of link range. The player will auto link with the last linked device when that device is in range.

Note: Connecting to a Bluetooth® device may take up to 5 minutes. If the pairing is unsuccessful, re-pair your Bluetooth® device with the player and repeat the above steps.

Pairing your other Bluetooth® device










Previously Paired Devices:

To restart the current connection from player for select the other Bluetooth® device, press and hold the [ **Power / Pairing / Function**] button on the top panel for 5 seconds or the [**PAIRING**] button on the remote control for 2 seconds and repeat the above steps for pairing your other Bluetooth®.

Phone Calls During Bluetooth® Connection


1. If you are using a smartphone as your source the audio playing will be interrupted when there is an incoming call or when the user makes a call.
2. The audio will continue to play where it stopped once the call is finished.

 
Playing Bluetooth® Music

1. Once your device and the player are linked you can start to play Bluetooth® music through the player.
2. Turn on the player and press the [ **Power / Pairing / Function**] button on the top panel or the [**Bluetooth®**] button on the remote control to select the Bluetooth® mode, Blue light indicates for Bluetooth® mode.
3. Press the [] button on the remote control to play your Bluetooth®-enable device.
NOTE: Depending on the Bluetooth® device you are using, you may need to manually go into media player mode on your device to control all the functions.
4. Press the [] button on the remote control to skip the next track.
5. Press the [] button on the remote control to skip back to the beginning of the track currently play. Press the button again immediately to skip the previous track.
6. Press the [] button on the remote control again to pause play; Press again to resume it.
7. Press the [ / ] button on the top panel or [ / ] on remote control to adjust the system volume.

Note: Please remember to turn off Bluetooth® device manually.

Line in connection

1. Connect a sound source with a Line or headphone analogue output to play through your player as below hookup diagram shown.
2. Press the [ **Power / Pairing / Function**] button on the top panel or press the [**AUX**] button on the remote control to select the AUX mode. Green light indicates AUX Mode also.
3. Set your personal audio player/computer to PLAY.

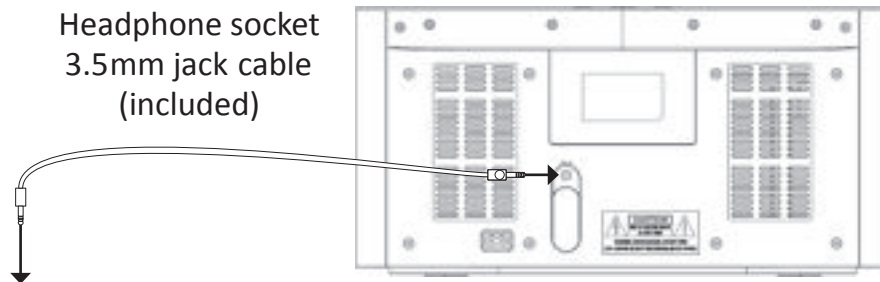


- iPhone /iPad/iPod models
- MP3 players
- CD walkman players
- Tape walkman players
- Personal computers or laptops

Note: Due to the different audio sources, the input level may vary at maximum volume output level. Therefore, if the unit randomly stops playing the music or becomes distorted, move the volume level to minimum and wait for a while. The user can try to move up the volume level again and the unit will play at normal operation again.

***The green (aux) light will turn off after 15 seconds**

Troubleshooting

PROBLEM	SOLUTION
There is no power to the player	Ensure that the Power Switch of wall socket is physically set to the ON position.
	Ensure that the AC plug is securely connected to the player and proper wall outlet.
Trouble pairing device/computer with the player	Make sure you have the latest firmware for your iPhone®/iPad®/iPod®.
	Make sure your device is working properly. Check your device's manual for details on Bluetooth pairing and linking.
	Make sure your device supports the A2DP and AVRCP Bluetooth® profiles before linking /pairing. The player defaults to the last linked device, so a new device may need to be linked by press and hold the [ Power / Pairing / Function] button for pairing other device.

iPod®, iPhone®, and iPad® are trademarks of Apple Inc., registered in the U.S. and other countries.

Recycling

This product bears the selective sorting symbol for Waste electrical and electronic equipment (WEEE). This means that this product must be handled pursuant to European directive 2002/96/EC in order to be recycled or dismantled to minimize its impact on the environment. User has the choice to give his product to a competent recycling organization or to the retailer when he buys a new electrical or electronic equipment.

For further information, please contact your local or regional authorities.
Net weight: 6.3kg

WARRANTY : 1 year parts and labor when used under normal conditions . Product abuse is not covered under our warranty. Please contact Peachtree Audio at 704.391.9337 or email us at service@peachtreeaudio.com with any questions

Additional Information

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna;
- Increase the separation between the equipment and the receiver;
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected;
- Consult the dealer or an experienced radio/TV technician for additional suggestions.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Where shielded interface cables have been provided with the product or specified additional components or accessories elsewhere defined to be used with the installation of the product, they must be used in order to ensure compliance with FCC regulation.

This Class B digital apparatus complies with Canadian ICES-003.

Peachtree Audio
2405 120th Avenue NE
Bellevue, WA 98005
704.391.9337
www.peachtreeaudio.com

Service: 704.391.9337

FCC ID: VWPKW-B25BT

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc., and any use of such marks by Signal Path International is under license.



