

# LINOVISION

## IOT-C502

### User Guide



## Safety Precautions

Linovision will not shoulder responsibility for any loss or damage resulting from not following the instructions of this operating guide.

- ❖ The device must not be remodeled in any way.
- ❖ Do not place the device close to objects with naked flames.
- ❖ Do not place the device where the temperature is below/above the operating range.
- ❖ Make sure electronic components do not drop out of the enclosure while opening.
- ❖ When installing the battery, please install it accurately, and do not install the reverse or wrong model.
- ❖ The device must never be subjected to shocks or impacts.


## Declaration of Conformity

IOT-C502 is in conformity with the essential requirements and other relevant provisions of the CE, FCC, and RoHS.



© Hangzhou Linovision Co., Ltd.

All rights reserved.

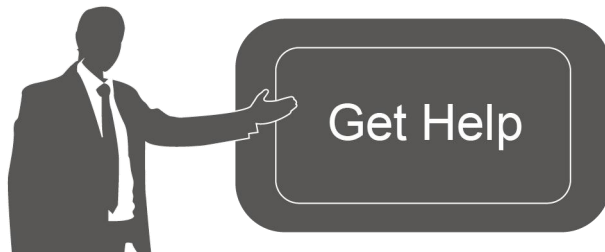

For assistance, please contact

Linovision technical support:

Email: [sales@linovision.com](mailto:sales@linovision.com)

Tel: +86 571-8670 8175

Website: [www.linovision.com](http://www.linovision.com)

# Contents

1. Product Introduction.....	4
1.1 Overview.....	4
1.2 Features.....	4
2. Hardware Introduction.....	4
2.1 Packing List.....	4
2.2 Hardware Overview.....	5
2.3 Internal Interfaces.....	5
2.4 Dimensions(mm).....	6
3. Hardware Installation.....	6
3.1 Hardware Switch.....	6
3.2 IOT-C502 Installation.....	7
4. Operation Guide.....	8
4.1 Log in the ToolBox.....	8
4.1.1 NFC Configuration.....	8
4.2 LoRaWAN Settings.....	10
4.3 Interface Settings.....	12
4.3.1 RS485 Settings.....	13
4.3.2 RS232 Settings.....	16
4.3.3 GPIO Settings.....	16
4.3.4 AI Settings.....	18
4.4 Maintenance.....	20
4.4.1 Upgrade.....	20
4.4.2 Backup.....	20
4.4.3 Reset to Factory Default.....	21
Please select one of following methods to reset device:.....	21
5. Linovision IoT Cloud Management.....	22
5.1 Add a Linovision Gateway.....	23
5.2 Add IOT-C502 to Linovision IoT Cloud.....	24
6. Device Payload.....	25

# 1. Product Introduction

## 1.1 Overview

IOT-C502 is a LoRaWAN® controller used for data acquisition from multiple sensors. It contains different I/O interfaces such as analog inputs, digital inputs, digital outputs, serial ports and so on, which simplify the deployment and replacement of LoRaWAN® networks.


IOT-C502 can be easily and quickly configured by NFC. For outdoor applications, it provides solar or built-in battery power supply and is equipped with IP67-rated enclosure and M12 connectors to protect itself from water and dust in harsh environments.

## 1.2 Features

- Easy to connect with multiple wired sensors through GPIO/AI/RS232/RS485 interfaces
- Long transmission distance up to 11km with line of sight
- Waterproof design including IP67 case and M12 connectors
- Solar powered and built-in battery optional
- Quick wireless configuration via NFC
- Compliant with standard LoRaWAN® gateways and network servers
- Quick and easy management with Linovision IoT Cloud solution

# 2. Hardware Introduction


## 2.1 Packing List

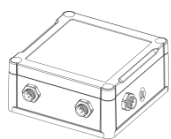

1 × U50x Device



2 × Data Cables

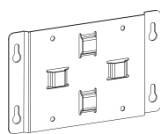


1 × Mounting  
Bracket



Wall Mounting  
Kits



1 × Warranty  
Card

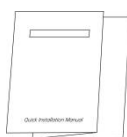

1 × Quick Guide




2 × Hose Clamps  
(Optional)




If any of the above items is missing or damaged, please contact your sales Representative.

## 2.2 Hardware Overview

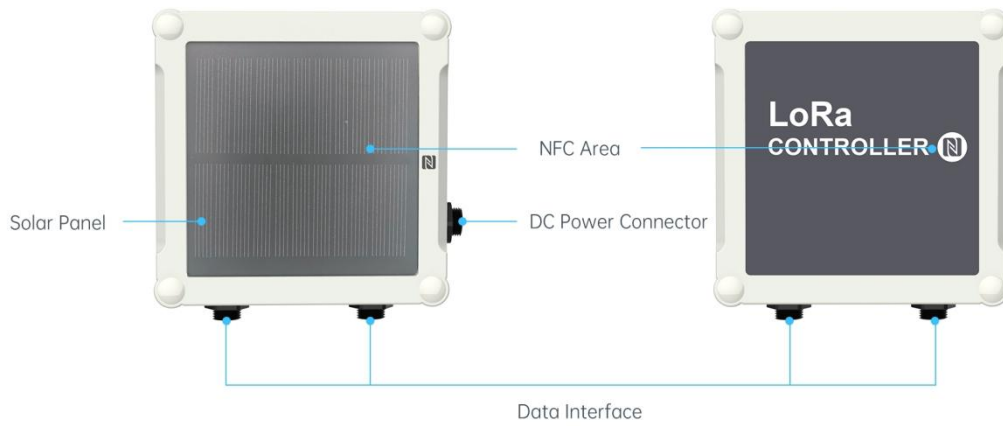

## 2.3 Internal Interfaces

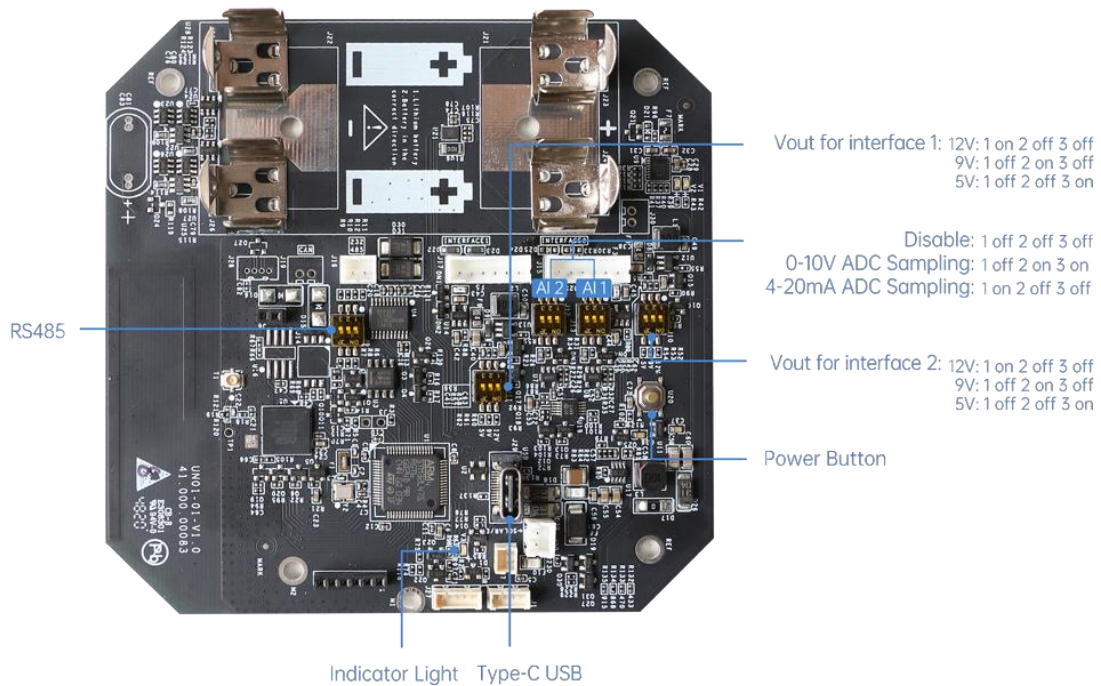

### DIP Switch:

Interface	DIP Switch
Power Output	12V: 1 on 2 off 3 off
	9V: 1 off 2 on 3 off
	5V: 1 of 2 off 3 on
Analog Input	4-20mA ADC: 1 off 2 on 3 off
	0-10V ADC: 1 on 2 off 3 off

RS485	Add 120 $\Omega$ resistor between A and B: 1 on 2 off 3 off Add 1k $\Omega$ pull-up resistor on A: 1 off 2 on 3 off Add 1k $\Omega$ pull-down resistor on B: 1 of 2 off 3 on
-------	--


**Note:**

- 1) Analog inputs are set to 4-20mA by default, power outputs are set to 12V by default.
- 2) Power output on interface 1 is used for powering serial port devices, power output on interface 2 is used for powering analog devices.

**Power Button:**

Function	Action	LED Indication
Turn On	Press and hold the button for more than 3s.	Off → <b>Static Green</b>
Turn Off	Press and hold the button for more than 3s.	<b>Static Green</b> -> Off
Reset	Press and hold the button for more than 10s. <b>Note:</b> IOT-C502 will automatically power on after reset.	Blink 3 times.
Check On/Off Status	Quickly press the power button.	<b>Light On:</b> Device is on.
		<b>Light Off:</b> Device is off.

**2.4 Dimensions(mm)**

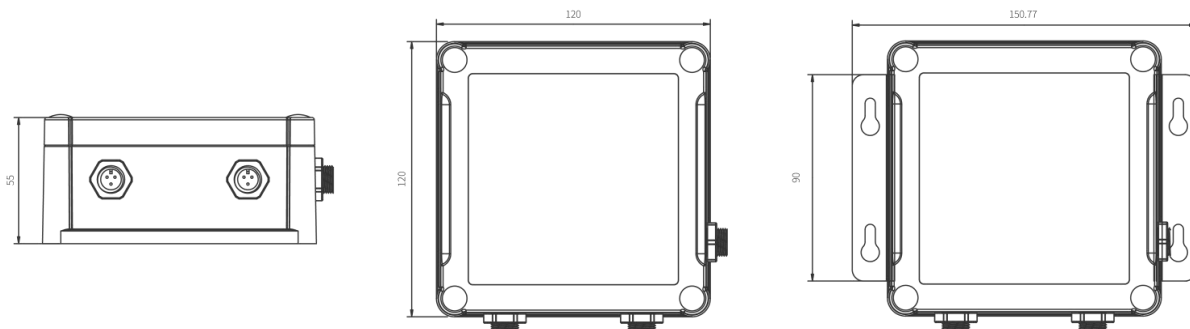


**3. Hardware Installation**

**3.1 Hardware Switch**

When using the analog input or power output of IOT-C502, please follow the steps to switch the working mode of hardware interface:

1. Remove the screw caps and take off the roof cover.
2. Change DIP switches that are related analog inputs and power outputs as shown in Section 2.3.
3. Put back the roof cover and screw the screws.

**Note:** Please turn off the device before changing DIP switches.

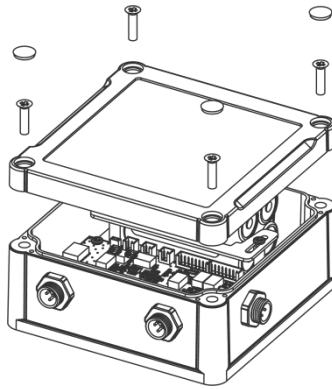


## 3.2 IOT-C502 Installation

### Wall Mounting

Make sure you have wall mounting bracket, bracket mounting screws, wall plugs, wall mounting screws and other required tools.

#### Steps:


1. Mount the enclosure to the mounting bracket with the bracket mounting screws.

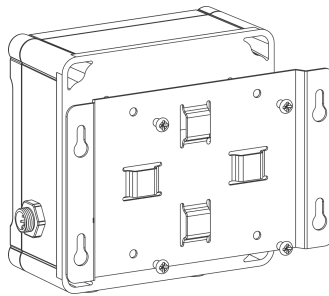

2. Align the mounting bracket horizontally to the desired position on the wall, use a marker pen to mark four mounting holes on the wall, and then remove the mounting bracket from the wall.

**Note:** The connecting lines of adjacent points are at right angles.

3. Drill the four holes by using your drill with a 6 mm drill bit on the positions you marked previously on the wall.
4. Insert four wall plugs into the holes respectively.
5. Mount the mounting bracket horizontally to the wall by fixing the wall mounting screws into the wall plugs.

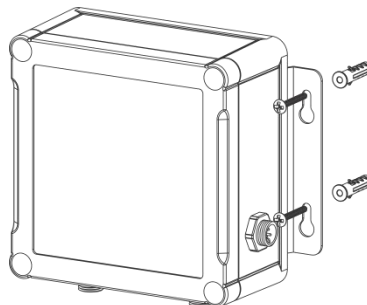


## Pole Mounting

Make sure you have wall mounting bracket, bracket mounting screws, hose clamp and other required tools.

### Steps:


1. Mount the enclosure to the mounting bracket with the bracket mounting screws.

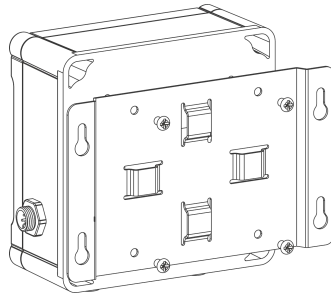

2. Loosen the hose clamp by turning the locking mechanism counter-clockwise.



3. Straighten out the hose clamp and slide it through the rectangular holes in the mounting bracket, wrap the hose clamp around the pole.
4. Use a screwdriver to tighten the locking mechanism by turning it clockwise.

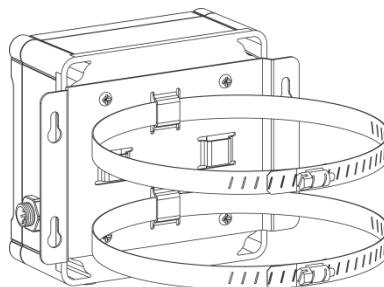

## 4. Operation Guide

### 4.1 Log in the ToolBox

IOT-C502 can be monitored and configured via ToolBox APP or ToolBox software. Please select one of them to complete configuration.

#### 4.1.1 NFC Configuration

##### Preparation:


- Smartphone (NFC supported)



- Toolbox APP: V1.3.9 and above


**Steps:**

1. download and install from Google Play or Apple Store.
2. Enable NFC on the smartphone and open "ToolBox" APP.
3. Attach the smartphone with NFC area to the device to read basic information. In order to protect the security of devices, password validation is required when configuring via unused phone . Default password is **123456**.

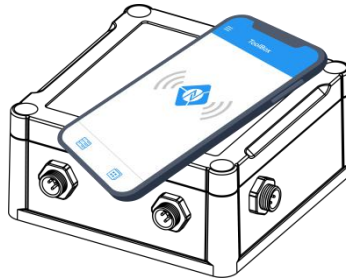

**Note:**

- 1) Ensure the location of smartphone NFC area and it's recommended to take off phone case.
  - 2) If the smartphone fails to read/write configurations via NFC, keep the phone away and back to try again.
4. Basic information and settings of devices will be shown on Toolbox if it's recognized successfully. You can turn on/off the device by tapping the button on the Device Status.

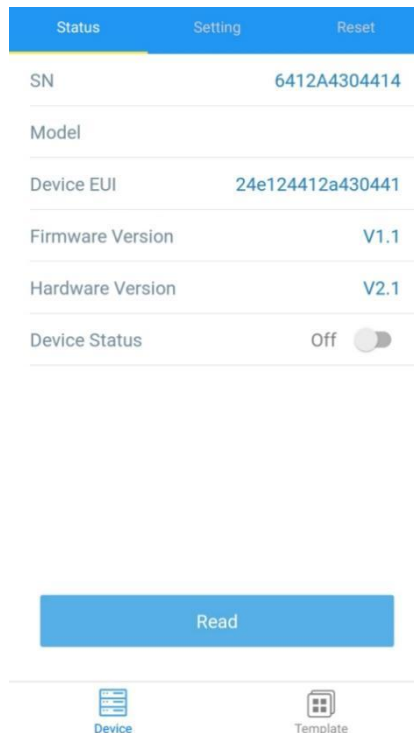

5. Tap "Read" button to check current status of device.

6. Tap "Write" button to write all your settings to the device.

## 4.2 LoRaWAN Settings

LoRaWAN settings is used for configuring the transmission parameters in LoRaWAN® network.

Step 1: Go to "**LoRaWAN -> Basic**" of ToolBox software or "**Setting->LoRaWAN Settings**" for ToolBox APP to configure join type, App EUI, App Key and other information. You can also keep all settings by default.

Device EUI	<input type="text" value="24E124412A430441"/>
App EUI	<input type="text" value="24E124C0002A0001"/>
Application Port	<input type="text" value="85"/>
Working Mode:	<input type="text" value="Class A"/>
Join Type	<input type="text" value="OTAA"/>
Application Key	<input type="text" value="*****"/>
Spread Factor	<input type="text" value="SF10-DR2"/>
Confirmed Mode	<input type="checkbox"/>
Rejoin Mode	<input checked="" type="checkbox"/>
Set the number of packets sent	<input type="text" value="32"/> packets
ADR Mode	<input checked="" type="checkbox"/>
TXPower	<input type="text" value="TXPower0-22 dBm"/>


Parameters	Description
Device EUI	Unique ID of the device which can also be found on the label.
App EUI	Default App EUI is 24E124C0002A001.
Application Port	The port used for sending and receiving data, default port is 85. <b>Note:</b> RS232 data will be transmitted via another port.
Working Mode	IOT-C502: Class A.
Join Type	OTAA and ABP mode are available.
Application Key	Appkey for OTAA mode, default is 5572404C696E6B4C6F52613230313823.
Device Address	DevAddr for ABP mode, default is the 5 <sup>th</sup> to 12 <sup>th</sup> digits of SN.
Network Session Key	Nwkskey for ABP mode, default is 5572404C696E6B4C6F52613230313823.
Application Session Key	Appskey for ABP mode, default is 5572404C696E6B4C6F52613230313823.
Spread Factor	If ADR is disabled, the device will send data via this spread factor.
Confirmed Mode	If the device does not receive ACK packet from network server, it will resend

	data 3 times at most.
Rejoin Mode	Reporting interval $\leq$ 30 mins: device will send specific mounts of LoRaMAC packets to check connection status every 30 mins; If no reply after specific packets, the device will re-join. Reporting interval $>$ 30 mins: device will send specific mounts of LoRaMAC packets every to check connection status every reporting interval; If no reply after specific packets, the device will re-join.
ADR Mode	Allow network server to adjust datarate of the device.
Tx Power	Based on LoRaWAN <sup>®</sup> regional parameter document.

**Note:**

- 1) Please contact sales for device EUI list if there are many units.
- 2) Please contact sales if you need random App keys before purchase.
- 3) Select OTAA mode if you use Milesight IoT cloud to manage devices.
- 4) Only OTAA mode supports rejoin mode.

Step 2: Go to “**LoRaWAN -> Channel**” of ToolBox software or “**Setting->LoRaWAN Settings**” for ToolBox APP to select supported frequency and select channels to send uplinks. Make sure the channels match the LoRaWAN<sup>®</sup> gateway.

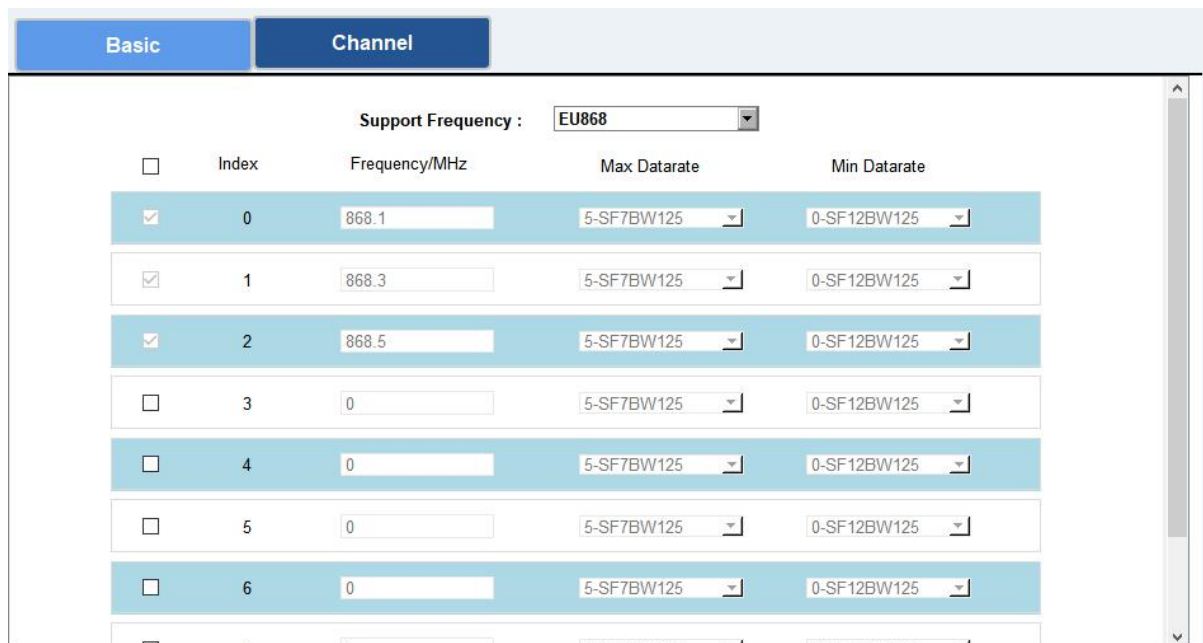

If frequency is one of CN470/AU915/US915, you can enter the index of the channel that you want to enable in the input box, making them separated by commas.

**Examples:**

- 1, 40: Enabling Channel 1 and Channel 40
- 1-40: Enabling Channel 1 to Channel 40

1-40, 60: Enabling Channel 1 to Channel 40 and Channel 60

All: Enabling all channels

Null: Indicates that all channels are disabled

Support Frequency :

Enabled Channel Index:

Channel Index	Frequency/MHz	Channel Spacing/MHz	BW/kHz
0 - 15	915.2 - 918.2	0.2	125
16 - 31	918.4 - 921.4	0.2	125
32 - 47	921.6 - 924.6	0.2	125
48 - 63	924.8 - 927.8	0.2	125
64 - 71	915.9 - 927.1	1.6	500

**Note:**

For -868M model, default frequency is EU868;

For -915M model, default frequency is AU915.

### 4.3 Interface Settings

IOT-C502 series support data collection by multiple interfaces including GPIOs, analog inputs and serial ports. Besides, it can also power the terminal devices by power output interfaces. Basic settings are as follows:

Step 1: Go to "**General->Basic**" of ToolBox software or "**Setting->General Settings**" page to change the reporting interval.

Reporting Interval  s

The device returns to the power supply state

Interface 1 (Pin2) 3V3 Output

Interface 2 (Pin2) 3V3 Output

Change Password

Parameters	Description
Reporting Interval	Reporting interval of transmitting data to network server.Default: 600s <b>Note:</b> RS232 transmission will not follow the reporting interval.

The device returns to the power supply state	If the device loses power and return to power supply, the device will be on or off according to this parameter.
Interface 1/2 3V3 Output	Enable 3.3V power output. After enabled, the power output will supply power <b>continuously</b> .
Change Password	Change the password for Toolbox APP or software to read/write this device.

Step 2: Go to corresponding pages to change GPIO, analog input or serial port settings as following chapters.

### 4.3.1 RS485 Settings


Step 1: Connect RS485 device to RS485 port on interface 1. If you need IOT-C502 to power this device, please connect the power cable to 5V/9V/12V power output on interface 1.

Step 2: Go to "**General -> Serial**" of ToolBox software or "**Setting->Serial Setting**" to enable RS485 and configure serial port settings. Serial port settings should be **same** as RS485 terminal devices.

Enable	<input checked="" type="checkbox"/>
Interface Type	RS485 (Modbus Master) ▼
Interface 1 (Pin1) 5/9/12V Output	<input type="checkbox"/>
Baud Rate	9600 ▼
Data Bit	8 bits ▼
Stop Bit	1 bits ▼
Parity	None ▼
Execution Interval	50 ms
Max Resp Time	500 ms
Max Retry Times	3
Modbus RS485 bridge LoRaWAN	<input type="checkbox"/> ?

Parameters	Description
Interface 1/(Pin 1) 5V/9V/12V	Enable 5V/9V/12V power output of interface 1 to supply power to RS485 terminal devices. <b>Note:</b> Power output is 12V by default and you can change DIP switches to change voltage.

Power Output Time Before Collect	UC500 will power the RS485 terminal devices for a period of time before collecting data for terminal device initialization.
Baud Rate	300/1200/2400/4800/9600/19200/38400/57600/115200 are available.
Data Bit	8 bit is available.
Stop Bit	1 bit/2 bit are available.
Parity	None, Odd and Even are available.
Execution Interval	The execution interval between each Modbus command.
Max Resp Time	The maximum response time that the IOT-C502 waits for the reply to the command. If it does not get a response after the max response time, it is determined that the command has timed out.
Max Retry Time	Set the maximum retry times after device fails to read data from RS485 terminal devices.
Modbus RS485 bridge LoRaWAN	If this mode is enabled, IOT-C502 will transparent Modbus RTU commands from network server to RS485 terminal devices and send Modbus reply originally back to network server. <b>Port:</b> Select from 2-84, 86-223.

Step 3: Click  to add Modbus channels, then save configurations.

#### Channel Settings

[Fetch](#)

Channel ID	Name	Slave ID	Address	Quantity	Type	Sign	Value
1	Temperature	1	0	1	Input Register(INT16)	<input type="checkbox"/>	

[Save](#)
Up to 16 channels

Parameters	Description
Channel ID	Select the channel ID you want to configure, 16 channels selectable.
Name	Customize the name to identify every Modbus channel.
Slave ID	Set Modbus slave ID of terminal device.
Address	The starting address for reading.
Quantity	Set read how many digits from starting address. It fixes to 1.
Type	Select data type of Modbus channels.
Sign	The tick indicates that the value has a plus or minus sign.

**Example:** If you configure as following picture, IOT-C502 will send Modbus read command to terminal device regularly: 01 03 00 00 00 01 84 0A

Channel ID	Name	Slave ID	Address	Quantity	Type	Sign	Decimal Place	Value
1	Temperature	1	0	1	Holding Register(INT16)	<input type="checkbox"/>	0	

Save Up to 16 channels

Step 4: For ToolBox software, click "Fetch" to check if IOT-C502 can read correct data from terminal devices. You can also click "Fetch" on the top of list to fetch all channel data.

Channel ID	Name	Slave ID	Address	Quantity	Type	Sign	Value
1	1	1	16	1	Input Register(INT16)	<input type="checkbox"/>	554 <input checked="" type="checkbox"/>
2	2	2	12	1	Holding Register(INT16)	<input type="checkbox"/>	
3	1	1	17	1	Input Register(INT16)	<input type="checkbox"/>	

**Note:** Please do not click "Fetch" frequently since response time to reply is differ for every terminal device.

For ToolBox APP,

a. Tap every Modbus channel, click "Collect" and attach smart phone to device to make device collect data.

←
Temperature

**\* Name**

Temperature

Slave ID - 1 +

Address - 0 +

Quantity 1

Type

Holding Register(INT16)

Sign

Value - Collect

b. Click "Fetch" and attach smart phone to make APP read the data. You can also tap "Collect All" and "Fetch All" to fetch all channel data.

### 4.3.2 RS232 Settings

Step 1: Connect RS232 device to RS232 port on interface 1. If you need IOT-C502 to power this device, please connect the power cable to 5V/9V/12V power output on interface 1.

Step 2: Go to "**General -> Serial**" of ToolBox software or "**Setting->Serial Setting**" to enable RS232 and configure serial port settings. Serial port settings should be the **same** as RS232 terminal devices.

Enable	<input checked="" type="checkbox"/>
Interface Type	RS232
Interface 1 (Pin1) 5/9/12V Output	<input type="checkbox"/>
Baud Rate	9600
Data Bit	8 bits
Stop Bit	1 bits
Parity	None
Port	86

Parameters	Description
Interface 1/(Pin 1) 5V/9V/12V	Enable 5V/9V/12V power output of interface 1 to supply power to RS232 terminal devices <b>continuously</b> . Only UC501 supports this feature. <b>Note:</b> Power output is 12V by default and you can change DIP switches to change voltage.
Baud Rate	300/1200/2400/4800/9600/19200/38400/57600/115200 are available.
Data Bit	8 bit is available.
Stop Bit	1 bit/2 bit are available.
Parity	None, Odd and Even are available.
Port	The port used for RS232 data transmission.

### 4.3.3 GPIO Settings

Step 1: Connect devices to GPIO ports on interface 1.

Step 2: Go to "**General -> GPIO**" of ToolBox software or "**Setting->GPIO Setting**" to enable GPIO port.



Interface Name	GPIO 1	
Enable	<input checked="" type="checkbox"/>	
Interface Type	Digital Input1 ▾	
Digital Input	?	Pull Down ▾
Status	_____	Fetch

Interface Name	GPIO 2	
Enable	<input checked="" type="checkbox"/>	
Interface Type	Digital Input2 ▾	
Digital Input	?	Pull Down ▾
Status	_____	Fetch

Save

Step 3: Select GPIO type according to your requirements.

- **Digital Input:** detect high or low status of devices;
- **Digital Output:** Send voltage signal to trigger devices;
- **Counter:** pulse counter.

### Digital Input:

Step 4: Select initial status of digital input. If pull up is selected, falling edge will be triggered; If pull down is selected, rising edge will be triggered.

Step 5: Click "Fetch" to check current status of digital input.

Interface Name	GPIO 1	
Enable	<input checked="" type="checkbox"/>	
Interface Type	Digital Input1 ▾	
Digital Input	?	Pull Down ▾
Status	Low	Fetch

### Digital Output:

Step 4: Click "Switch" to check if IOT-C502 can trigger devices by digital output.

Step 5: Click "Fetch" to check current status of digital output.

Interface Name: GPIO 1

Enable:

Interface Type: Digital Output 1

Status: Low  Fetch Switch

### Pulse Counter:

Step 4: Select initial status of digital input. If pull up is selected, falling edge will be triggered and increase 1; if pull down is selected, rising edge will be triggered and increase 1.

Step 5: Click "Fetch" to check current status of digital input.

Interface Name: GPIO 1

Enable:

Interface Type: Counter

Digital Input:  Pull Down

Digital Filter:

keep last value when power off:

Counter values: 0 Refresh Start Clear

Parameters	Description
Digital Input	Initial status of counter. Pull Down: Increase 1 when detecting rising edge Pull Up/None: Increase 1 when detecting falling edge
Digital Filter	It's recommended to enable when pulse period is greater than 250us.
Keep last value when power off	Keep counted values when device powers off.

Step 6: Click "Start" or "Stop" to make the device start/stop counting.

Step 7: Check current count values by clicking "Refresh".

Step 8: Click "Clear" to make the device count from 0.

#### Note:

- 1) IOT-C502 only starts counting when it detects 6 pulses from pulse devices;
- 2) IOT-C502 will send non-changable counting values if you do not click "Start".

### 4.3.4 AI Settings

Step 1: Connect analog device to analog input ports on interface 2. If you need IOT-C502 to power the analog device, connect the power cable of device to 5V/9V/12V power output on interface 2.

Step 2: Go to "General -> AI" of ToolBox software or "Setting->AI Setting" to enable analog input.

Interface 2 (Pin1) 5/9/12V Output	<input checked="" type="checkbox"/>	
Power Output Time Before Collect	<input type="text" value="0"/>	ms
Interface Name	Analog Input 1	
Enable	<input checked="" type="checkbox"/>	
Analog Input Signal Type	<input type="text" value="4-20 mA"/>	
Status	<input type="text" value=""/>	<input type="button" value="Fetch"/>
Interface Name	Analog Input 2	
Enable	<input checked="" type="checkbox"/>	
Analog Input Signal Type	<input type="text" value="0-10 V"/>	
Status	<input type="text" value=""/>	<input type="button" value="Fetch"/>

Step 3: Select analog input type according to analog device type.

**Note:** Ensure DIP switches has changed before changing "Analog Input Signal Type" to 0-10V.

Step 4: For ToolBox software, click "Fetch" to check if IOT-C502 can read correct data from analog devices.

Interface Name	Analog Input 1	
Enable	<input checked="" type="checkbox"/>	
Analog Input Signal Type	<input type="text" value="4-20 mA"/>	
Status	<input type="text" value="0.00 mA"/>	<input type="button" value="Fetch"/>
Interface Name	Analog Input 2	
Enable	<input checked="" type="checkbox"/>	
Analog Input Signal Type	<input type="text" value="0-10 V"/>	
Status	<input type="text" value="0.00 V"/>	<input checked="" type="button" value="Fetch"/>

For ToolBox APP,

- Click "Collect" and attach smart phone to device to make device collect data.
- Click "Fetch" and attach smart phone to make APP read the data.

Step 5: Enable "Interface 2(Pin 1) 5V/9V/12V" and configure "Power Output Time Before Collect", UC500 will power the analog devices for a period of time before collecting data.

Interface 2 (Pin1)   
5/9/12V Output

Power Output Time Before Collect  ms

## 4.4 Maintenance

### 4.4.1 Upgrade

IOT-C502 support upgrade locally or over the air only via ToolBox software.

Maintenance >

**Upgrade**    Backup and Reset

Model: UC501-470M

Firmware Version: 01.07

Hardware Version: 1.0

Domain: Beijing Server

FOTA:

Update Locally:

#### Upgrade Locally:

Step 1: Click "Browse" to import firmware from your computer.

Step 2: Click "Upgrade" to start the upgrade.

#### Upgrade Over the Air:

Step 1: Select the upgraded server according to your region and make sure your computer can access the Internet.

Step 2: Click "Up to date" to search for latest firmware of devices. If your firmware is latest version, Toolbox will prompt "Your device is up to date".

**Note:** Any operation on ToolBox is not allowed during upgrading, otherwise the upgrading will be interrupted, or even the device will break down.

### 4.4.2 Backup


IOT-C502 devices support configuration backup for easy and quick device configuration in bulk.

Backup is allowed only for devices with the same model and LoRa frequency band. Please select one of following methods to backup device:

### Via ToolBox Software

Step 1: Go to "Maintenance->Backup and Reset", click "Export" to save current configuration as json format backup file.


Step 2: Click "Browse" to select backup file, then click "Import" to import the configurations.

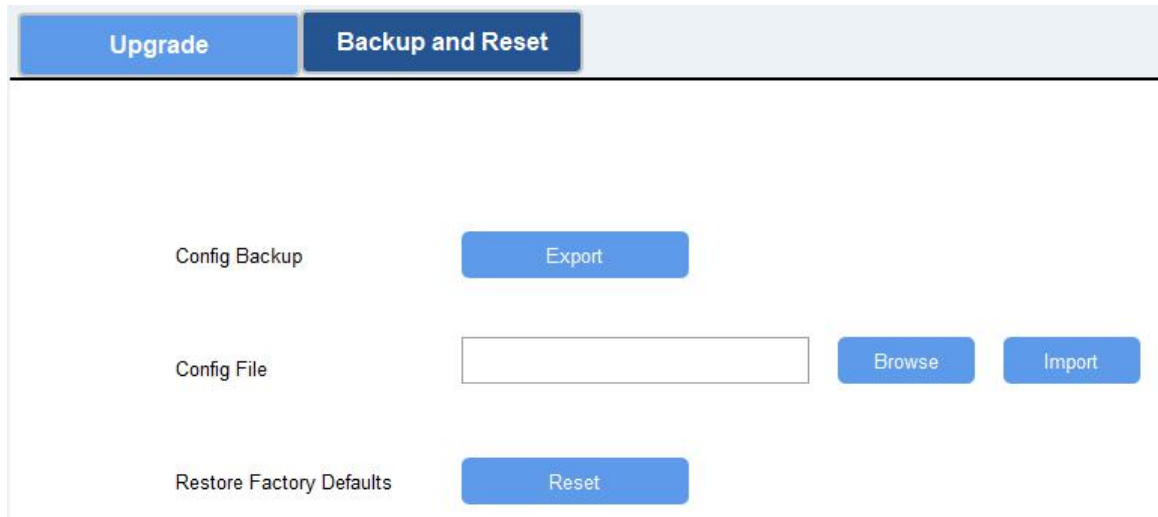

### Via ToolBox APP

Step 1: Go to "Template" page on the APP and save current settings as a template. You can also edit the template file.

Step 2: Select this template and attach to another device to write configuration.

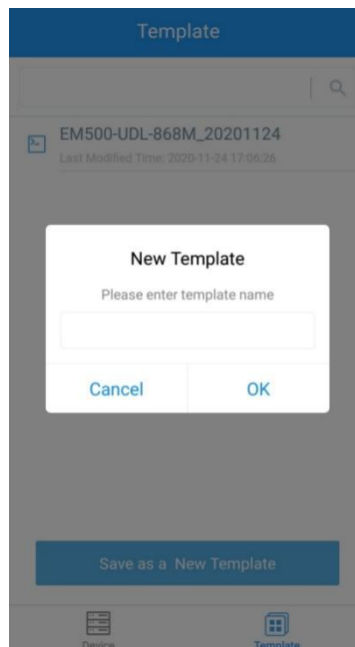


### 4.4.3 Reset to Factory Default


Please select one of following methods to reset device:

**Via Hardware:** Open the case of IOT-C502 and hold on power button more than 10s.

**Via ToolBox Software:** Go to "Maintenance->Backup and Reset" to click "Reset".

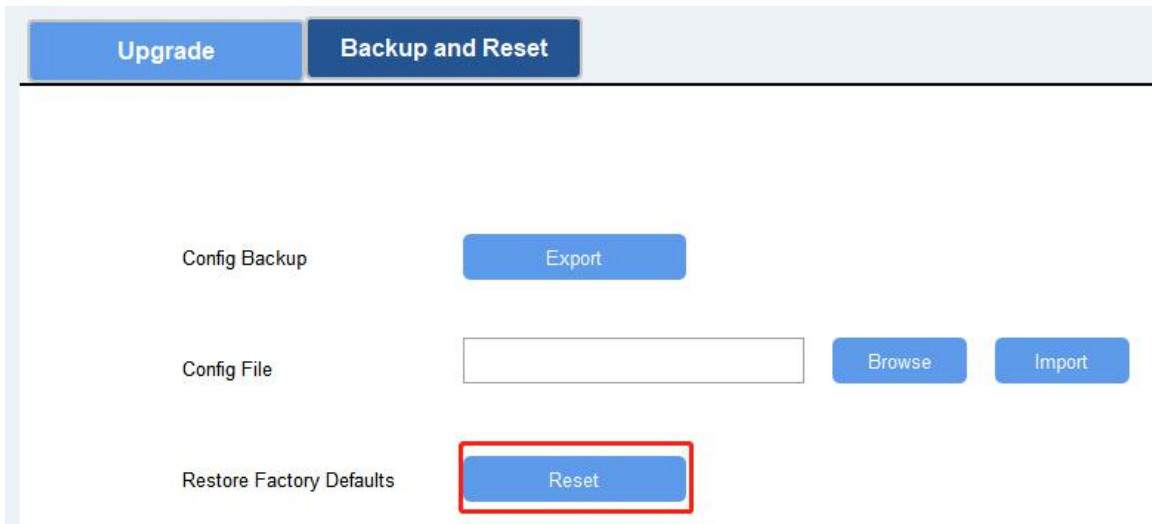

**Via Toolbox APP:** Go to "Device->Reset" to click "Reset", then attach smart phone with NFC area to IOT-C502 to complete reset.

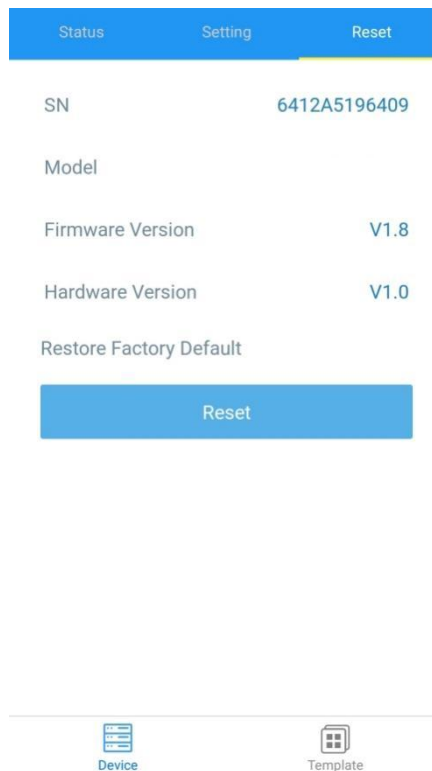

## 5. Linovision IoT Cloud Management


IOT-C502 can be managed by Linovision IoT Cloud platform. Linovision IoT cloud is a comprehensive platform that provides multiple services including device remote management and data visualization with the easiest operation procedures. Please register a Linovision IoT Cloud

account before operating following steps.

## 5.1 Add a Linovision Gateway

Step 1: Enable "Linovision" type network server and "Linovision IoT Cloud" mode in gateway web GUI.

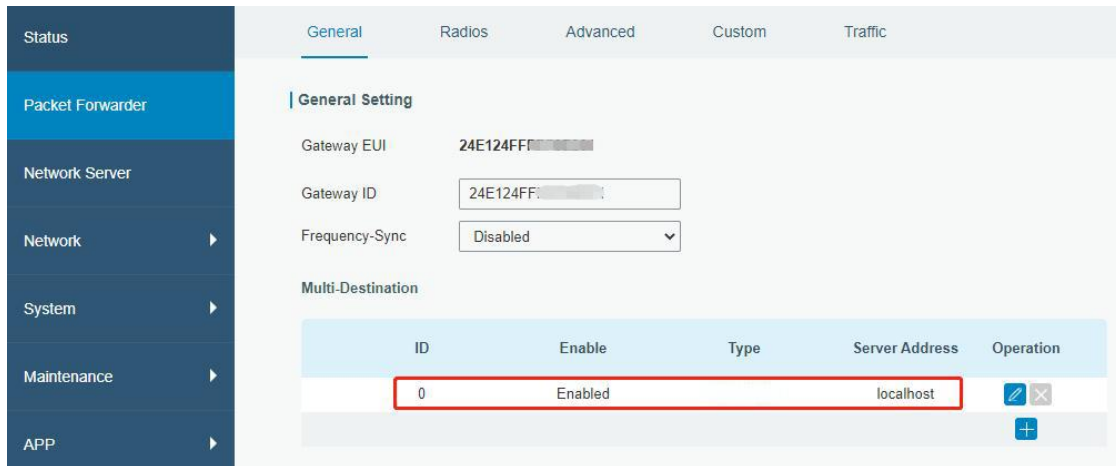

**Note:** Ensure gateway has accessed the Internet.




The screenshot shows the 'General' tab of the gateway configuration page. The left sidebar has 'Network Server' selected. The main content area is titled 'General Setting' and includes the following fields:

- Gateway EUI: 24E124FF[redacted]
- Gateway ID: 24E124FF[redacted]
- Frequency-Sync: Disabled

Below these fields is a 'Multi-Destination' table with the following data:

ID	Enable	Type	Server Address	Operation
0	Enabled		localhost	 

A red box highlights the '0' ID, 'Enabled' status, and 'localhost' server address in the table. A '+' button is visible at the bottom right of the table.

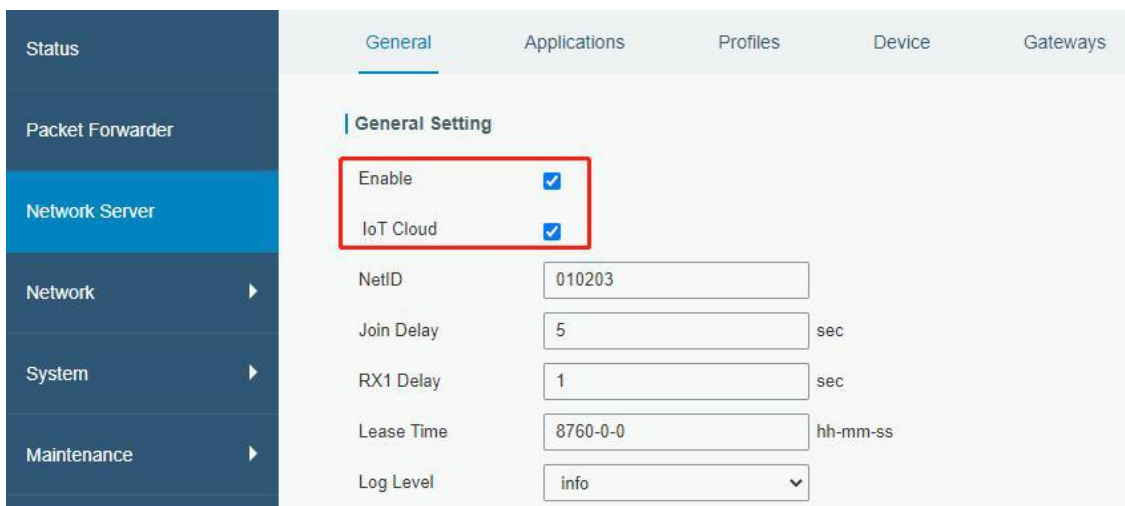


The screenshot shows the 'General' tab of the gateway configuration page. The left sidebar has 'Network Server' selected. The main content area is titled 'General Setting' and includes the following fields:


- Enable:
- IoT Cloud:
- NetID: 010203
- Join Delay: 5 sec
- RX1 Delay: 1 sec
- Lease Time: 8760-0-0 hh-mm-ss
- Log Level: info

A red box highlights the 'Enable' and 'IoT Cloud' checkboxes, both of which are checked.

Step 2: Go to "My Devices" page and click "+New Devices" to add gateway to Linovision IoT Cloud via SN. Gateway will be added under "Gateways" menu.

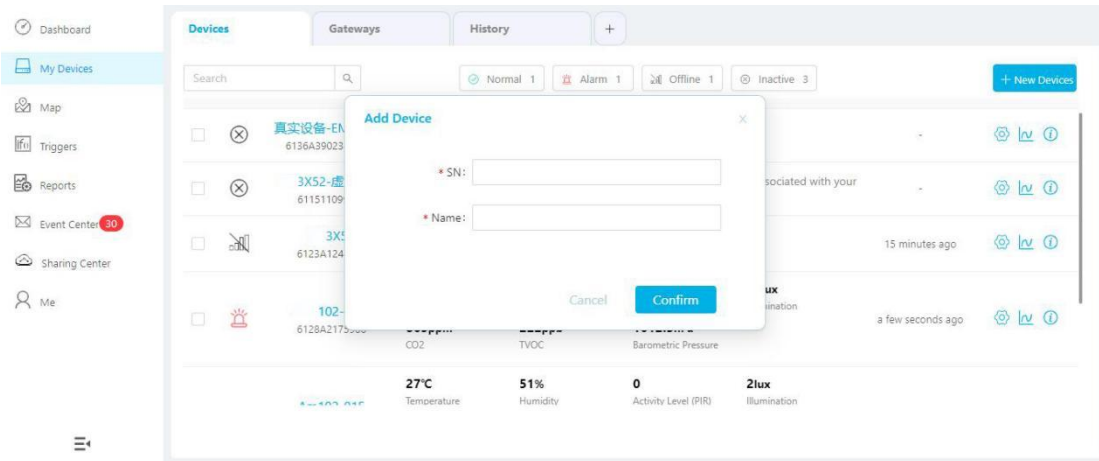


Step 3: Check if gateway is online in Linovision IoT Cloud.

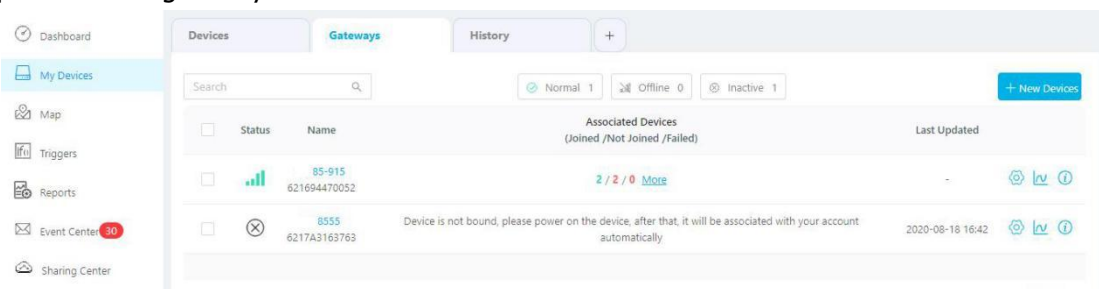


## 5.2 Add IOT-C502 to Linovision IoT Cloud

Step 1: Go to "My Devices" page and click "+New Devices". Fill in the SN of IOT-C502 and select associated gateway.

Step 2: After IOT-C502 is connected to Linovision IoT Cloud, click  to select used interfaces and customize the name, sign and formulas.

**Note:** Modbus channel settings should be the same as the configuration in Toolbox.



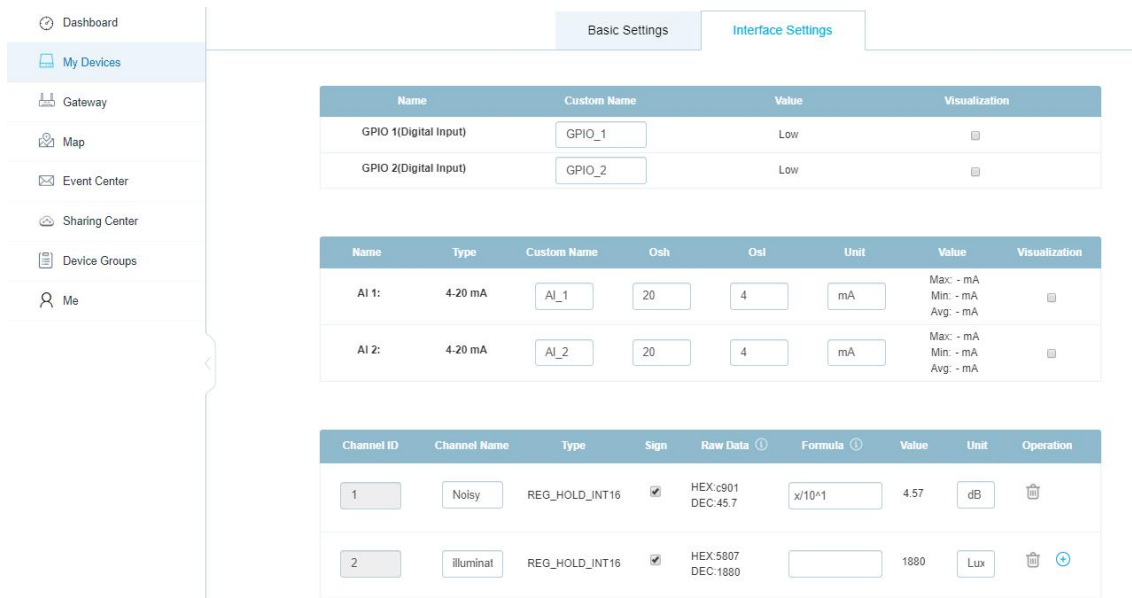

## 6. Device Payload

IOT-C502 Series use the standard Linovision IoT payload format based on IPSO. For decoders of Linovision IoT products please click here.

All data are based on following format(HEX):

Channel1	Type1	Data1	Channel2	Type2	Data2	Channel 3	...
1 Byte	1 Byte	N Bytes	1 Byte	1 Byte	M Bytes	1 Byte	...

### 6.1 Basic Information

IOT-C502 report basic information of device everytime joining the network.

Channel	Type	Data Example	Description
ff	01(Linovision Protocol Version)	01	V1
	08 ( Device SN )	64 12 a4 30 44 14	Device SN is 6412a4304414
	09 (Hardware Version)	02 10	V2.1
	0a(Software Version)	01 01	V1.1
	0f(Device Type)	00	00=Class A 02=Class C
	14 ( Analog Type )	10	10=AI 1 type is 4-20mA 11=AI 1 type is 0-10V 20=AI 2 type is 4-20mA 21=AI 2 type is 0-10V

## 6.2 Sensor Data

IOT-C502 report sensor data according to reporting interval (10min by default). Battery level is reported every 12 hours for IOT-C502.

Channel	Type	Data Example	Description
01	75(Battery Level)	62	62=>98 Battery level =98%
03(GPIO 1)	00 (Digital Input)	00	00=low, 01=high
	01 (Digital Output)	00	00=low, 01=high
	c8(Counter)	78 05 00 00	78 05 00 00=>00 00 05 78=1400
04(GPIO 2)	00 (Digital Input)	00	00=low, 01=high
	01 (Digital Output)	00	00=low, 01=high
	c8(Counter)	78 05 00 00	78 05 00 00=>00 00 05 78=1400
05(AI 1)	02(Analog Input)	c3 02 c3 02 c3 02 c3 02	Byte 1-2: c3 02 => 02 c3 =707 Current value=707*0.01=7.07
06(AI 2)			Byte 3-4: c3 02 => 02 c3 =707 Min value=707*0.01=7.07
			Byte 5-6: c3 02 => 02 c3 =707 Max value=707*0.01=7.07
			Byte 7-8: c3 02 => 02 c3 =707 Average value=707*0.01=7.07
ff	0e(RS485)	08 25 00 00 00 00	Byte 1: 08=>Channel 2 Byte 2: Bit 0~2: 101=5=>Data type is Holding Register(Float) Bit 3~7: 00100=4=>Data Length is 4 Byte Byte 4-7: 00 00 00 00=>Value is 0

### 6.3 Downlink Commands

IOT-C502 sensors support downlink commands to configure the device. Application port is 85 by default.

Channel	Type	Data Example	Description
ff	03(Set Reporting Interval)	b0 04	b0 04 => 04 b0 = 1200s

**-END-**