 


EST.
1877

Pop Star

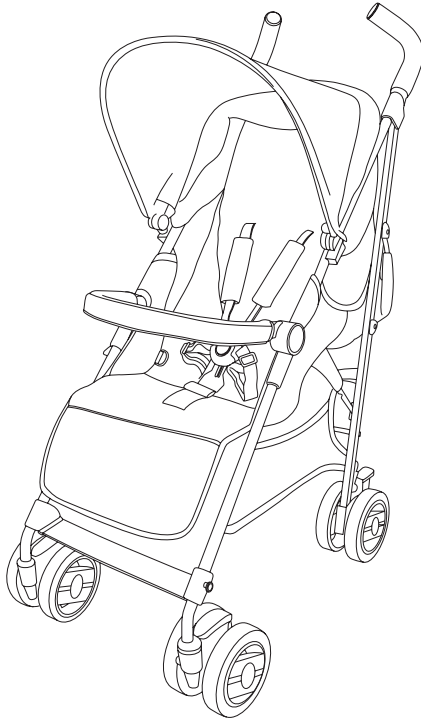

Silver Cross[®]

THE BEST START IN LIFE

**IMPORTANT: KEEP THESE INSTRUCTIONS
FOR FUTURE REFERENCE**



Warranty

All Silver Cross products are guaranteed for a period of 36 months against faulty workmanship, when the product is used correctly according to the instruction manual.

Garantie

Tous les produits Silver Cross sont garantis pour une période de 36 mois contre tout défaut de fabrication, si le produit est utilisé conformément au manuel d'instructions.

Garantía

Todos los productos de Silver Cross incluyen una garantía de 36 meses contra defectos de fabricación, siempre que el producto se utilice correctamente de acuerdo con el manual de instrucciones.

Garanzia

Tutti i prodotti Silver Cross sono garantiti per un periodo di 36 mesi contro difetti di fabbricazione, purché il prodotto venga utilizzato correttamente, in conformità al manuale delle istruzioni.

Garantie

Für alle Produkte von Silver Cross besteht für den Fall von Herstellungsmängeln eine Garantie von 36 Monaten, sofern das Produkt sachgemäß wie in der Bedienungsanleitung angegeben gebraucht wurde.

Garanti

Alla Silver Cross-produkter har 36 månaders garanti som gäller tillverkningsfel förutsatt att produkten har använts korrekt i enlighet med bruksanvisningen.

Гарантия

На всю продукцию Silver Cross действует гарантия сроком 36 месяцев, покрывающая случаи производственного брака, при условии использования изделия в соответствии с инструкциями.

保養期

在依据说明书正确使用产品的情况下，所有 Silver Cross 产品对工艺质量问题保修期为36个月。

保養期

所有 Silver Cross 產品均可享有36個月保養期，提供在按照指引說明書正確使用下的工藝缺憾保養。

الضمان

كافة منتجات Silver Cross مضمونة لمدة ٣٦ شهراً ضد عيوب الصناعة، بشرط استخدام المنتج على نحو صحيح وفق دليل التعليمات.

Consignes de sécurité

Ce produit est appelé: Pop Star

Ce produit est un article Silver Cross de la plus grande qualité. Il est conforme aux normes BS EN1888:2012 et saura répondre à vos besoins s'il est utilisé et entretenu correctement. Si toutefois vous rencontrez le moindre problème avec votre poussette, veuillez contacter votre revendeur Silver Cross pour qu'il prenne les mesures adéquates.

AVERTISSEMENT:

Conforme aux exigences de sécurité

Ce produit peut être utilisé de la naissance à 25 kg

Il est conseillé d'utiliser la position la plus inclinée pour les nouveau-nés.

Ne laissez jamais votre enfant sans surveillance.

Assurez-vous que tous les dispositifs de verrouillage sont enclenchés avant utilisation.

Pour éviter les blessures, maintenez votre enfant à l'écart lorsque vous pliez et dépliez ce produit.

Ne laissez pas votre enfant jouer avec ce produit.

Utilisez toujours le système de retenue.

Ce produit n'est pas conçu pour la course ou le patinage.

Le frein doit être actionné lorsque vous positionnez ou retirez votre enfant de la poussette

Toute charge posée sur la poignée, le dossier ou les bords de la poussette risque de compromettre sa stabilité.

Ne transportez pas plus d'un enfant sur cette poussette.

Ne laissez pas un autre enfant se tenir debout sur le système de verrouillage arrière pour vous en servir de marchepied.

N'utilisez pas de marchepied d'autre provenance avec cette poussette.

Aucun accessoire non approuvé par Silver Cross ne doit être utilisé.

N'utilisez que des pièces détachées fournies/recommandées par Silver Cross.

N'utilisez pas ce produit si l'une des pièces est endommagée, déchirée ou manquante.

Attention : Tenez les pièces mobiles hors de la portée de votre enfant lorsque vous effectuez des réglages.

Ne laissez pas votre enfant grimper tout seul dans/hors de la poussette car il pourrait se blesser ou endommager la poussette.

Ne laissez jamais votre enfant avec l'habillage pluie refermé sur la poussette ailleurs qu'à l'extérieur.

Vous êtes responsable de la sécurité de votre enfant.

Hamac uniquement compatible avec : Châssis Pop Star

Capacité du panier : 5 kg

L'enfant doit toujours porter un harnais de sécurité conforme à la norme BS6684. Les anneaux en « D » sont fournis pour attacher un harnais supplémentaire. Ces anneaux sont situés sur le harnais existant, à côté du point de fixation du harnais au châssis du siège.

Tenez toujours le siège lorsque vous effectuez des réglages. Assurez-vous que le frein est actionné. Si vous rencontrez des difficultés pour plier ou déplier la poussette, ne forcez pas car vous risqueriez de l'endommager. Lisez attentivement les instructions « Pliage ou dépliage ». Ne montez pas des accessoires ou pièces de rechange autres que ceux fournis ou recommandés par Silver Cross, car cela peut être dangereux. Si une personne autre que le propriétaire utilise la poussette (par exemple : grands-parents ou nourrice), montrez-lui comment l'utiliser correctement.

Nettoyage et entretien

Châssis - vérifiez toujours que la poussette ne présente pas de traces d'usure. Lubrifiez régulièrement toutes les pièces mobiles. Vérifiez la liberté de mouvement de tous les dispositifs de verrouillage. Frottez les parties métalliques avec un chiffon propre et sec.

Parties en tissu et siège -pour nettoyer, utilisez une éponge et de l'eau chaude savonneuse. Rincez bien à l'eau claire pour ne pas laisser de taches. Laissez sécher à l'écart d'une source de chaleur directe et de la lumière intense du soleil. Les couleurs peuvent s'altérer avec le temps. Ne lavez et ne séchez jamais en machine, ne repassez jamais et n'utilisez jamais d'eau de javel.

 
Garantie

Tous les produits Silver Cross sont garantis pour une période de 36 mois contre tout défaut de fabrication, si le produit est utilisé conformément au manuel d'instructions.

Veillez lire ces instructions attentivement avant d'utiliser votre nouveau produit Silver Cross et veuillez les conserver pour référence ultérieure.



1.1

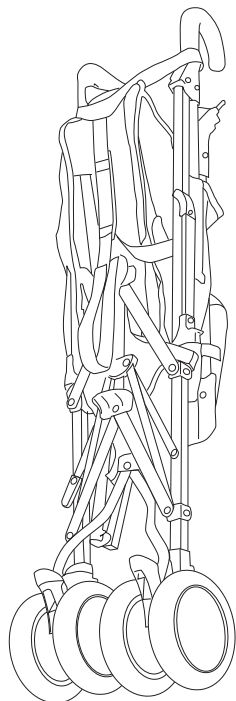

These instructions are important.

Read these instructions carefully before use and keep them for future reference. Your child's safety may be affected if you do not follow these instructions. Your Pop Star pushchair is a high quality Silver Cross product. It meets current safety standards and care and regular light maintenance will ensure long service. This vehicle is intended for children from birth to 25kg. If somebody unfamiliar is using your Pop Star pushchair always ensure that they read these instructions carefully so that they understand how the product works best. Always read all the instructions provided carefully and remember, the safety of your child is your responsibility.


WARNING: Never leave your child unattended.

Contents

Your Pop Star pushchair includes the following components, please check that you have all the items before proceeding:

- 1.1 Pushchair chassis and seat fabrics
- 1.2 Hood
- 1.3 Raincover
- 1.4 Front wheel assembly x2
- 1.5 Bumper Bar


1.2

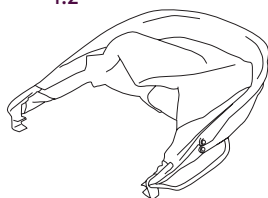


1.3



 
1.4

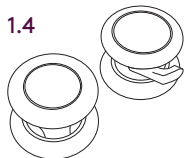

 
1.5

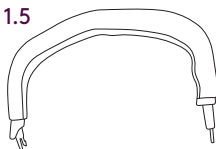

 
2.1

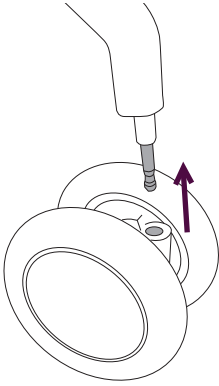

 2.2

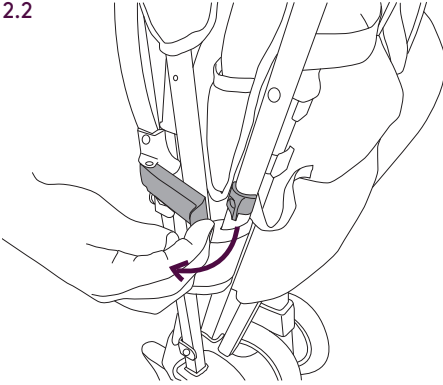

2.3

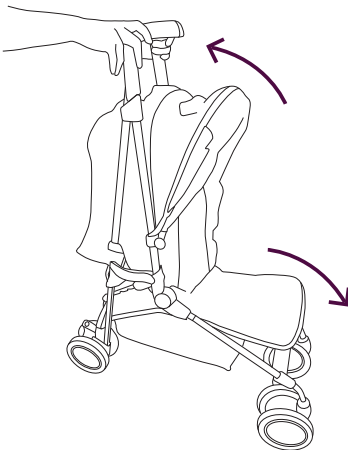

Assembling the Pop Star


- 2.1 Attach the swivel wheels by locating the wheel under the steel attachment pin. Slide the wheel upwards and press until the wheel clicks into position.

WARNING: Check the wheel is secure by pulling gently downwards.

Repeat on both sides. Your Pop Star is now ready to be unfolded.

- 2.2 Locate the locking catch on the side of the pushchair and lift to release from the locking stud.
- 2.3 Repeat on both sides and allow the pushchair to open by lifting the handles upwards and the wheels will naturally fall to the floor.

2.4

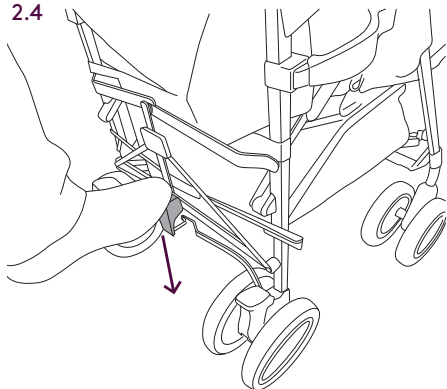


Assembling the Pop Star (continued)

- 2.4 Finally, press down gently upon the rear locking catch, positioned between the rear wheels, to lock your pushchair.

WARNING: Failure to do this will cause damage to your pushchair.

Place the pushchair on a flat surface and ensure that the pushchair moves freely.

2.5

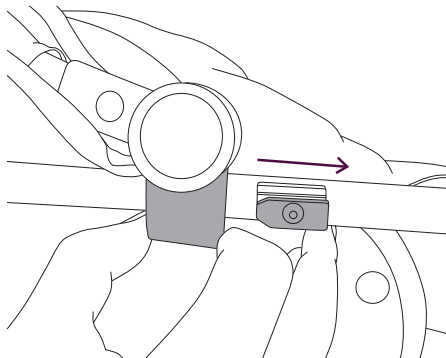


- 2.5 To fit your Pop Star hood, locate the clips on the hood. Now attach the hood to the Pop Star chassis by sliding clips over the hood connection bracket. A positive engagement should be ensured.


- 2.6 Connect the fabric of the hood to the fabric of the seat with two press studs, one on each side of the pushchair.

- 2.7 Connect the fabric of the hood to the rear leg of the chassis with two press studs, one on each side of the pushchair.



2.6

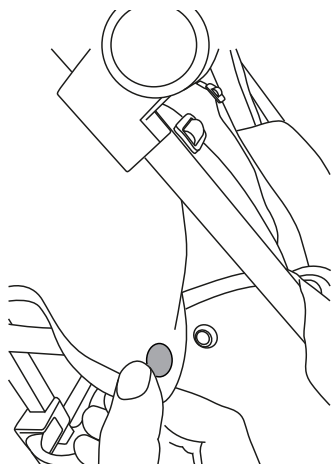


2.7

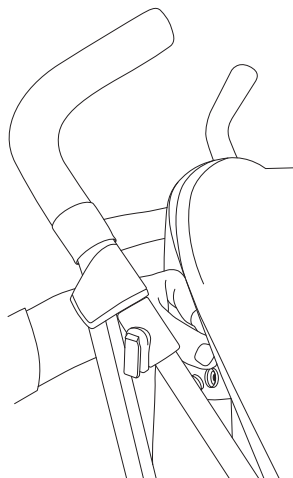

2.8

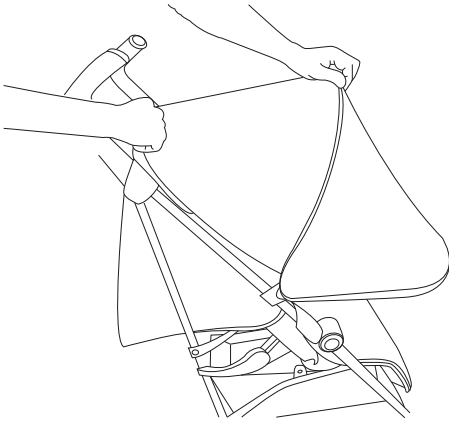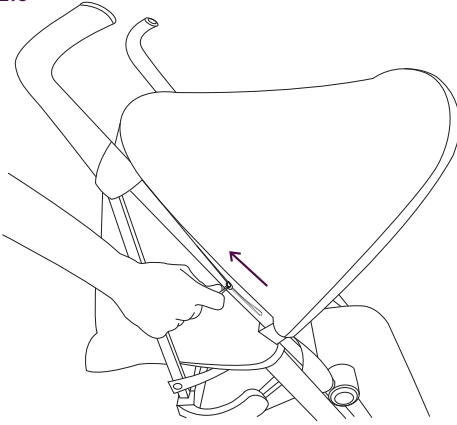


2.9

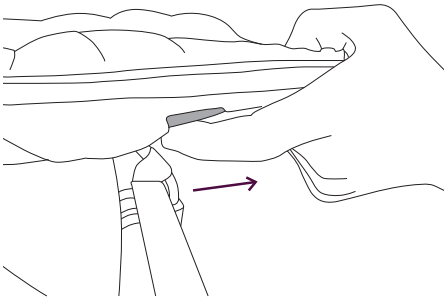


Assembling the Pop Star (continued)

2.8 Your Pop Star hood can be opened and folded by pulling the hood forward or pushing backwards on the hood frame. Your hood can also be extended forwards by unzipping zip as shown in diagram 2.8. Please note when folding your Pop Star pushchair you should always ensure the hood is folded away. Failure to do this could result in damage to your Pop Star pushchair.

2.9 Your Pop Star pushchair has a multi-position calf support. Locate the adjustment levers either side of the calf support. Pull levers towards you and adjust to the required position.

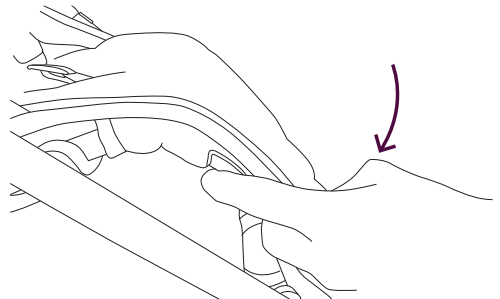

3.1

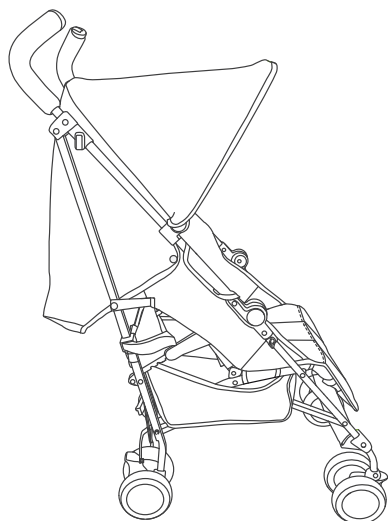


Reclining the Pop Star


- 3.1 Your Pop Star pushchair has a multi-position recline.
- 3.2 First, locate the backrest adjustment mechanism at the rear of the seat. Pull up the recline lever and gently lower to the desired position.
- 3.3 To raise the backrest locate the recline lever and pull up gently into the desired position. The backrest will rise to the desired height.

NOTE: The backrest should always be in the upright position and the hood folded away prior to folding.


3.2

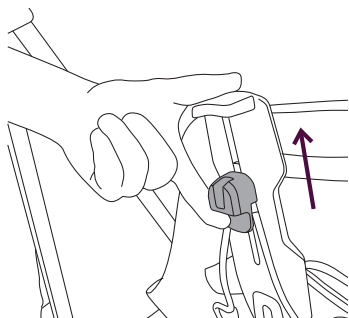

3.3

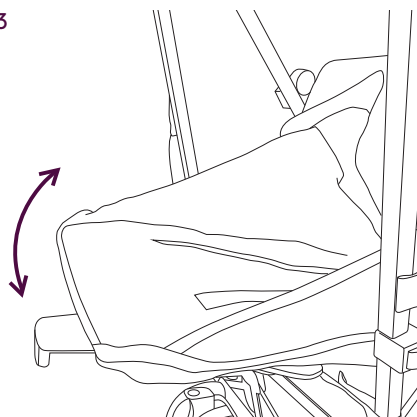

4.1

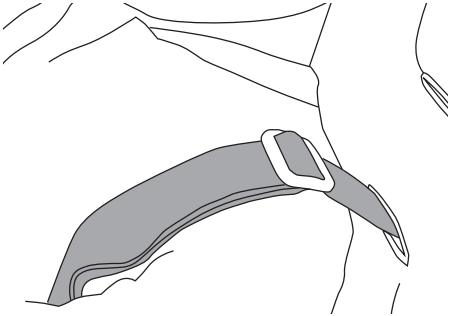

Using the Harness

The harness is a five point system consisting of shoulder straps, waist straps and crotch strap. Before you use the pushchair, the harness must be adjusted to suit the size of the child.


- 4.1** It is very important that you make sure the shoulder straps are the correct height for your child. The shoulder straps should be level or just below your child's shoulders.

In a safe and secure environment, place your child in the pushchair with the backrest upright and assess which of the three shoulder strap height positions is most suitable for your child.

NOTE: Winter/Summer clothing can make a difference to the size of your child.

WARNING: NEVER LEAVE YOUR CHILD UNATTENDED DURING THIS PROCESS. Remove your child whilst the following adjustments are being made.



5.1

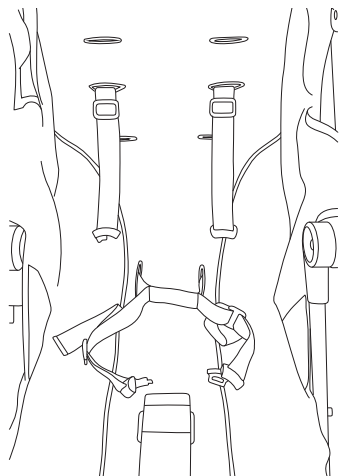


Adjusting the harness

- 5.1 Your Pop Star pushchair has a multi-position height adjustment for the harness. To adjust the shoulder strap height, start by disconnecting the shoulder clips from the waist clips.
- 5.2 Pass one of the shoulder clips through the button hole on the cover and backrest. Once the clip is fully through to the opposite side of the backrest, pass it back through the desired slot. Repeat these steps for the other shoulder clip, ensuring that the selected button holes are in line.

5.2

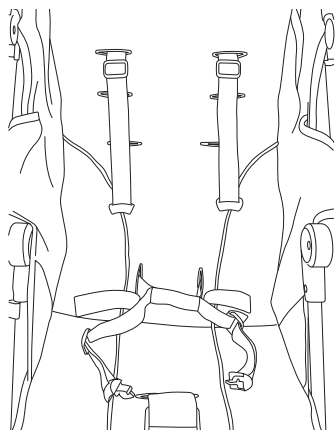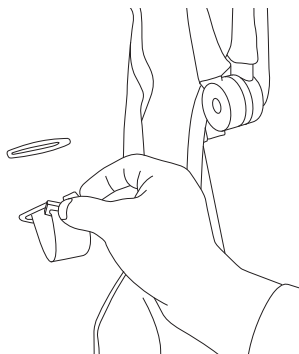

6.1

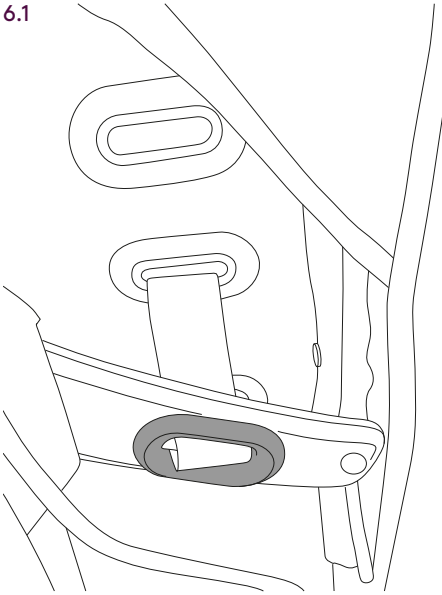


Adjusting the harness


WARNING: Always ensure plastic toggles on shoulder and waist straps are securely and correctly located into backrest.

- 6.1 Plastic toggles must always be located correctly into backrest. They do not need to be removed to adjust harness.
- 6.2 If, for any reason, toggles are removed, they can be re-located by pushing into the hole on the backrest, ensuring 2 prongs click into place securely.


6.2

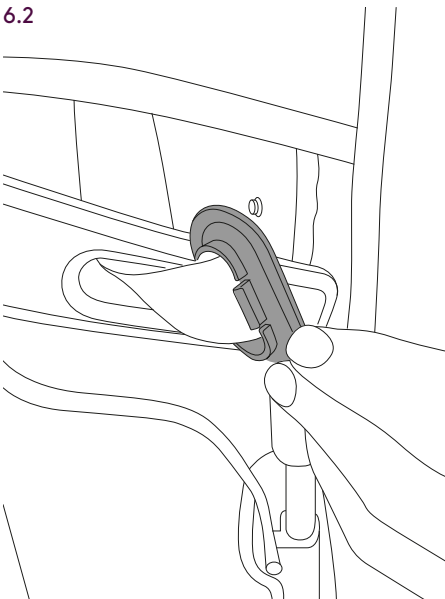


7.1

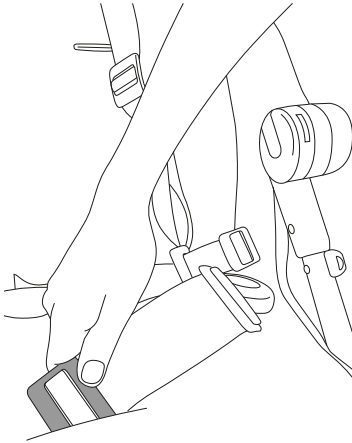

7.2

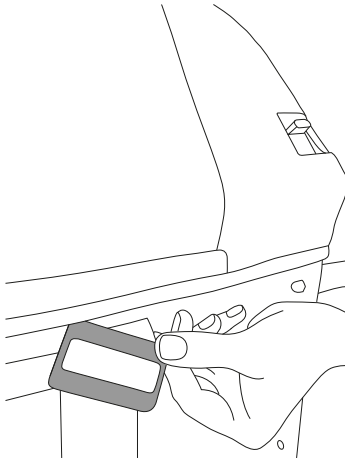

7.3

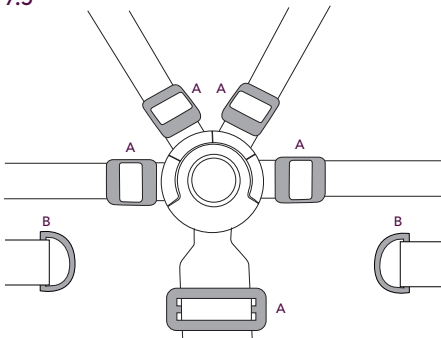

Adjusting the harness


WARNING: Always ensure buckle toggle is securely and correctly located into seat.

Buckle strap must always be located correctly into seat. It does not need to be removed to adjust harness.


- 7.1 If, for any reason, the buckle strap is removed, it can be re-located by pushing through both the buttonhole on seat fabric and buttonhole on seat substructure.
- 7.2 Ensure the buckle strap goes through both layers of fabrics.
- 7.3 Your harness is fully adjustable by moving the sliders (A), to make fitting easy. Normally, each shoulder strap is adjusted to the same length as the waist straps.

'D' rings are provided for fitting a separate harness if required (B), complying with BS 6684. Your child should always be harnessed in and should never be left unattended, even for short periods of time.


8.1

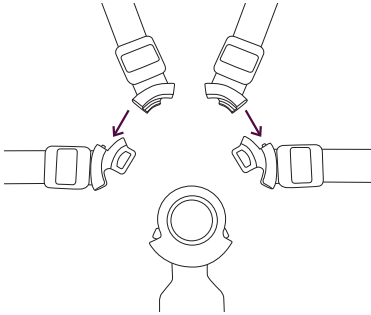


8.2

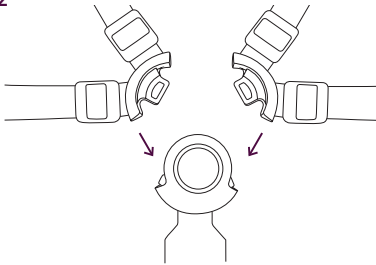

8.3

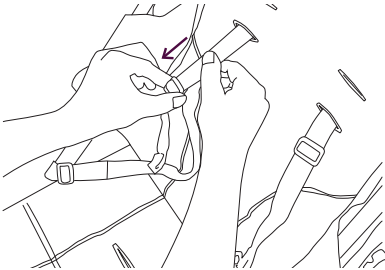

8.4

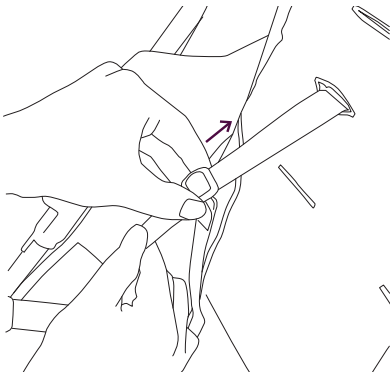

Using the harness



Attach and release the buckle as necessary to facilitate harness adjustment and checking the harness tightness.

WARNING: Always use the crotch strap in combination with the waist belt.


- 8.1 Start by connecting shoulder clips to waist clips.
- 8.2 To fasten the harness insert the pairs of clips into each side of the buckle. Listen for the 'click'.
- 8.3 Pull sliders in one direction to lengthen the strap.
- 8.4 Pull slider in opposite direction to shorten strap.

WARNING: Always use the restraint system. To release the harness, press the centre and pull apart. The shoulder clips can be detached from the waist clips if required.


9.1

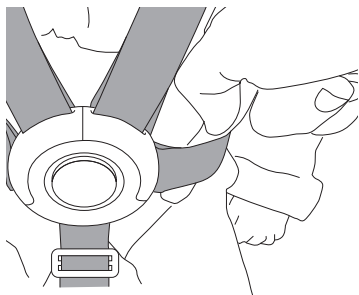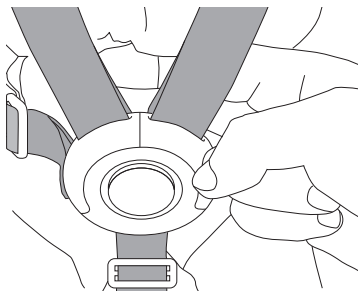

10.1

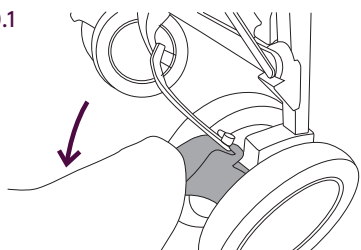

10.2

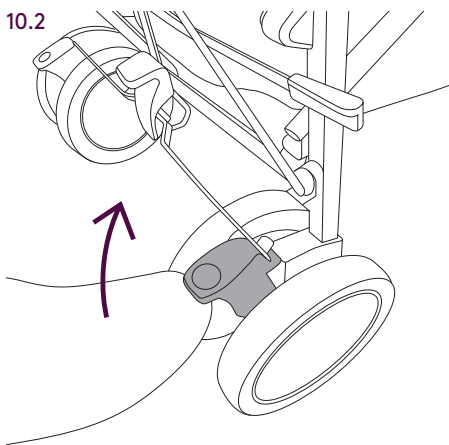

Harness tightness

It is important to ensure that your child is securely fastened into the harness by assessing the tightness of the straps.

- 9.1 You should only be able to insert 2 fingers between the shoulder straps and the waist straps.

NOTE: Winter/Summer clothing can make a difference to the size of your child.

Using the brakes




- 10.1 Your Pop Star pushchair has a parking brake. To apply the brake simply press downwards on either brake catch located on the rear wheels. The brake will automatically lock on both wheels simultaneously.

WARNING: Ensure both brake levers are locked in position securely.

- 10.2 To release the parking brake simply lift either brake catch and both catches will release simultaneously.

NOTE: Always apply brake when placing and removing your child.

11.1

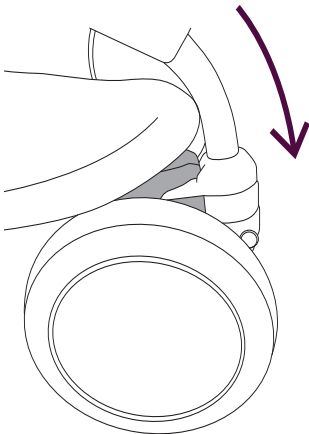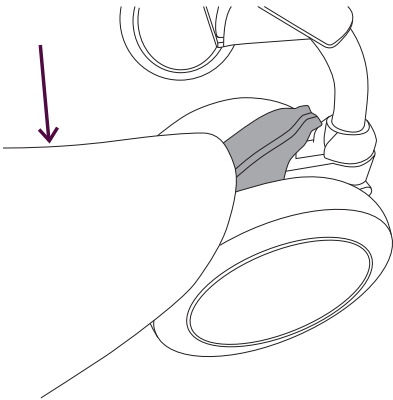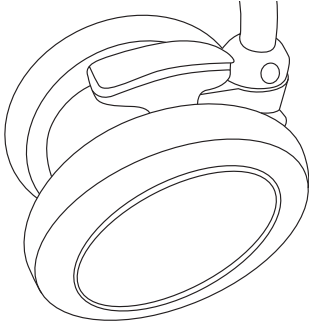


Using the wheel locks


- 11.1 Your Pop Star pushchair has front swivel wheels. To lock, locate the locking catch between the front wheels, pivot the wheels into the position for moving forward and lift the locking catch. To use the wheels in swivel mode, release the catch and the wheels will swivel freely. Repeat on each wheel.

NOTE: Do not attempt to swivel the wheels with the lock engaged as this may damage the swivel lock.

12.1

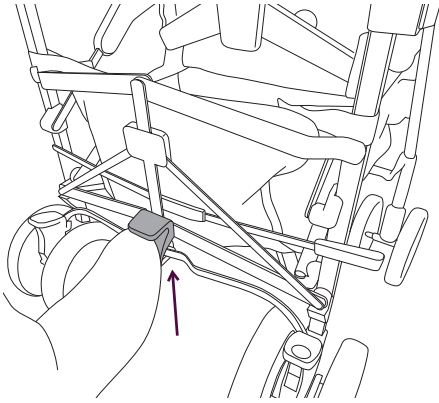

12.2

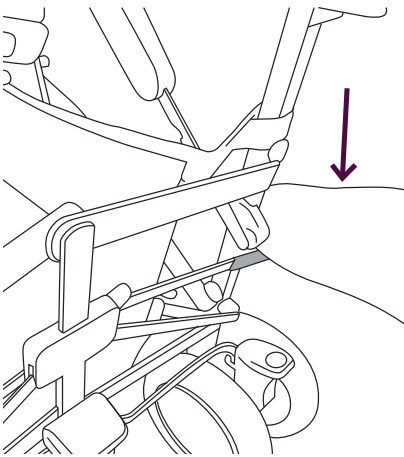

Folding the Pop Star


NOTE: The backrest should always be in the upright position and the hood folded away prior to folding.

12.1 To start folding, locate the rear locking catch (positioned between the rear wheels) and lift upwards with the toe of your shoe.

12.2 Now locate the secondary safety catch located above the right hand rear wheel. Gently press down until the lock has released.

NOTE: Check there are no large rigid items inside the basket before folding as presence of such items may lead to damage of the chassis.

12.3

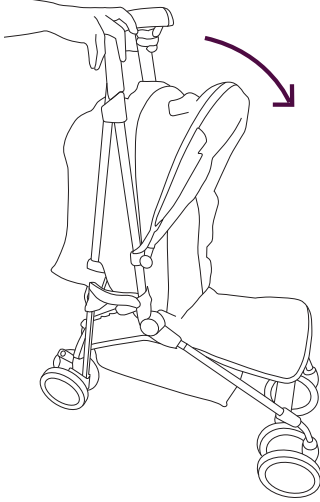


Folding the Pop Star (continued)


12.3 Push the handles forwards and the pushchair will naturally close in three dimensions to a compact size. Ensure the locking catch on the side of the pushchair has engaged.

12.4 Your Pop Star pushchair has a soft grip carry handle on the right hand side.


WARNING: This handle is the only position from which you should lift your pushchair to avoid possible damage.

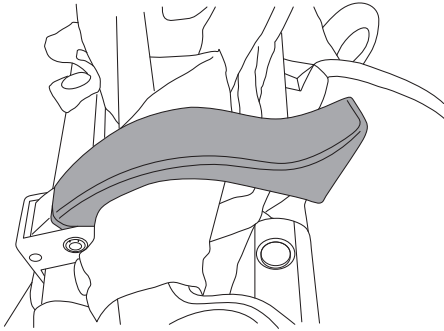

12.4

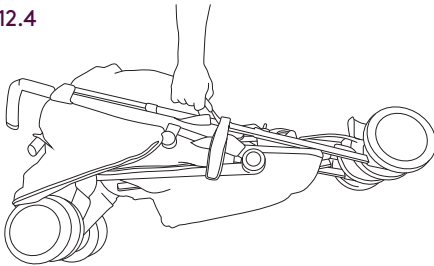

13.1

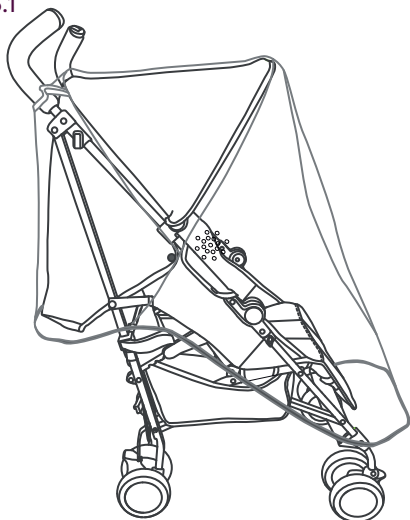


Attaching the raincover


- 13.1 To attach your raincover locate guide holes over handles, and slide the cover down over the chassis.
- 13.2 Fasten velcro handles to secure the raincover.
- 13.3 Hook elastic loops either side of raincover over plastic studs on chassis.

Pull raincover down to the bottom of the pushchair and tuck foot end under calf support.


13.2

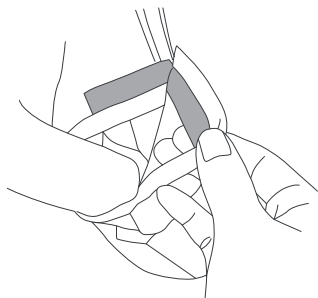

13.3

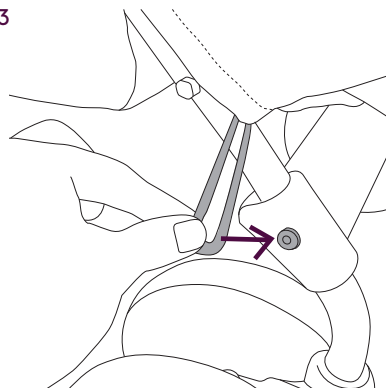

14.1

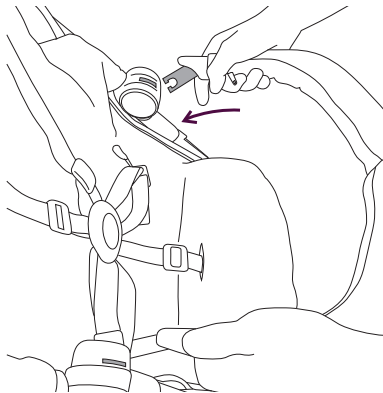


Fitting the bumper bar

14.1 Insert bumper bar into connection points.

14.2 To remove the bumper bar press release buttons and pull the bumper bar towards you.

14.2

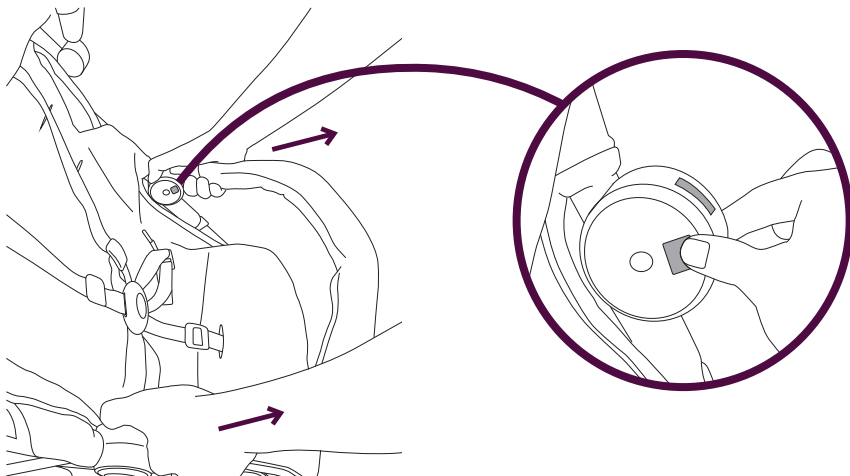

Safety Notes

This item is a high quality Silver Cross product. It complies with BS EN1888:2012 and with correct use and maintenance will give good service. If however you should have any problems with your product, please contact your Silver Cross retailer who will take appropriate action.

WARNING:

This product is suitable from birth to 25kg

It is recommended the most reclined position is used for new born babies.

Always use the restraint system.

Never leave your child unattended.

Ensure all locking devices are engaged before use.

To avoid injury ensure that your child is kept away when unfolding and folding this product.

Do not let your child play with this product.

This product is not suitable for running or skating.

Parking device shall be engaged when placing or removing the child.

Any load attached to the handle and/or the back of the backrest and/or on the side of the vehicle will affect the stability of the vehicle.

Do not carry more than one child in this pushchair.

Do not stand a second child on rear lock and use as a buggy board.

Do not attach a third party buggy board.

Accessories which are not approved by Silver Cross shall not be used.

Only replacement parts supplied/recommended by Silver Cross shall be used.

Do not use if any part is broken, torn, or missing.

The child should be clear of moving parts whilst making adjustments.

Do not allow your child to climb in or out of the pushchair of their own accord, as this could result in injury to your child or damage to your pushchair.

Never leave your child in the pushchair with the raincover fully fitted other than in normal outside use.

The safety of your child is your responsibility.

Seat unit only compatible with: Pop Star Chassis.

Basket capacity: 5kg

Cupholder capacity: 340g

The child should always wear a safety harness complying with BS6684. "D" rings are provided for the attachment of an additional harness. These are located on the seat unit.

Always hold the seat when making adjustments. Be sure that the parking brake is on. If you have any difficulty in folding or unfolding the pushchair do not force as this will cause damage. Read the "To fold or unfold" instructions carefully. It may be unsafe to fit accessories or spare parts other than those supplied or recommended by Silver Cross. If anyone other than the owner is going to use this product (e.g. grandparent, child minder), please show them how to use it correctly.

Care and Maintenance

Chassis - Always check your pushchair for signs of wear. Regularly lubricate all moving parts. Check for freedom of movement of all locking devices. Polish metal work with a clean, dry cloth.

Dirt and dust within moving mechanisms may be rinsed away with clean water. Do not soak or submerge.

Fabric items - Please refer to the washcare instructions on each individual item's washcare label.

Seat Unit - To clean, sponge area with warm soapy water. Rinse well with clean water to avoid staining. Allow to dry naturally, away from direct heat and strong sunlight.

Never machine wash, tumble dry, iron or bleach any of the fabric items or seat unit.

A certain degree of fading may occur over time through everyday use.

Guarantee

All Silver Cross products are guaranteed for a period of 36 months against faulty workmanship, when the product is used correctly according to the instruction manual.

Please read these instructions carefully before using your new Silver Cross Product and keep for future reference.

www.silvercrossbaby.com



NOTES:

Silver Cross®

THE BEST START IN LIFE

Silver Cross (UK) Ltd, Micklethorn, Broughton, Skipton, North Yorkshire, BD23 3JA

silvercrossbaby.com