

# QUICK START

## REMOTE-OPERATED SLOPE MOWERS




Please read operator's manual prior to first operation.

## START-UP

1. Ensure remote is charged.
2. Disengage parking brake.
3. Turn on unit (A); light will illuminate. Ensure E-Stop (B) is pulled out.
4. Move fuel tank indicator to the left tank or right tank (C).
5. Step at least 15 feet away from the mower.
6. Turn red E-Stop (D) clockwise until it pops up and the strobe light begins to flash. PTO and speed switch should be down / slow.
7. Turn on choke (E). (Not applicable for EFI engines)
8. Press and hold Start (F).
9. Turn off choke (E). If required, increase throttle to fastest setting. (Mower defaults to fast throttle at startup).
10. Press Enable (H).
11. Turn PTO (I) to mow.

## SHUT-DOWN

1. Turn off PTO (I).
2. Push E-Stop in (D).
3. Turn unit key off (A).

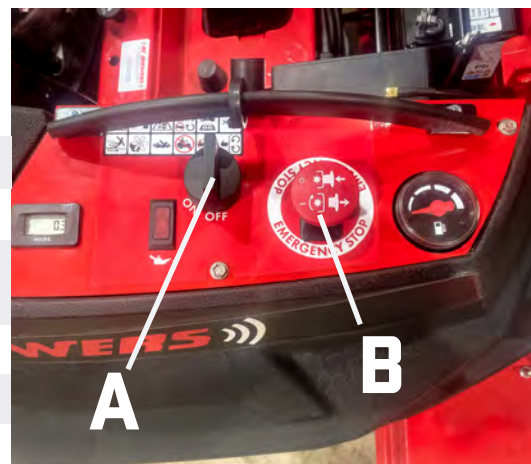

# REFERENCE GUIDE

## REMOTE-OPERATED SLOPE MOWERS




## OPERATOR SAFETY POSITION


Please read operator's manual prior to first operation.

- Do not point discharge at people.
- Maintain a distance of at least 200 feet from front of machine.
- Maintain a distance of at least 15 feet from sides and back of machine when running.
- Stand above or to the side of the machine while mowing.
- Maximum slope angles:

### TRACKED SLOPE MOWERS - 50°

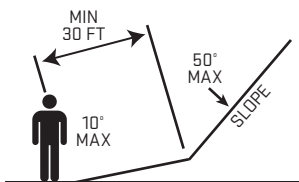

### WHEELED SLOPE MOWERS - 35°

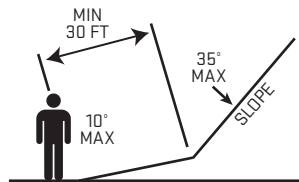

## HORN ALERTS

- **Low oil pressure (check oil level)**
  - After 20 seconds: horn sounds for 1 second, every 4 seconds
  - After 40 seconds: horn sounds continuously for 5 seconds then unit will shutdown
- **Slope angle monitoring (for track and engine wear protection)**
- **If machine remains at a constant angle over 30 degrees:**
  - More than 25 minutes: horn sounds for 1 second, every 20 seconds
  - More than 30 minutes: machine will enter auto-shutdown
- **If machine angle exceeds 53 degrees:**
  - Blades will shut off
  - Horn will sound for 3 seconds, every 10 seconds until angle reduced

## TIPS & TRICKS

- Read the operator's manual prior to starting the machine.
- Be aware of your surroundings. Check brush and grass for large objects.
- Ensure your remote has an adequate charge each time you operate.
- Follow the recommended maintenance schedule.
- Make 3-point turns (Y-turns) rather than zero-turn pivots.
- Keep engine cooling fans clear of debris.
- Preferred method of slope mowing is horizontally, side-to-side.
- Diagonal mowing is permitted.
- Avoid continuous vertical up/down mowing on steep slopes.
- Grass will cut best when it is dry.

