



Dragon Pedals

Welsh Cake Overdrive User Guide

OVERDRIVE

25-Oct-2023

Contents

Introduction	2
Power	3
The Controls	4
Making Connections	5

Introduction

A lovely fat overdrive with loads of character. For the Mids control: Anti-clockwise is more mids, clockwise is less mids. Mids straight up is not the best setting. Try all the way left and adjust a little towards the right to suit or try all the way to the right and adjust a little to the left to suit.

Power


Power is supplied via a standard 9v centre negative power supply only – no internal battery.

Almost all effects pedals will become noisy (hiss, squeaks, clicks, hum, whine etc.) if they are not powered by either a battery or a fully isolated power supply that has been designed for use with guitar effects pedals.

Please do not use daisy chain cables. You'll get noise if you do!


Here's a useful article from [Premier Guitar](#).

The Controls

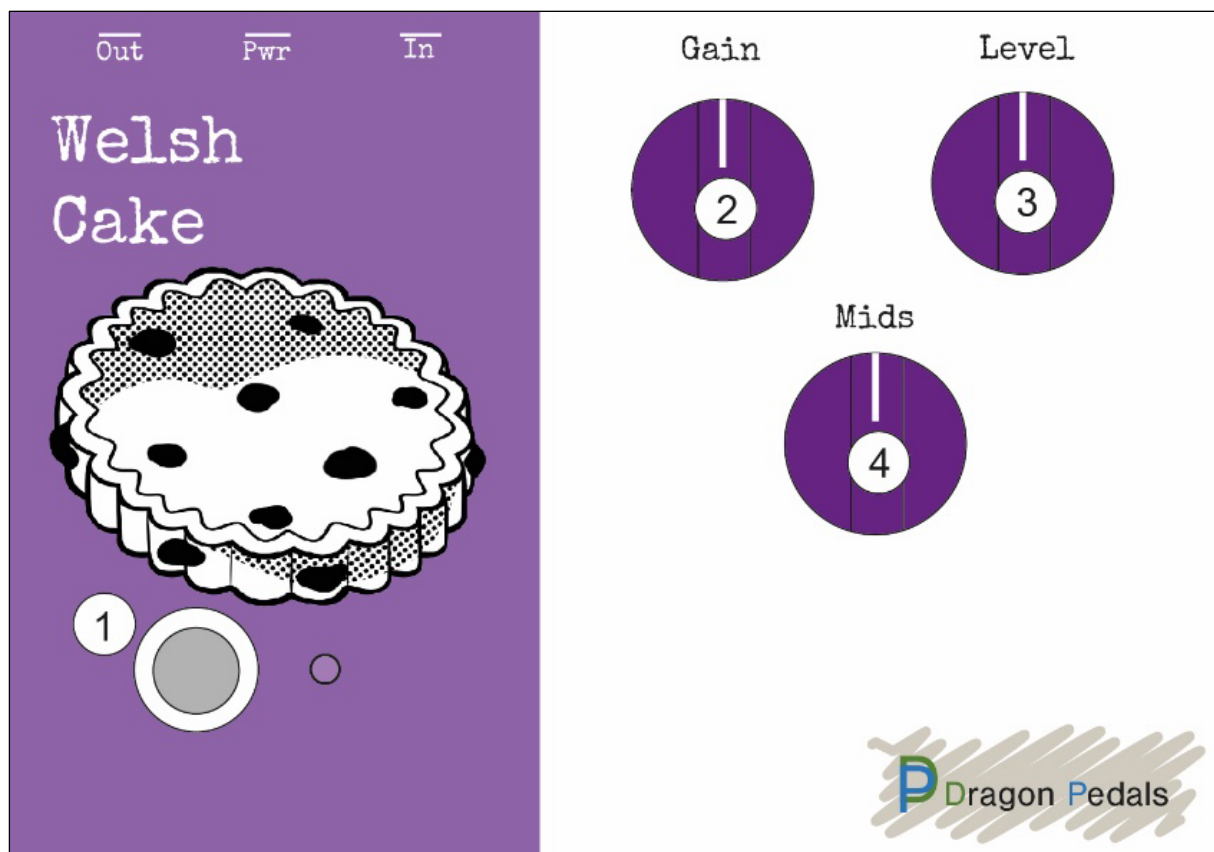

1. Footswitch operates the Welsh Cake overdrive. On when the LED is lit.
2. Adjust the gain - amount of overdrive - of the Welsh Cake.
3. Adjusts the level (Volume) of the Welsh Cake.
4. Adjusts the mid frequencies of the Welsh Cake. Fully counterclockwise = most mids, Fully clockwise = least mids. Straight up is not the best setting. Try all the way left and adjust a little towards the right to suit or try all the way to the right and adjust a little to the left to suit.

Making Connections

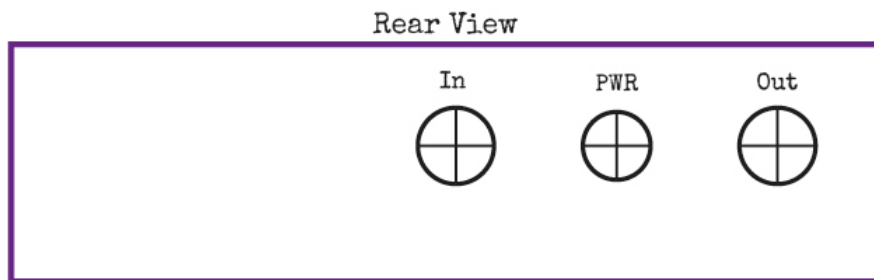

+9V PWR: Standard effects pedal power; 9V centre negative.

In: Connect your instrument or other pedal to this socket.

Out: Connect this socket to your amplifier or next pedal.

End of Document