

Your Cell Phone



1. SOS Button (Automatically calls the SOS numbers)
2. LED Light (Will flash on a incoming call, a missed call, an unread message and when charging your phone)
3. Quick Hang Up Calls

4. Quick Answer Calls
5. Loudspeaker
6. Headset, Jack 3.5mm
7. Torch key (Press and hold for flashlight)
8. Micro USB charger port
9. Volume keys + / -

Your Cell Phone

- 10. Left Menu / Main Menu
- 11. Call Answer / Call Log
- 12. Block Robocallers
(Press Block Now)
- 13. * Key (Press and hold
this button to
enter the following
symbols: * / +)
- 14. Receiver
- 15. Navigation keys (Up /
Down / Right / Left)
- 16. Right menu key (On the
idle screen this button
takes you to the
Phonebook menu)
- 17. Hang Up Calls
Power On/Off
- 18. Speed dial 2
- 19. Speed dial 1
- 20. # Key (Press and hold to
switch between silent
mode and general
modes)



Insert SIM Card

Fig. 1


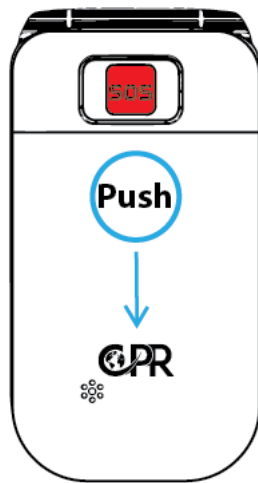


Fig. 2

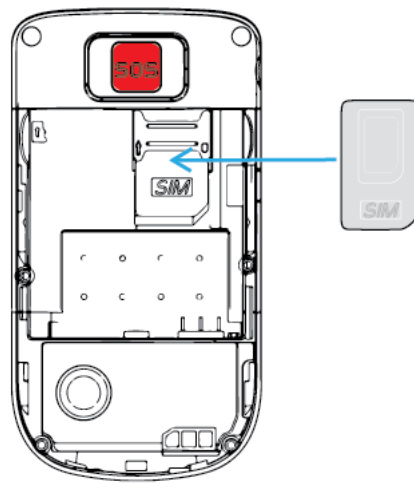


1. Make sure the phone is switched off and the charger is disconnected.
2. Turn the phone over (back of phone facing you), push and slide down the back cover (see Fig. 1).
3. If the battery is in place, remove it.
4. Insert the SIM Card (see Fig. 2).

Note : The CS900 is an "Unlocked Phone" and uses a Standard SIM Card.

Getting Started

Make sure a SIM card is inserted in your CS900 and the battery is charged.

1. Press and hold  to switch the phone on.
2. If prompted, choose your language and press OK.
If you have not inserted a SIM card, the CS900 will display ' **Insert SIM** '. No SIM card, only emergency call available.

Phone Book

Can hold 1000 numbers within the phone and 250 numbers on the SIM.

Speed Dial

Press once for Picture Phone

Press right on the navigation button

Press the Call Button



Note : Charge the battery for at least 12 hours before using the phone for the first time.