 
 
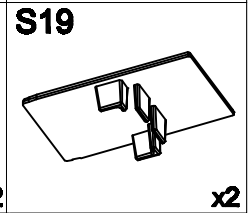 
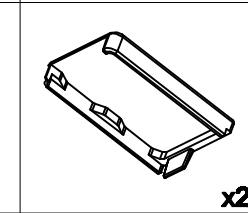 
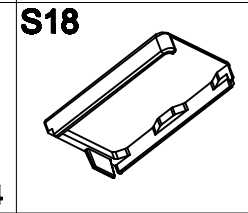 
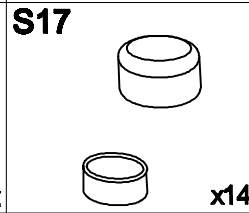 
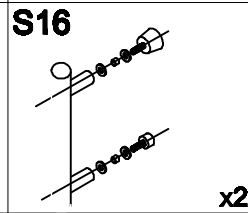 
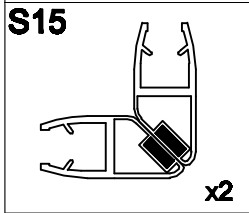 
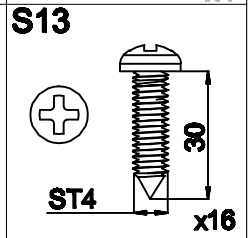 
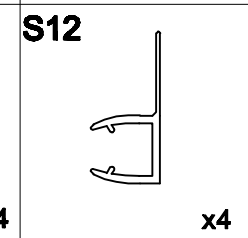 
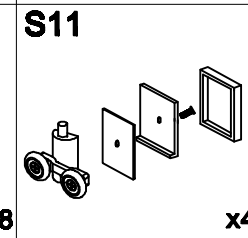 
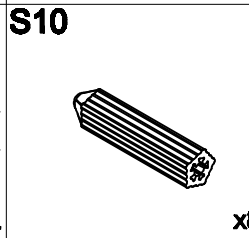 
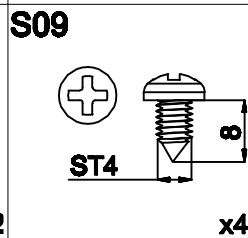 
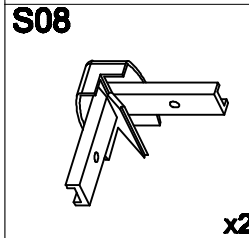 
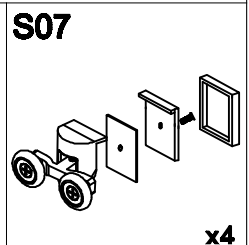 
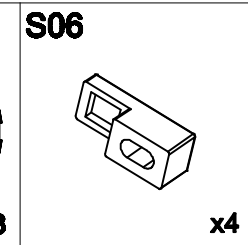 
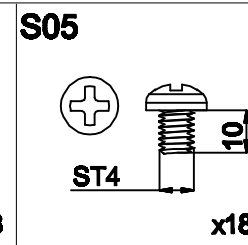 
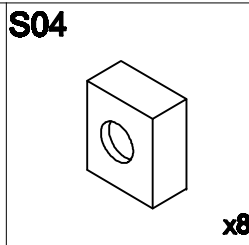 
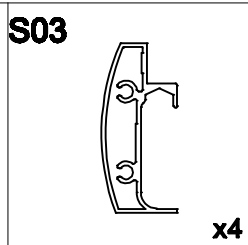 
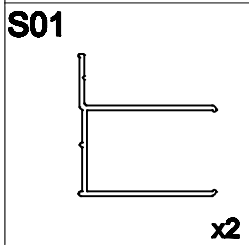 
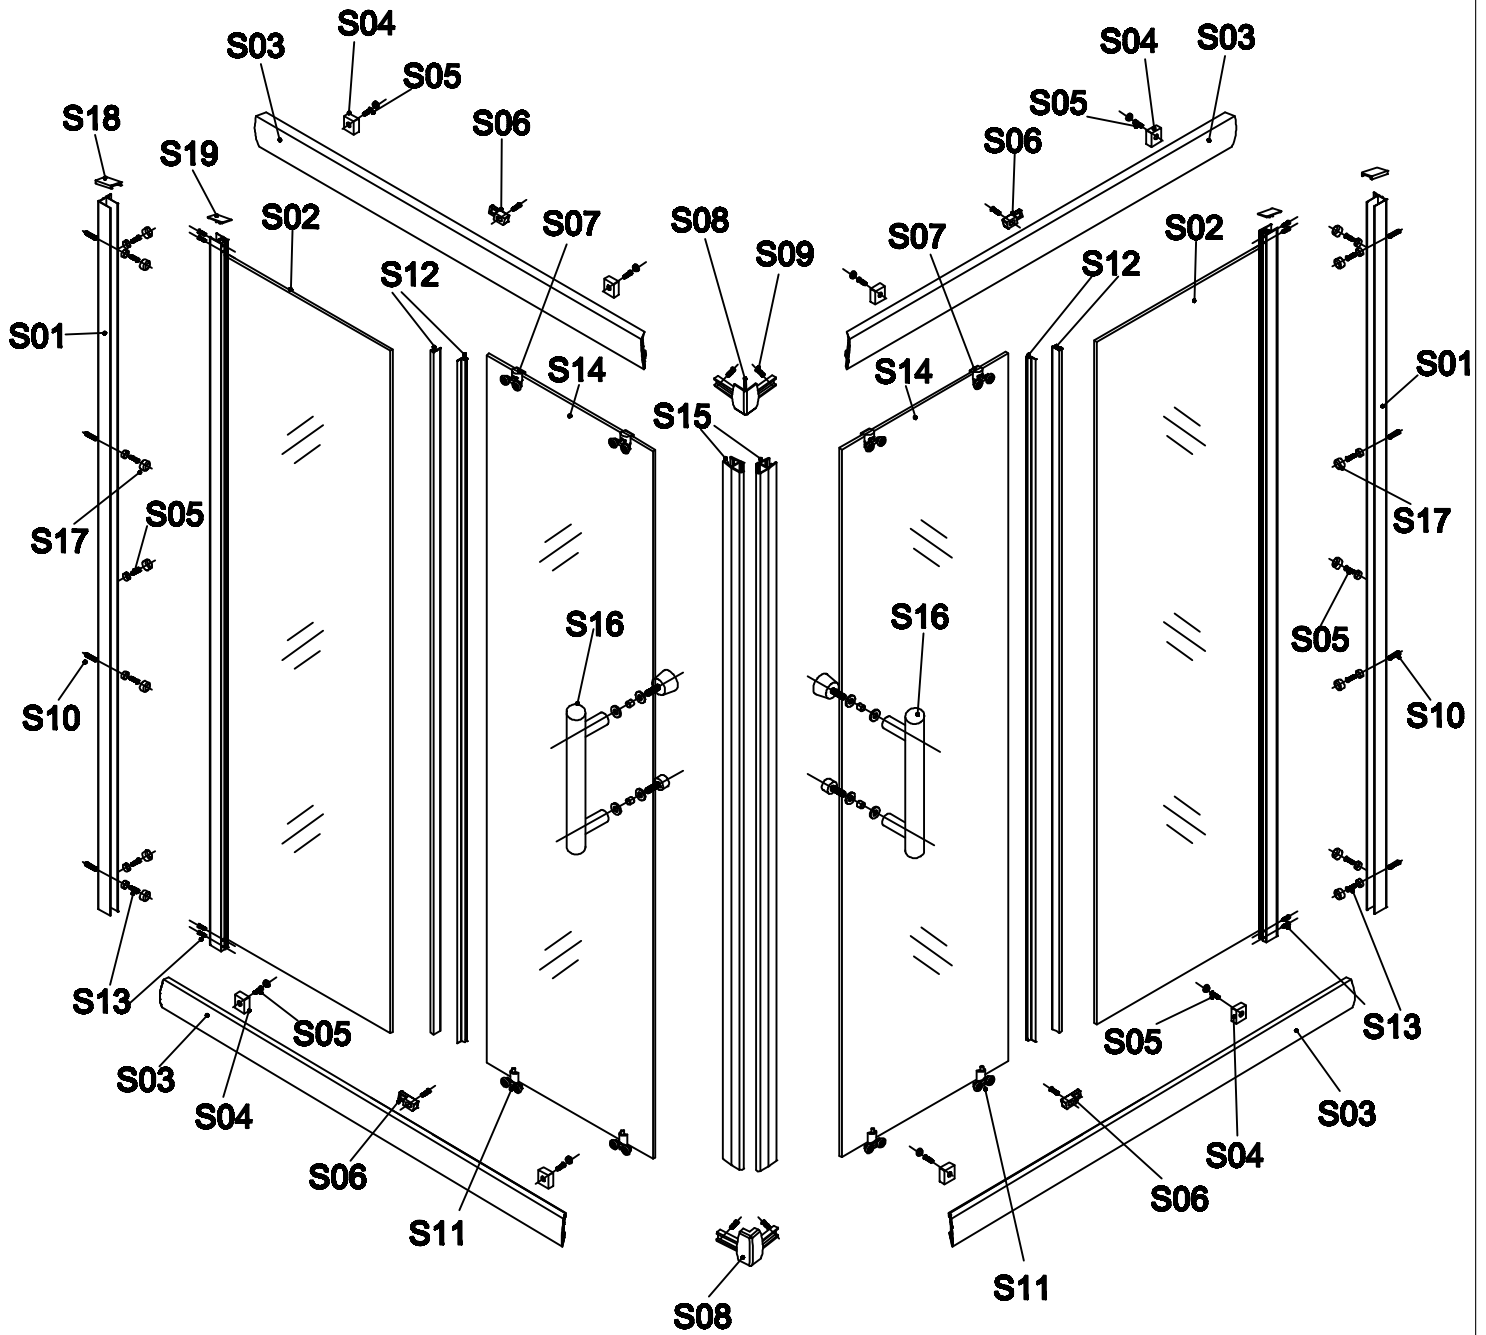 
 
 
 
 
 
 




# FCR Series

Edit:16.03




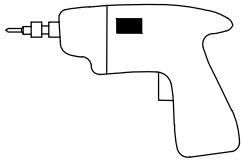

  
1

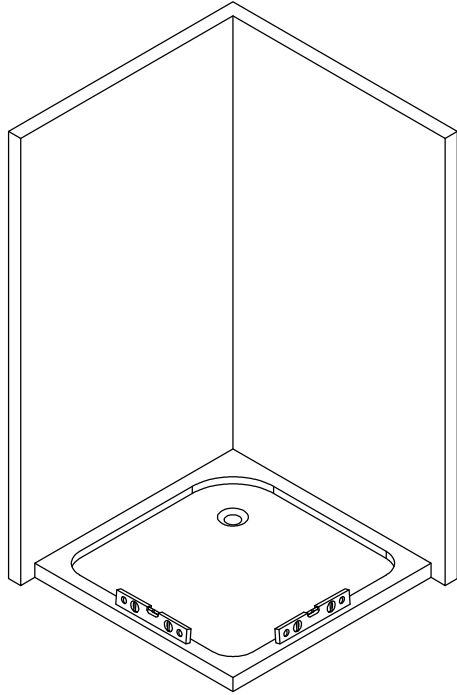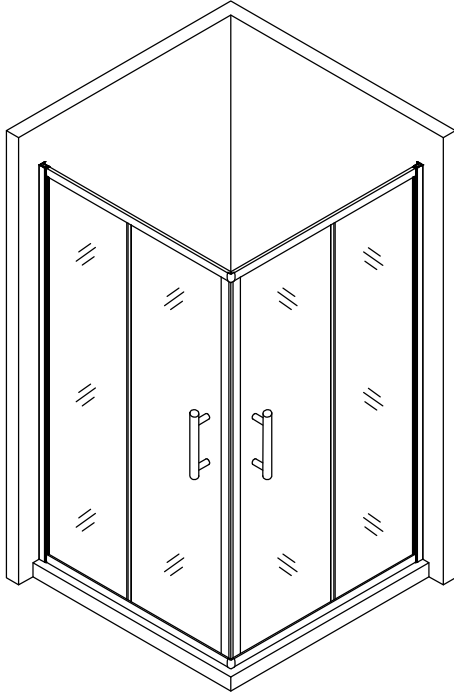


2

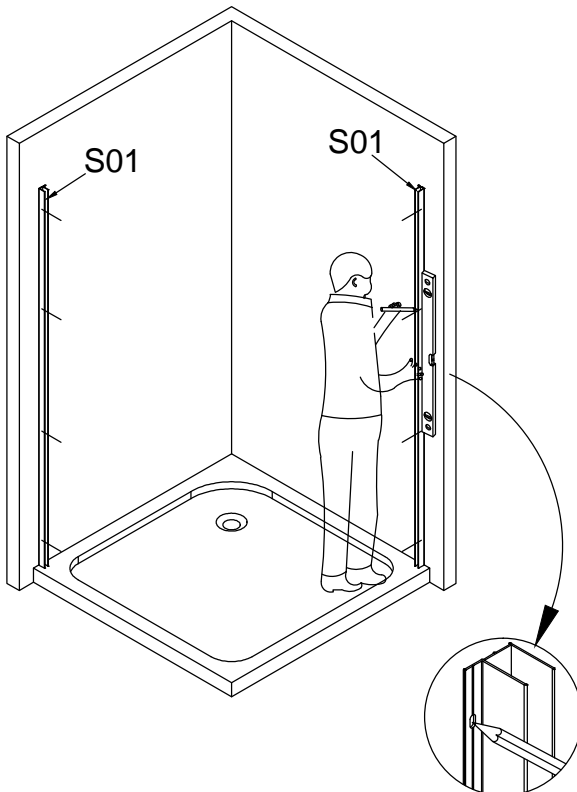 


3

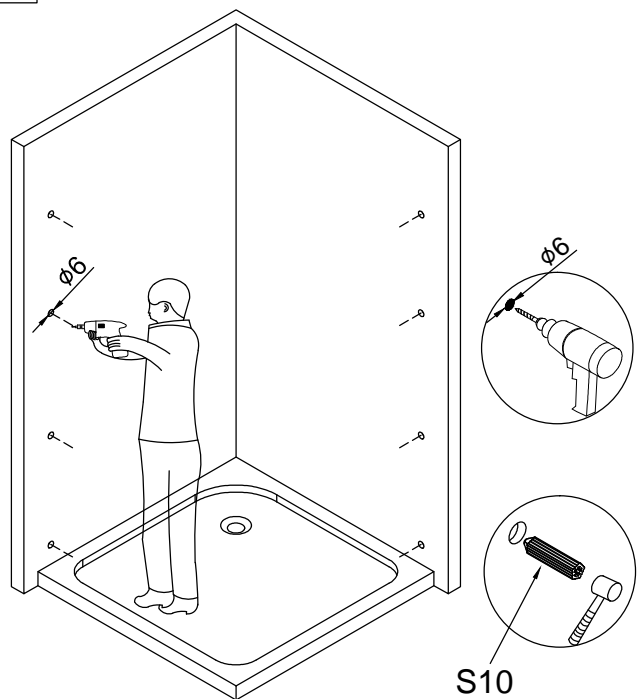 



4

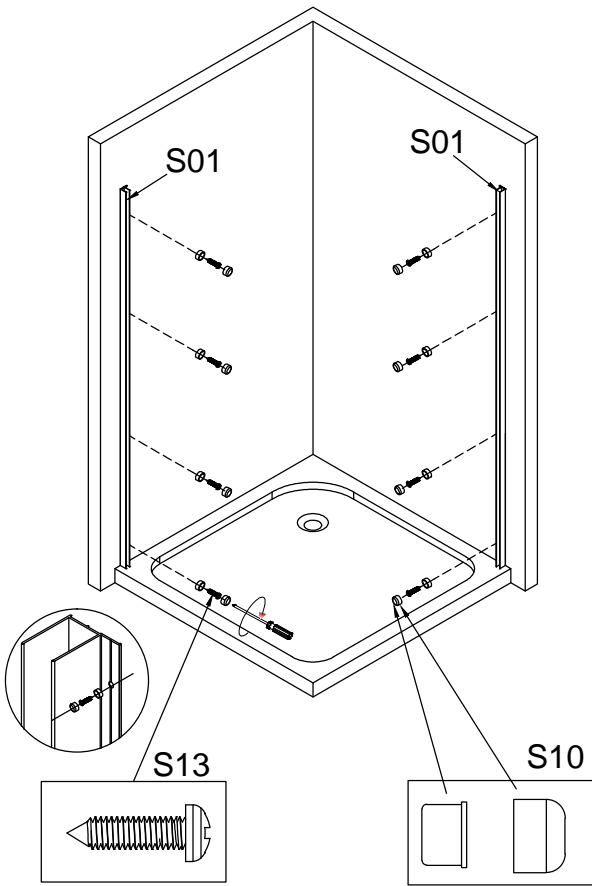 


5

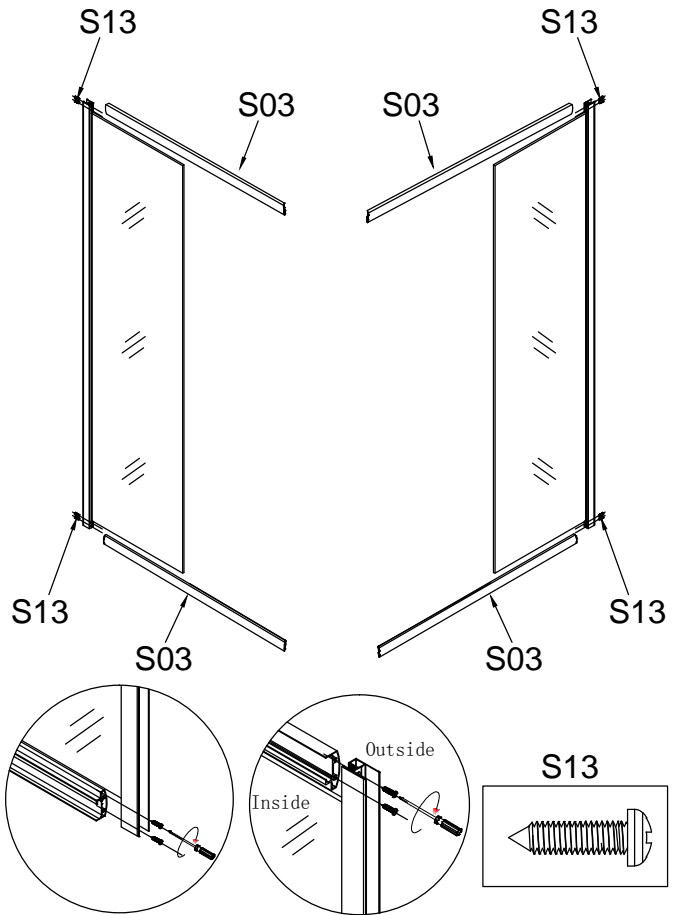 


6

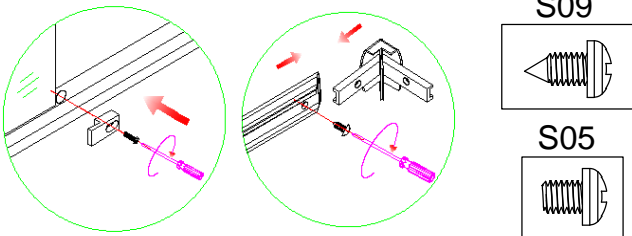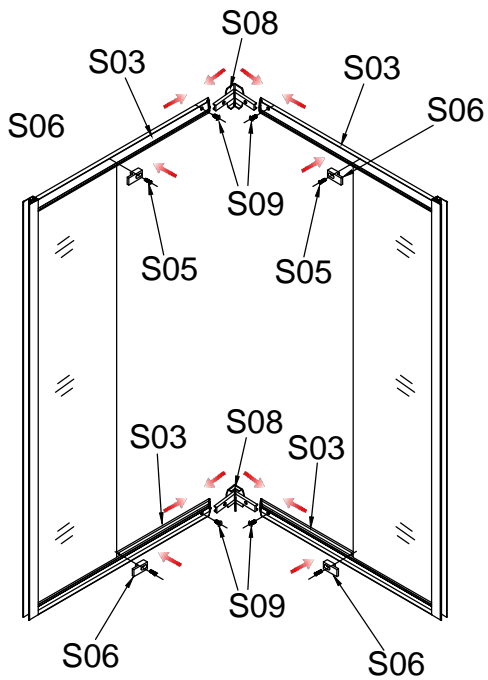  


7

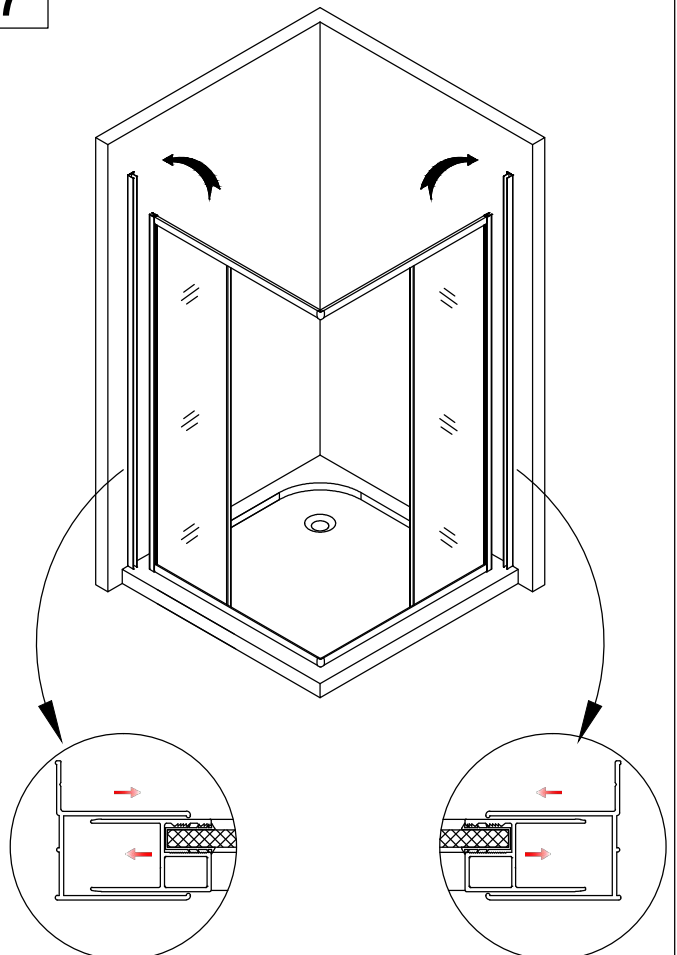 


8

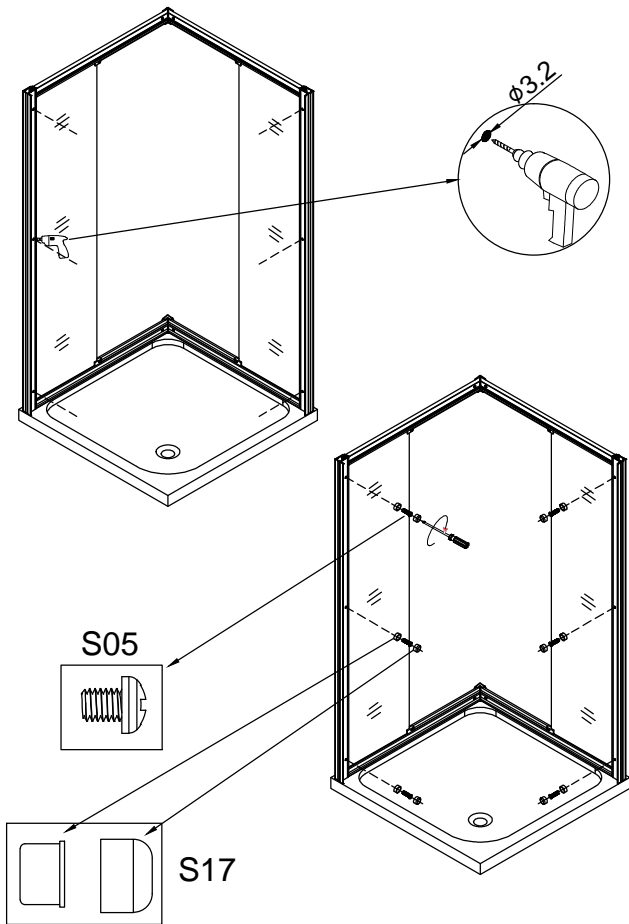 


9

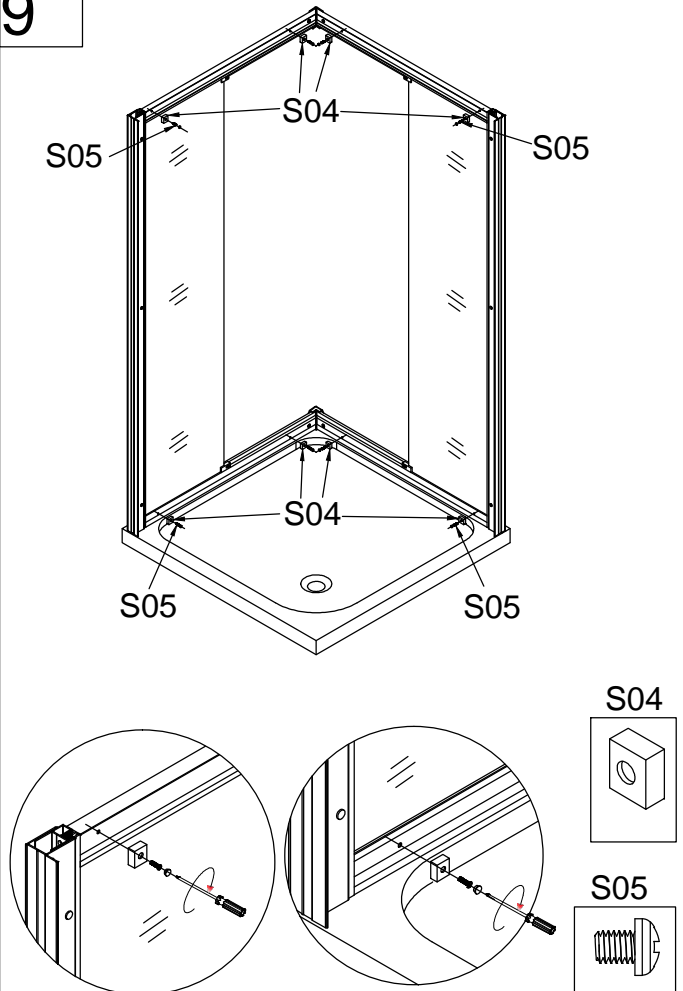 

10

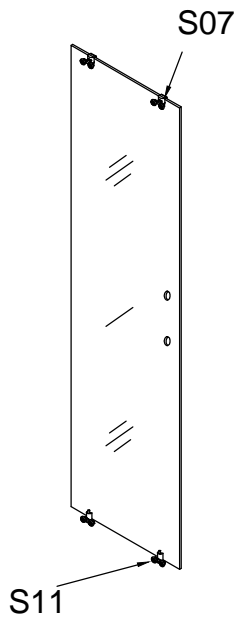 


11

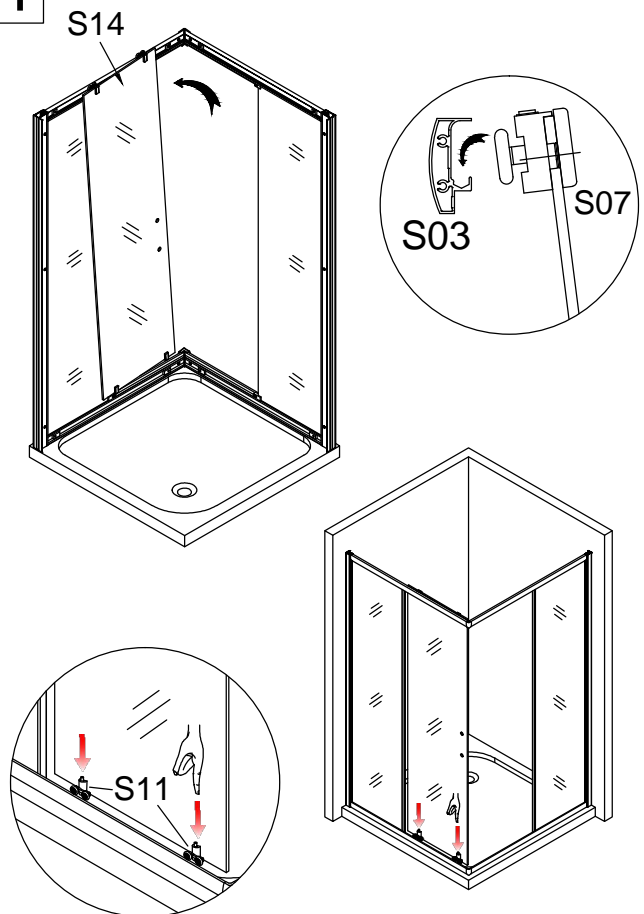 


TOP ROLLER

 BOTTOM ROLLER

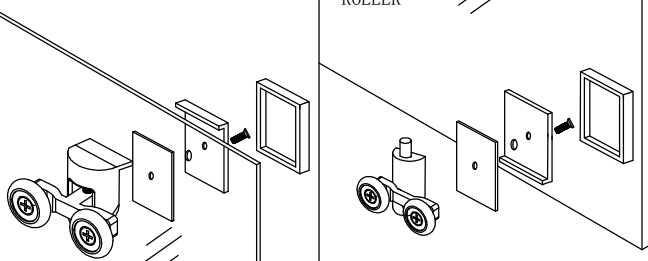

12



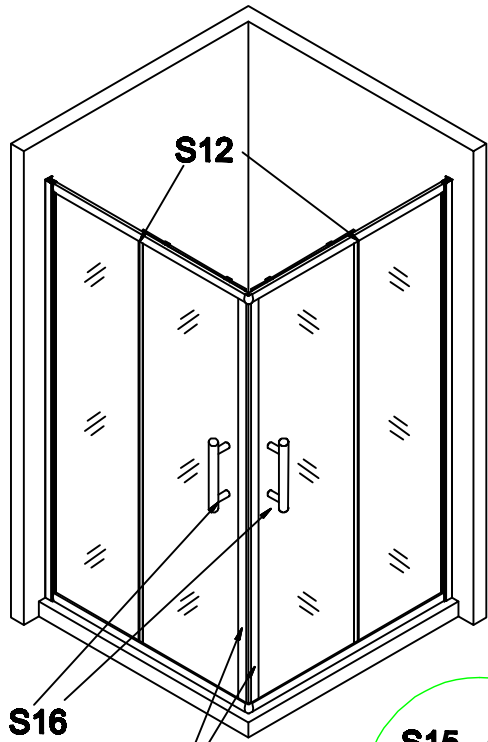 


S16



S15

S15

   S12

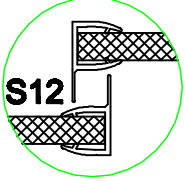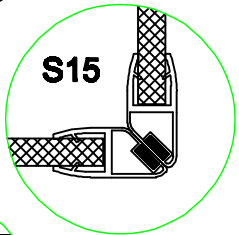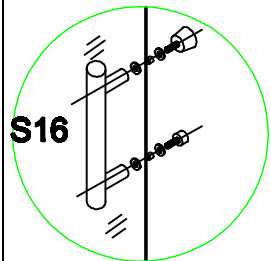


13

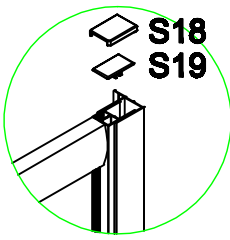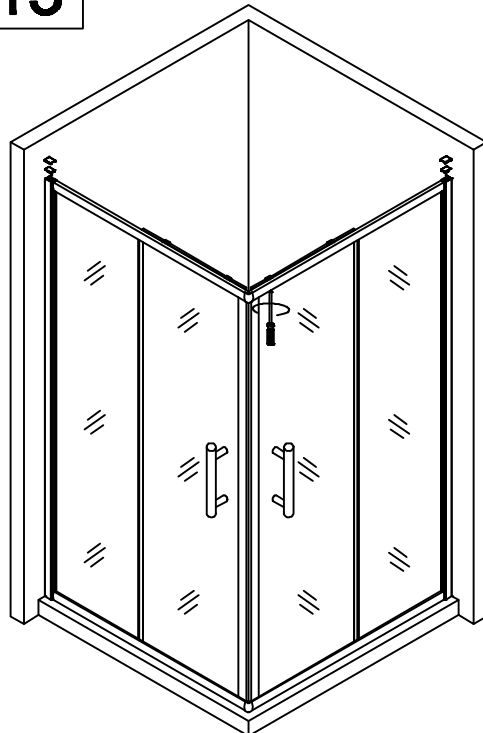  

S07

 Adjust the top rollers in the event of glass door is not leveled

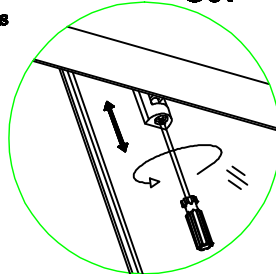

14

