


LED Linear High Bay


INSTRUCTION MANUAL


Please read instruction before commencing installation and retain for future references. Electrical products can cause death or injury, or damage to property. If in any doubt about the installation or use of this product, consult a competent electrician.

| Part No. | Power | Input Current | Input Voltage | Frequecy | PF | THD | Luminous Flux | ССТ | Ra |
|---------------------------|-------|------------------|---------------|----------------------|------|------|------------------|----------------------------------|-----|
| TS-LHB5-2FT80W-H1-XXK | 80W | 0.733A | AC120-277V | ⁻ 50/60HZ | >0.9 | <20% | 12000lm | 4000K 5000K 5700K 6500K | >80 |
| TS-LHB5-2FT110W-H1-XXK | 110W | 1.0A | | | | | 16500lm | | |
| TS-LHB5-2FT160W-H1-XXK | 160W | 1.467A | | | | | 24000lm | | |
| TS-LHB5-2FT165W-H1-XXK | 165W | 1.513A | | | | | 24750lm | | |
| TS-LHB5-2FT220W-H1-XXK | 220W | 2.017A | | | | | 33000lm | | |
| TS-LHB5-4FT225W-H1-XXK | 225W | 2.06A | | | | | 33750lm | | |
| TS-LHB5-4FT300W-H1-XXK | 300W | 2.75A | | | | | 45000lm | | |
| TS-LHB5-2FT80W-H1-MV-XXK | 80W | 0.733A | AC120-347V | | | | 12000lm | | |
| TS-LHB5-2FT110W-H1-MV-XXK | 110W | 1.0A | | | | | 16500lm | | |
| TS-LHB5-2FT160W-H1-MV-XXK | 160W | 1.467A | | | | | 24000lm | | |
| TS-LHB5-2FT165W-H1-MV-XXK | 165W | 1.513A | | | | | 24750lm | | |
| TS-LHB5-2FT220W-H1-MV-XXK | 220W | 2.017A | | | | | 33000lm | | |
| TS-LHB5-4FT225W-H1-MV-XXK | 225W | 2.06A | | | | | 33750lm | | |
| TS-LHB5-4FT300W-H1-MV-XXK | 300W | 2.75A | | | | | 45000lm | | |


Lifting Rope Installation

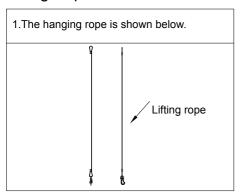

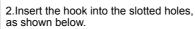


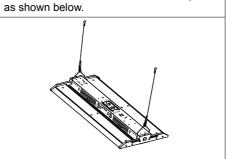


3. Hook the other end of Lifting rope to the ceiling anchor.

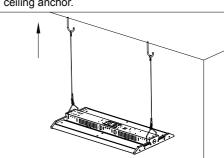


4. Turn off power, and make wiring connections with terminal cap(see wiring instrucion below).

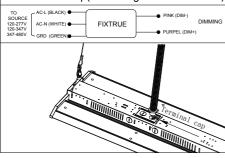

5.Insert the terminal cap and wires into the

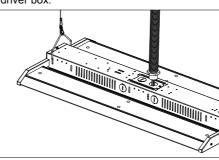

6.Insert the wire terminal joint to the wire entry. Installation completed.

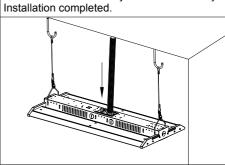

- **Note:** 1. The installation and maintenance must be completed by electricians or professionals.
 - 2.Please cut off the power before installation and maintenance.
 - 3. The thermally insulating material is not allowed to cover the fixture.
 - 4. Please keep away from the corrosive substance, and keep the fixture dry and clean.
 - 5. Working temperature: -40°F~113°F(-40°C~45°C), storage temperature: -40°F~158°F(-40°C~70°C).