


ARMANOV

Free-Float
Lock-N-Load Bushing

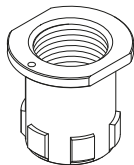


Armanov d.o.o.
Brezovce 9
1236 Trzin, Slovenija
Tel: +386 30 467 000
armanov.com

3. Tighten bushing against toolhead using supplied screw

4. Install Armanov Free-Float Lock Ring (optional)

1. Insert bushing into toolhead

2. Tighten clockwise using supplied wrench

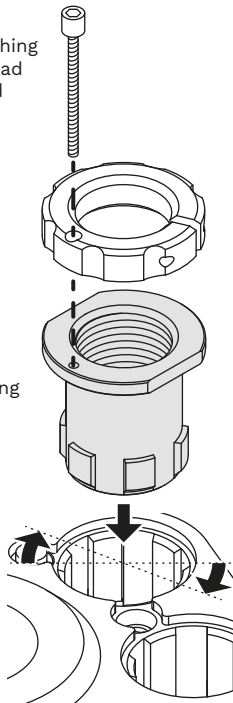

LNL bushings orientation

Set all bushings (sold separately) so that the threaded hole is oriented toward the toolhead center. Then rotate bushing on station #5 counter-clockwise for one lug. Use the supplied wrench.

