


Big Book Whiteboard Easel

Assembly Instructions

Contents:

- 1 x 120cm x 70cm Porcelain Whiteboard (A)
- 2 x Whiteboard Frame Arms (B)
- 2 x Legs (C)
- 1 x Shelf (D)
- 2 x Lockable Castors (E)
- 2 x Free-Rolling Castors (F)
- 8 x 10mm Self-Tapping Whiteboard Screws (G)
- 4 x 15mm Self-Tapping Shelf Screws (H)
- 2 x Pop-pins (I)
- 2 x Locking Nuts (J)

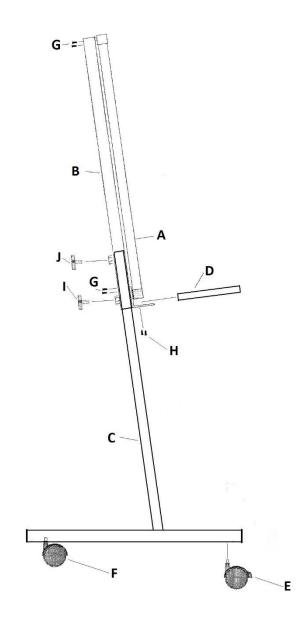

Assembly Instructions:

- 1. Place whiteboard face down on a table
- 2. Position Whiteboard Frame arms in position over pre-drilled holes in frame and affix in place using the 8 x 10mm whiteboard screws
- 3. Turn whiteboard over
- 4. Position shelf in place aligned with edge of whiteboard
- 5. Affix shelf using the 4 x 15mm shelf screws
- 6. Screw the 2 x lockable castors into the base of the legs at the front
- 7. Screw the 2 x free-rolling castors into the base of the legs at the back
- 8. Fully insert legs into the frame channels on the back of the whiteboard ensuring they are angled as shown in the diagram
- 9. Insert pop-pins into nut on the back of the whiteboard frame and locate into holes in legs
- 10. Move the easel into an upright position
- 11. Release the pop-pins. Raise the whiteboard to the desired position and allow the pop-pins to locate into the appropriate hole. Lock in place by tightening the locking nuts above.