



1. Remove the 4 rubber feet



2. Remove the 4 screws from the base plate



3. Grasp the motor clutch firmly with pliers



4. While still grasping the motor clutch,  
Use a flathead screwdriver and locate the center  
screw at the base of the motor assembly



5. Hold the clutch still with the pliers,  
and turn the screwdriver clockwise to loosen  
and remove the center screw.  
This should allow the clutch to be removed,