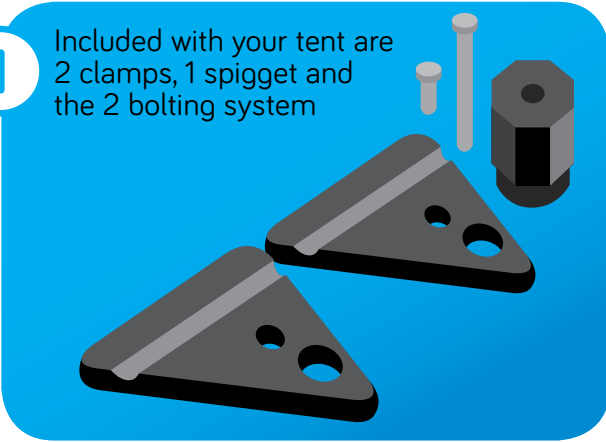
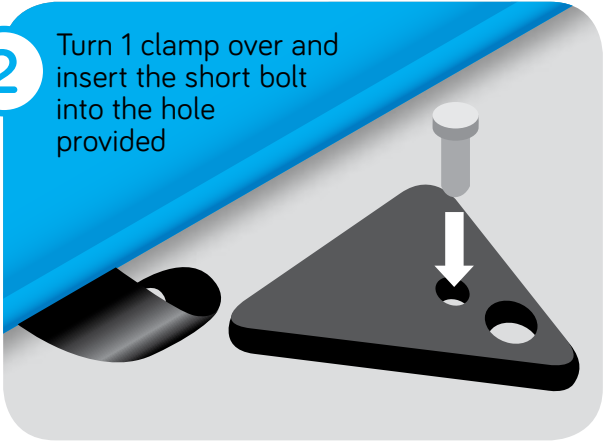
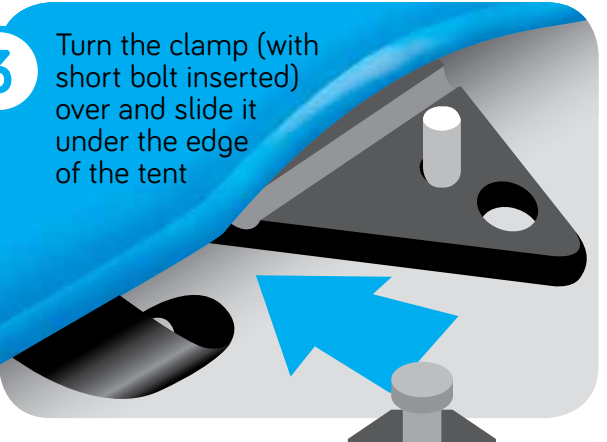


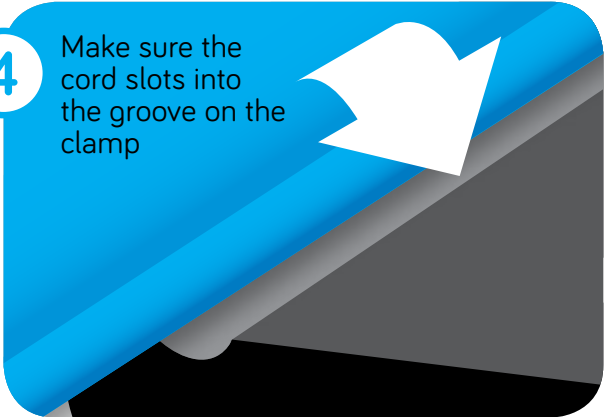
# EDGE CLAMP INSTALLATION

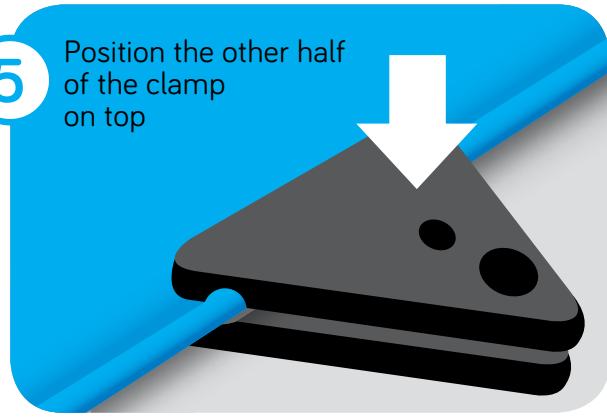
- 1 Included with your tent are 2 clamps, 1 spiget and the 2 bolting system

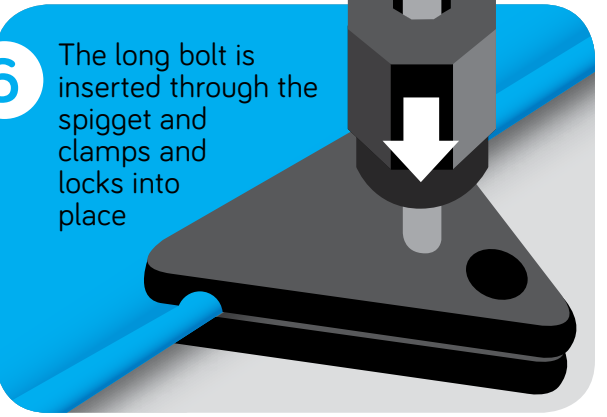

- 2 Turn 1 clamp over and insert the short bolt into the hole provided

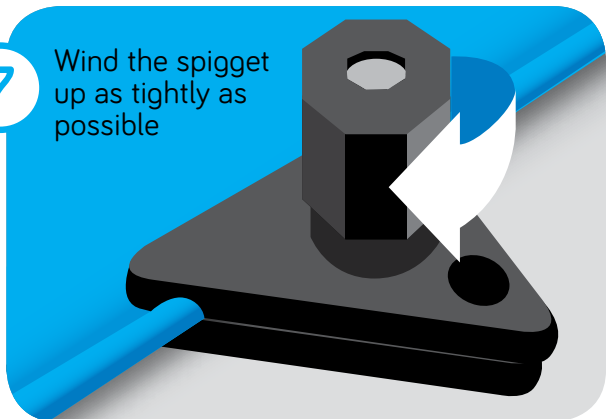

- 3 Turn the clamp (with short bolt inserted) over and slide it under the edge of the tent

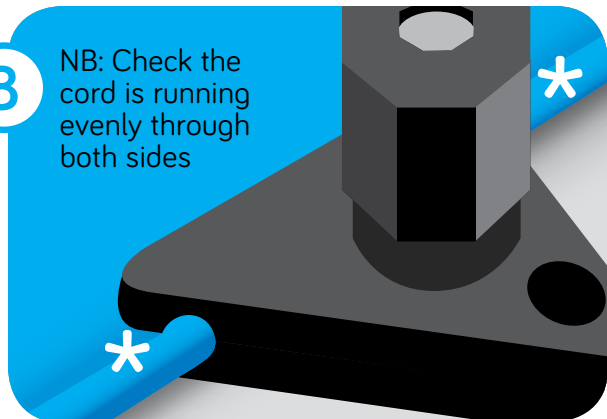

- 4 Make sure the cord slots into the groove on the clamp


- 5 Position the other half of the clamp on top


- 6 The long bolt is inserted through the spiget and clamps and locks into place


- 7 Wind the spiget up as tightly as possible


- 8 NB: Check the cord is running evenly through both sides


- 9 To adjust simply loosen, slide into position and tighten

