


# DESICCANT DRYER REPLACEMENT INSTRUCTIONS

1. Remove the door/tray on the left side of the unit by squeezing the two slides together and pulling the dryer assembly out.



2. Use a Small Flathead Screwdriver, or other thin and stiff bladed tool, to depress the Locking Tab on the inside of the Desiccant Dryer Door under the Cartridge.

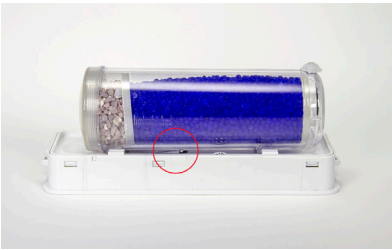

3. Continue holding the Locking Tab down and slide the Desiccant Dryer Cartridge upwards to remove it from the Desiccant Dryer Door.



4. Install a new cartridge filled with blue beads on the Desiccant Dryer Door.
5. Ensure that the small gasket is in place on the outlet of the cartridge and reinstall the Desiccant Dryer Door into the pureWash.
6. To purchase additional cartridges call Customer Service or visit [www.pureWash.com/parts](http://www.pureWash.com/parts)

The frequency for changing the Desiccant Dryer Cartridge will vary depending upon several factors, including amount of use of the machine and level of humidity.