
Convertible Helper Tower

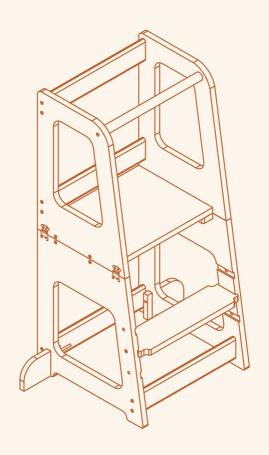

piccalio.

Safety first

Important! Read instructions before assembling and using the product.

WARNING

ALWAYS firmly lean the tower against the wall or counter.

FALL HAZARD: This product must be used under adult supervision at all times. Falls can happen suddenly if child is not restrained properly.


NEVER leave the child unattended.

AMPUTATION HAZARD Tower can fold or collapse if lock not fully engaged. Moving parts can amputate child's fingers. Keep fingers away from moving parts. Never allow child to fold or unfold the tower. Completely unfold the tower and fully engage locks before allowing child to stand on tower.

- This product is suitable for children 18 months +. Do not use the product if your child can't stand unaided.
- CHOKING HAZARD The screws and parts used for this product are small. These parts should be out of reach of children under 3 years old. Remove and dispose of all packaging materials and keep these out of reach of children.
- Check the product regularly for signs of wear and tear. Do not allow children to use the product if any part is damaged, missing or has loose screws. Check all fasteners regularly.
- Failure to follow these warnings and the instructions could result in serious injury or death.
- This product is designed to have only one child using this product at a time.
- Weight limit up to 175 lbs (80 kg).
- Keep this product away from heat sources or near wet surroundings.

Prevent tipping


Read carefully on how to prevent tipping.

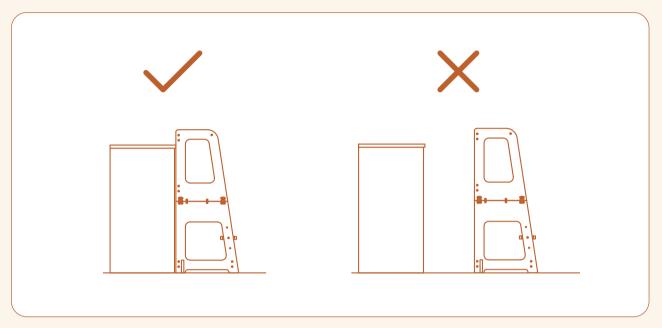


Always firmly lean the tower against the wall or counter.


- Use this product only on flat surfaces.
- Do not use socks or slippery shoes while using this product.
- This product must be used under adult supervision at all times.

Part inventory

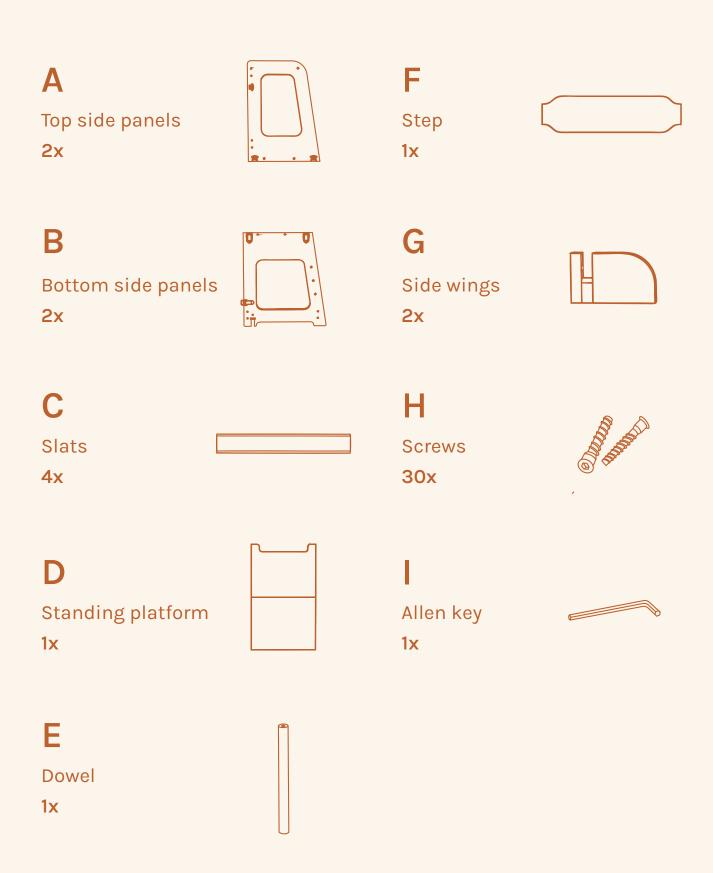

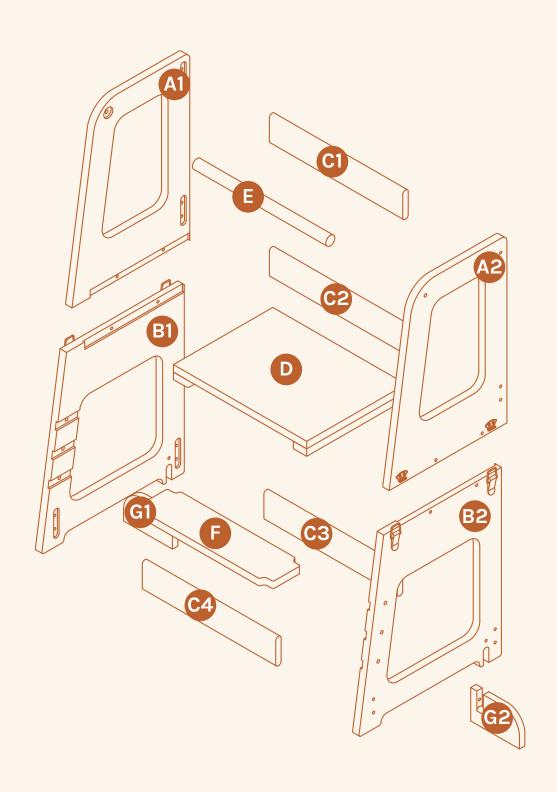


Place top side panels (A) side-by-side and screw in dowel (E) and two slats (C) using Allen Key (I). Tighten each screw a little at a time until they are secure.

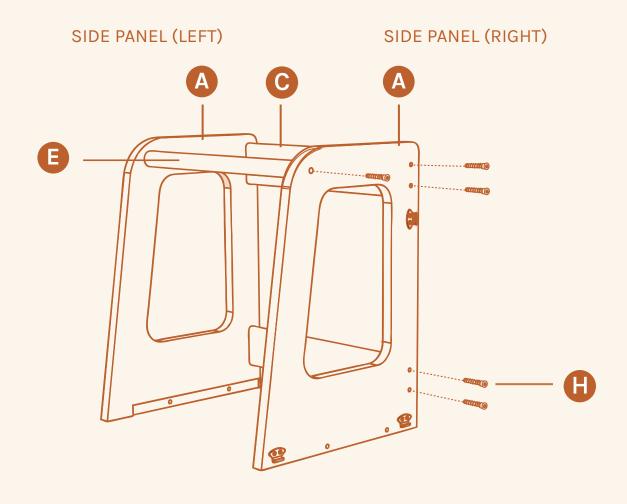

Tower Top Half


Place bottom side panels (B) side-by-side and screw in step bar (F) and two slats (C). Tighten each screw a little at a time until they are secure.

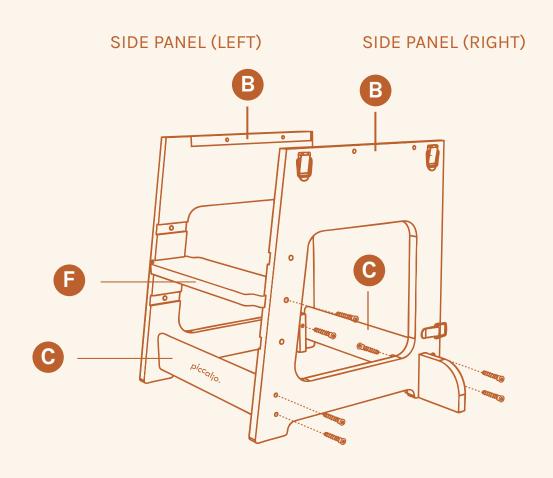

Tower Bottom Half


Fold seating platform (D) in half. Sit (D) on top of bottom section, making sure indented part is facing down and towards the step (F).

Screw panels (B) into (D). Screw in side wings (G) on each side.

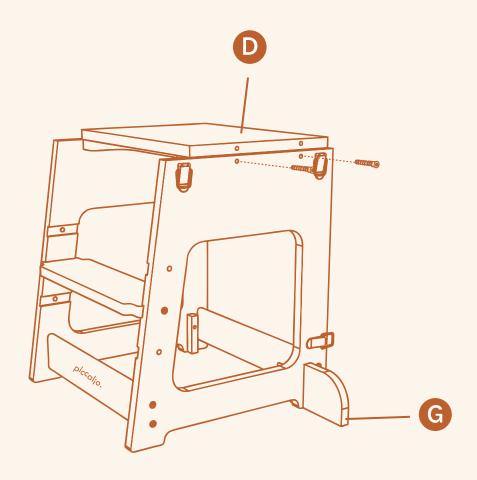


Tower Bottom Half

Sit Tower Top Half on Tower Bottom Half. Screw panels (A) into standing platform (D).

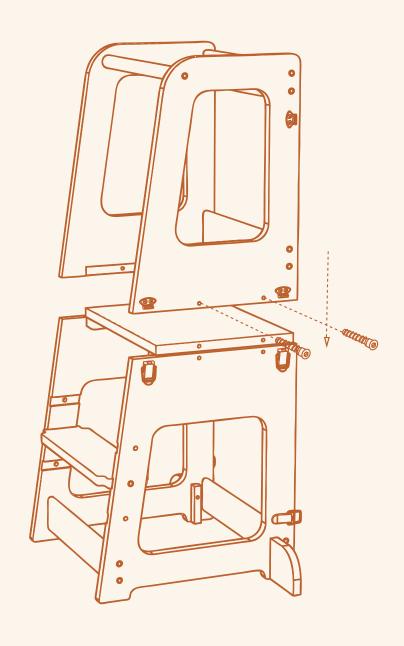

Use locks on the sides to unlock tower to convert into a table. Once in table position lock the sides to secure position.

Hardware may loosen over time, check the bolts regularly and tighten if necessary.

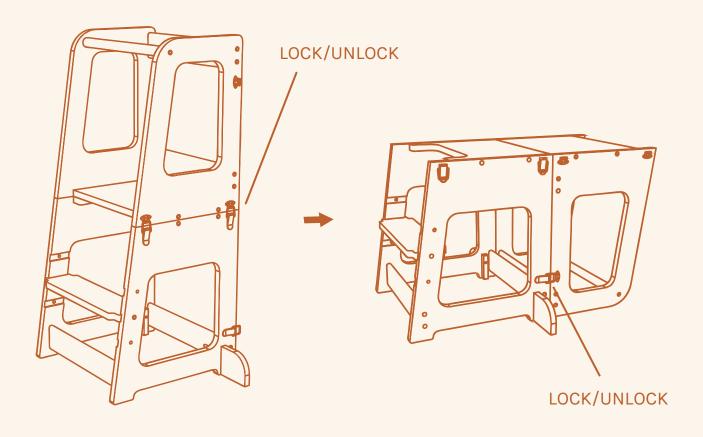

Warranty

Wooden toys and furniture are generally more durable than plastic toys, but they can break sometimes. Although wooden toys and furniture last many years when treated with care, Piccalio products are not guaranteed against damage due to play and use.

Products sold by Piccalio are guaranteed against defects in materials and workmanship for a period of twelve (12) months from the date of original purchase. The warranty is valid only under normal use of the product and for the use for which it is normally intended.

To make a claim, contact us at hello@piccalio.com and we will gladly guide you through the procedure.

piccalio.

FOR QUESTIONS CONTACT:
HELLO@PICCALIO.COM