
Foldable Helper Tower

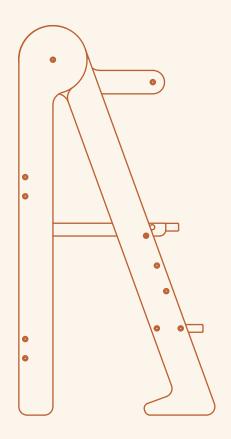

piccalio.

Safety first

Important! Read instructions before assembling and using the product.

WARNING

ALWAYS firmly lean the tower against the wall or counter.


NEVER leave child unattended.

FALL HAZARD: This product must be used under adult supervision at all times. Falls can happen suddenly if child is not restrained properly. **NEVER** leave the child unattended.


- This product must be assembled by an adult.
- This product is suitable for children 18 months +. Do not use the product if your child cannot stand unaided.
- CHOKING HAZARD The screws and parts used for this product are small. These parts should be out of reach of children under 3 years old. Remove and dispose of all packaging materials and keep these out of reach of children.
- Check the product regularly for signs of wear and tear. Do not allow children to use the product if any part is damaged, missing or has loose screws. Check all fasteners regularly.
- Failure to follow these warnings and the instructions could result in serious injury or death.
- This product is designed to have only one child using this product at a time.
- Weight limit up to 175 lbs (80 kg).
- Keep this product away from heat sources or near wet surroundings.

Prevent tipping

Read carefully on how to prevent tipping.

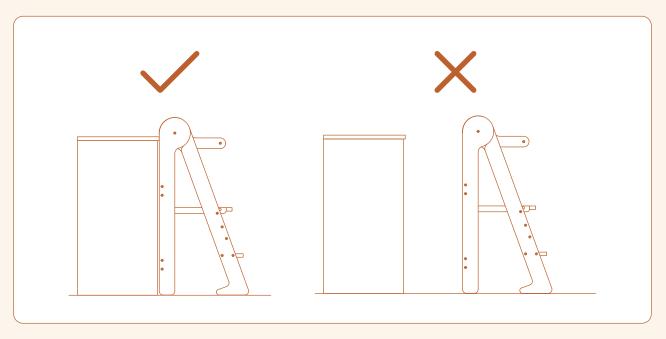


Always firmly lean the tower against the wall or counter.

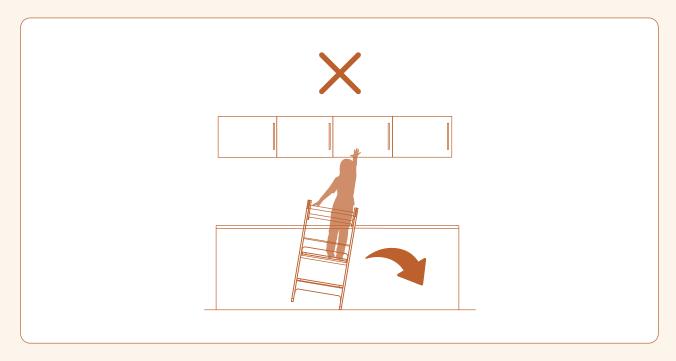

No leaning or pushing weight onto the sides.

Part inventory

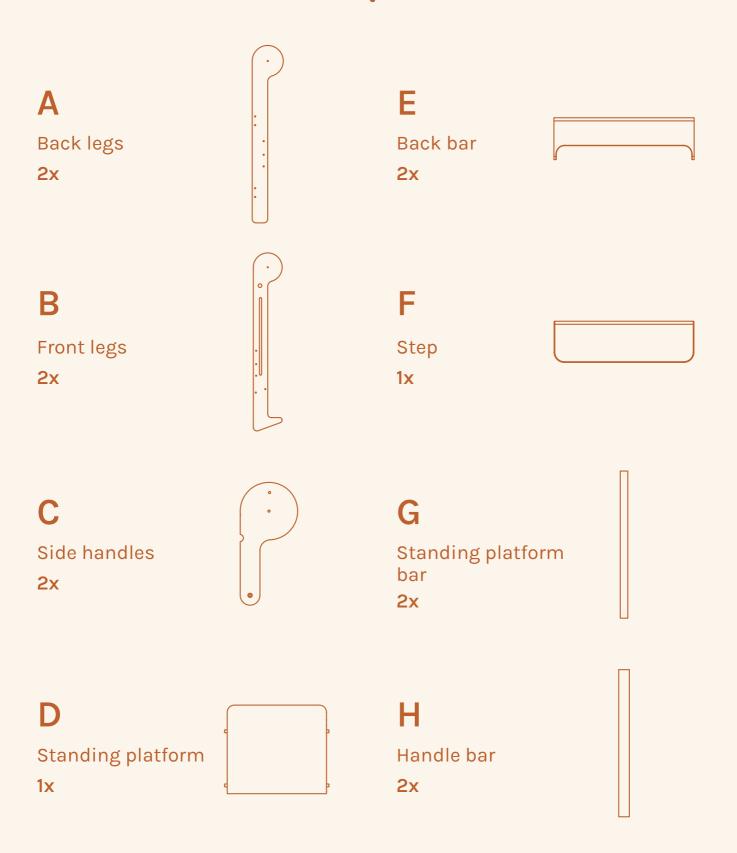

Hardware inventory

Allen key

2x



M

Large rings

2x



Long bolts

18x



N

Small rings

2x



K

Short bolts

2x



O

Metal pins


4x




Sock bolts

2x




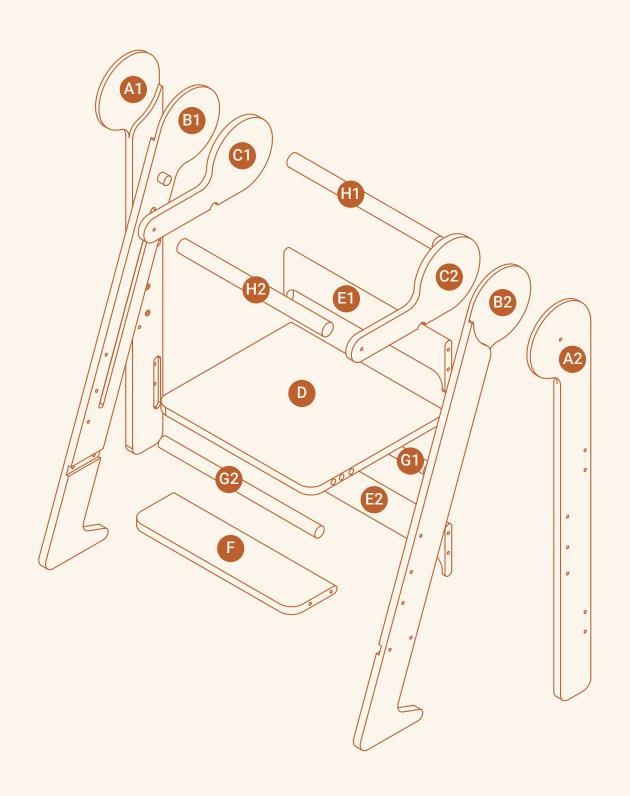

Screw in 2 x Part E into Part A.

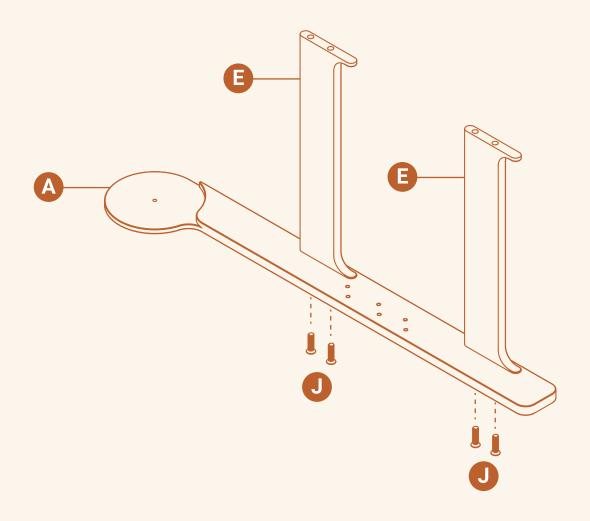


Place Part B on Part A, screw Part F into Part B.

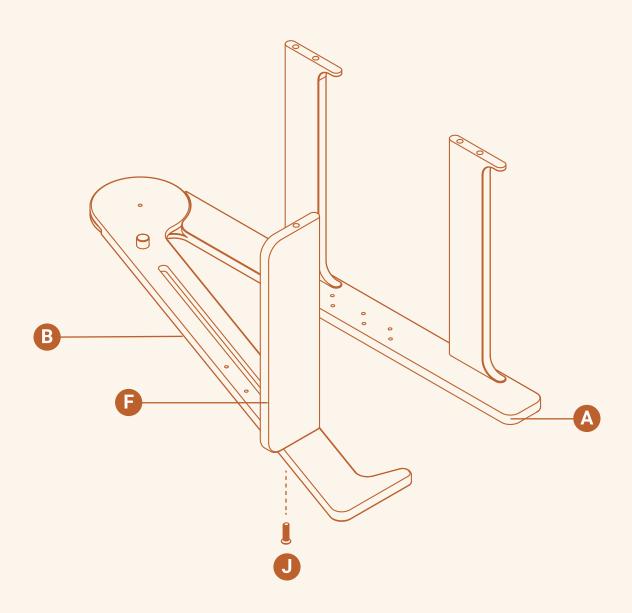


Choose the height setting using symbol guide below.

Level 1 (Highest), Level 2 (Middle), Level 3 (Lowest).

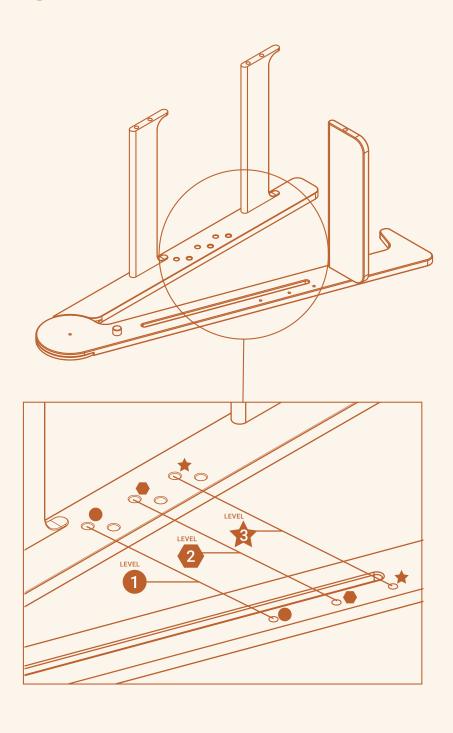


Screw in 2x Part G into legs Part B and Part A.


Note: Part G should be inserted in the lower left hole of Part A of the corresponding level chosen.

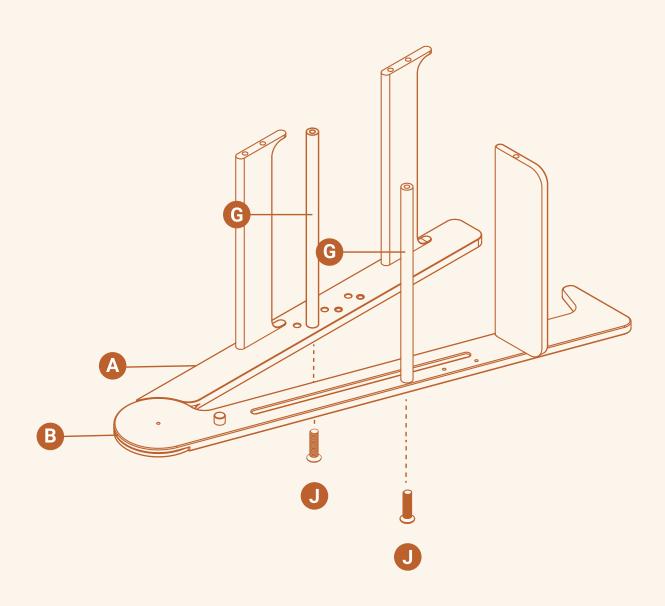

Insert 2x Part O on each side of Part D. Using the symbol guide below Part O should be inserted into Part D to the level chosen in Step 3.

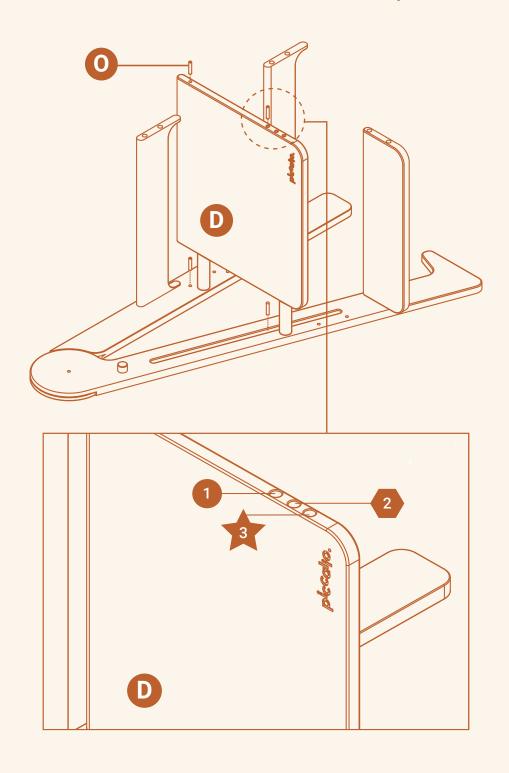


Insert Part D into Part A and B using Part O.

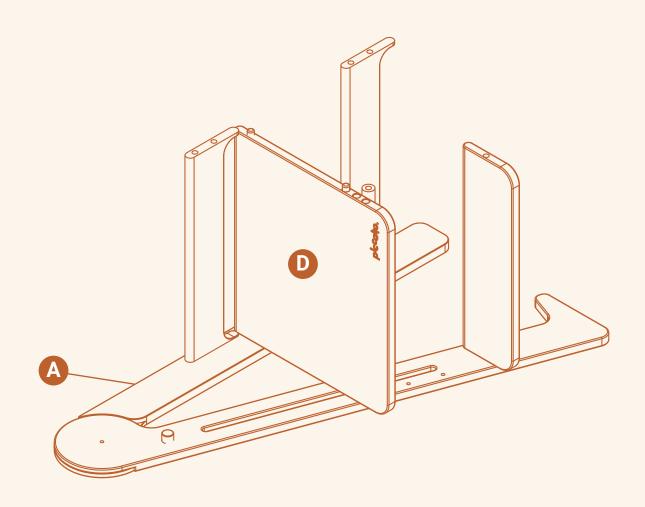


Important: To ensure that the tower folds fully once assembled, Steps 3 and 5 must be assembled correctly.


Screw second Part A onto Part E x 2 and Part G.

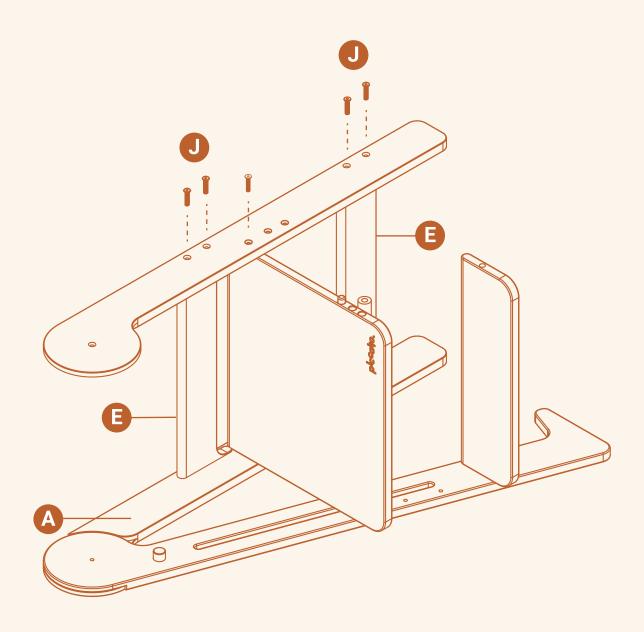


Screw on second Part B onto Part G and F.

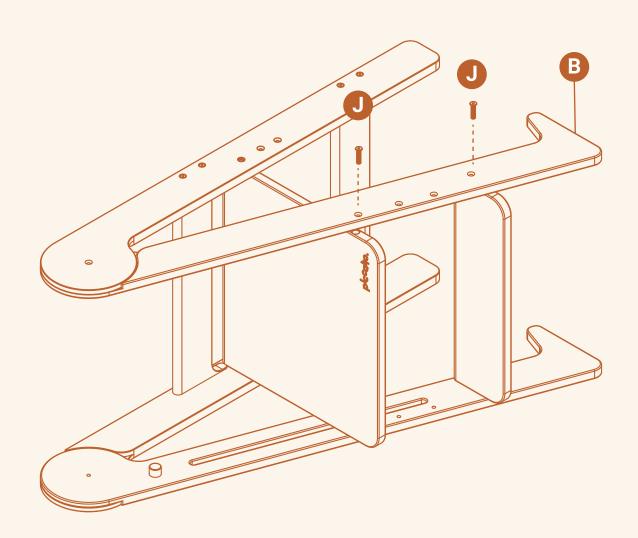

Connect both C parts with Part H.

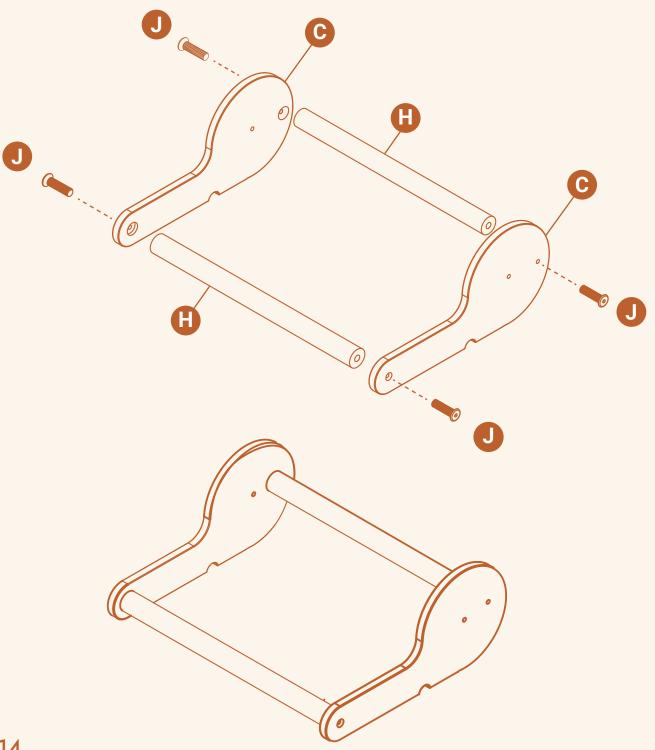


Connect handle from Step 9 to main body on both sides.

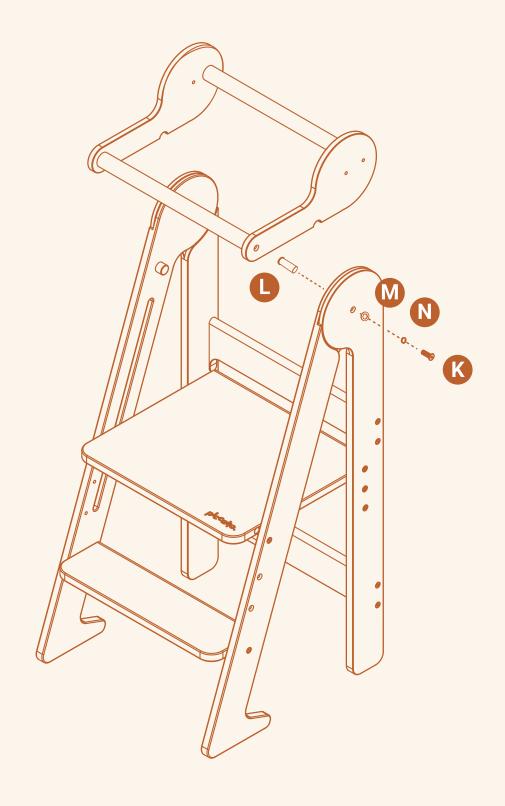


Step 10 enlargement

Use 2x Allen Keys for L and J, tightening in opposite directions.

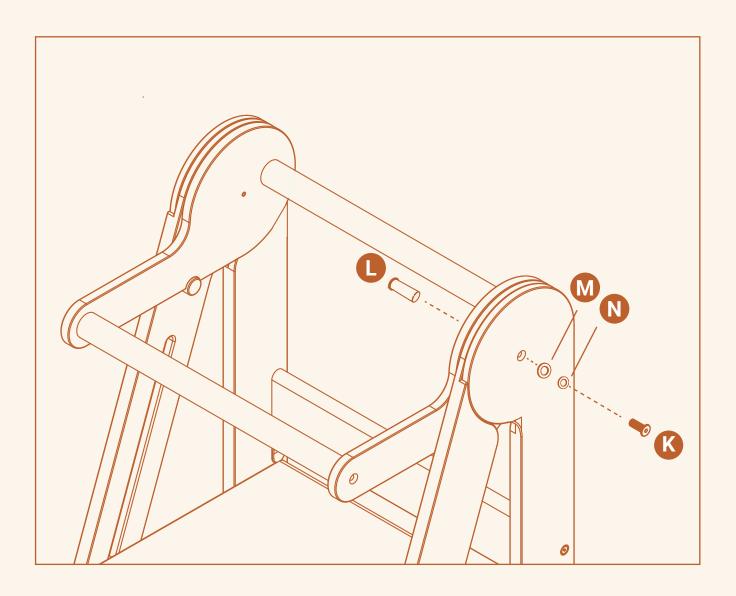

How to fold the tower

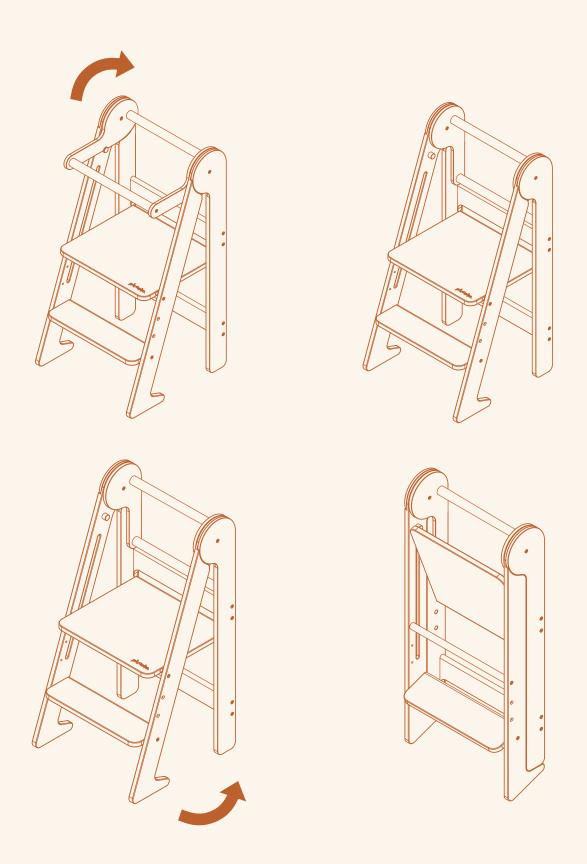

Warranty

Wooden toys and furniture are generally more durable than plastic toys, but they can break sometimes. Although wooden toys and furniture last many years when treated with care, Piccalio products are not guaranteed against damage due to play and use.

Products sold by Piccalio are guaranteed against defects in materials and workmanship for a period of twelve (12) months from the date of original purchase. The warranty is valid only under normal use of the product and for the use for which it is normally intended.

To make a claim, contact us at hello@piccalio.com and we will gladly guide you through the procedure.

Read more piccalio.com/pages/warranty

piccalio.

FOR QUESTIONS CONTACT:
HELLO@PICCALIO.COM