
ASSEMBLY INSTRUCTIONS

Climber Pikler Triangle Set

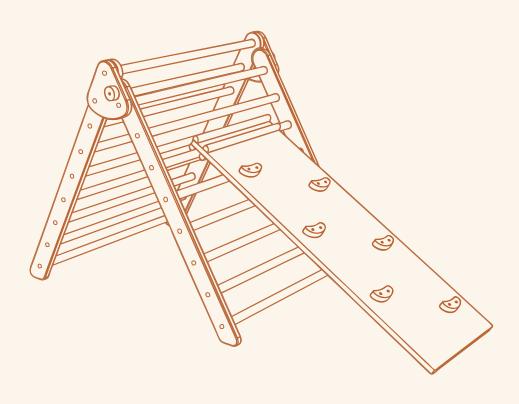

piccalio.

Safety first

Important! Read instructions before assembling and using the product.

WARNING

FALL HAZARD: This product must be used under adult supervision at all times. Falls can happen suddenly if child is not restrained properly.

NEVER leave the child unattended. Stay near and watch child during use. Children should always be supervised during playtime and other activities.

• Use this product only on flat surfaces. Do not use socks or slippery shoes while using this product.

• This product must be assembled by an adult.

• CHOKING HAZARD - The screws and parts used for this product are small. These parts should be out of reach of children under 3 years old.


• Before giving the item to the children, remove and dispose of all packaging materials that are not part of the item and keep these out of reach of children.

• Check the product regularly for signs of wear and tear. Do not allow children to play with the product if any part is damaged, missing or has loose screws. Check all fasteners regularly.


• Failure to follow these warnings and the instructions could result in serious injury or death.

- Weight limit up to 132 lbs (60 kg)
- Keep this product away from heat sources
- Do not leave this product outdoors or near wet surroundings

Part inventory

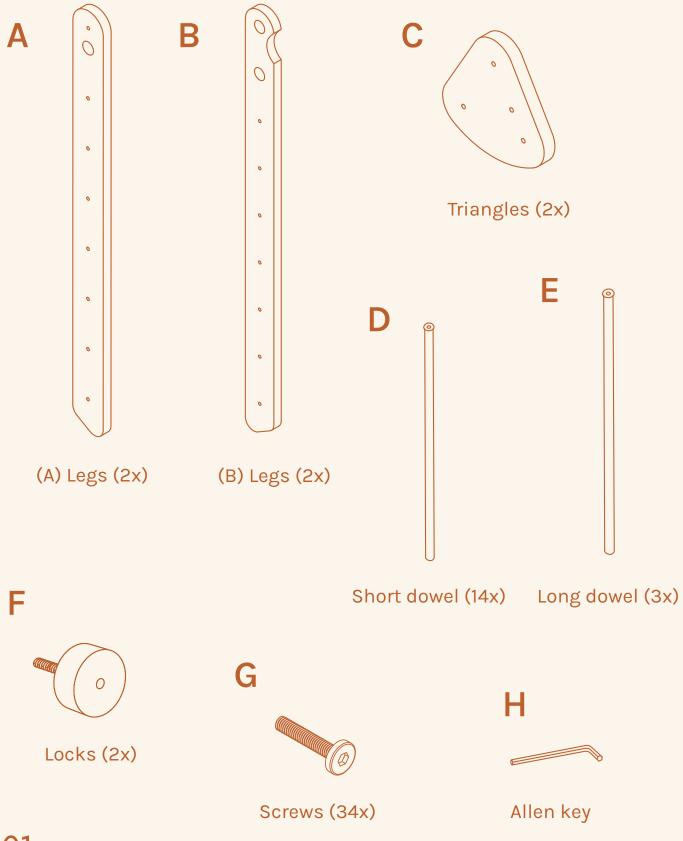


01

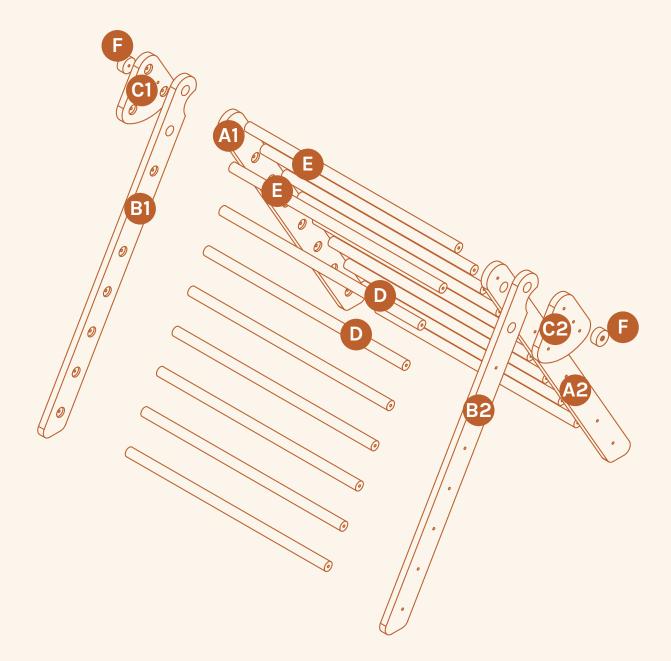


Step 1

Place side-by-side legs (B) and screw in short dowels (D) using Allen Key (H). Tighten each screw a little at a time until they are secure. Insert two long dowels (E) through top open holes on legs. Screw in triangles (C) on each side.

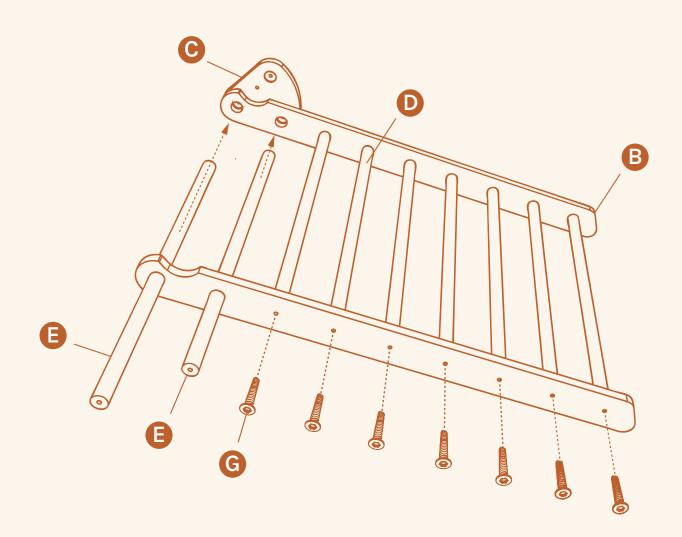


Step 2

Place side-by-side legs (A) and screw in remaining short dowels (D) on both sides. Tighten each screw a little at a time until they are secure. Insert remaining long dowel (E) through top open hole.

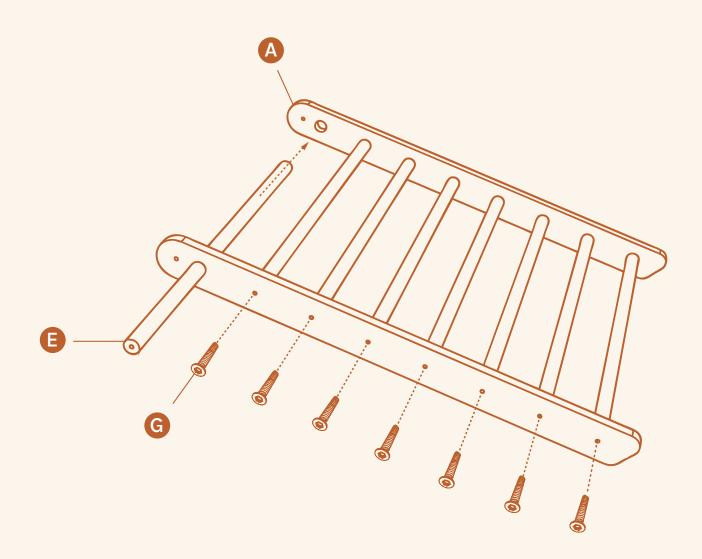




Connect step 1 and step 2 together screwing in remaing hole in both triangles (C).

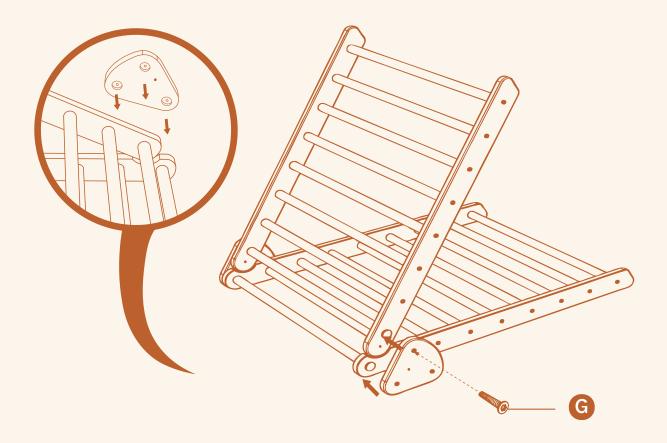




Screw locks (F) on both sides to lock the Mini Climber when in Triangle position. When you wish to store it away unscrew the locks on both sides and fold.

Hardware may loosen over time, check the bolts regularly and thighten if necessary.

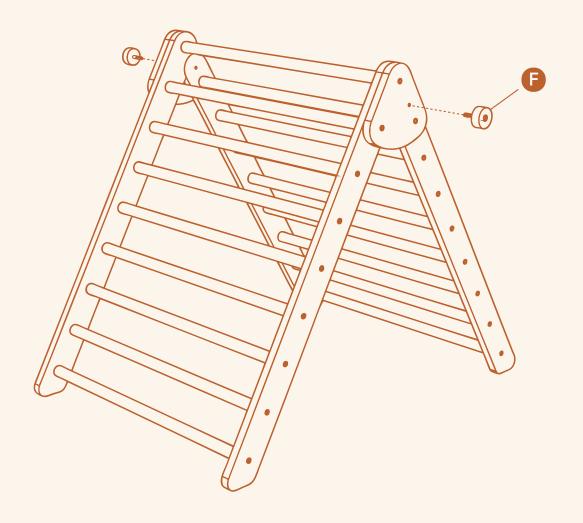



Rockwall/Slide Ramp

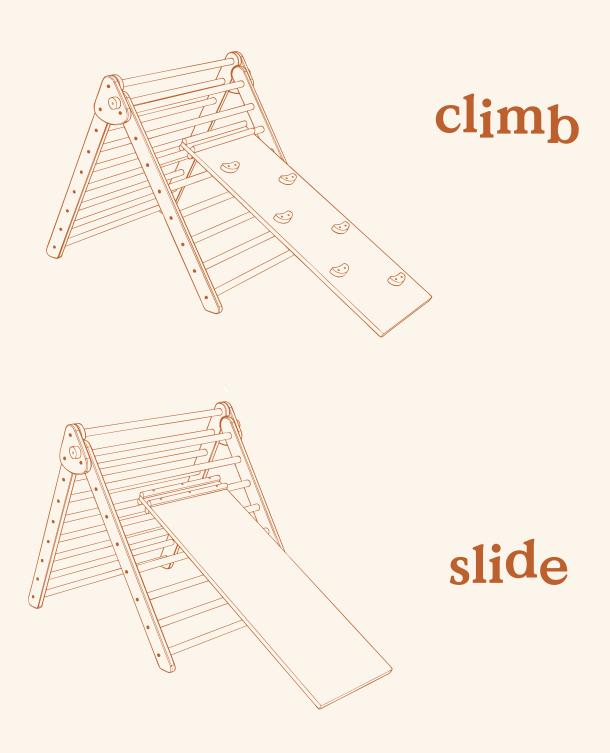

Warranty

Wooden toys and furniture are generally more durable than plastic toys, but they can break sometimes. Although wooden toys and furniture last many years when treated with care, Piccalio products are not guaranteed against damage due to play and use.

Products sold by Piccalio are guaranteed against defects in materials and workmanship for a period of twelve (12) months from the date of original purchase. The warranty is valid only under normal use of the product and for the use for which it is normally intended.

To make a claim, contact us at hello@piccalio.com and we will gladly guide you through the procedure.

Read more piccalio.com/pages/warranty

PICCALIO.COM

piccalio.

FOR QUESTIONS CONTACT: HELLO@PICCALIO.COM