



INTERCOM | VIDEO | SECURITY | HOME AUTOMATION

HOW TO CONFIGURE YOUR BLE SMART READER

NOTE: Depending on the BLE Smart Reader you purchased some formats may not be available.

STEP 1

You will need to Download the **"U-Prox Mobile Config"** App from the Google Play or Apple App Store.



U-Prox Mobile Config a2softin

STEP 2

Short the **green & white wires** together on your reader. Then power cycle the reader. (Keep the green & white wires shorted).

NOTE: If you have already programmed an engineer code on the reader you can skip this step.



STEP 3

<image>





STEP 5







It should look like: xxxx.profile

<u>@</u>

1026.prof 0.4 KB



press the More button) to see the app displayed.

NOTE: You may need to repeat Steps Three to Five after re-opening the app.





STEP 11	FOR APPLE USERS: To save your settings press the Download button.	U-Prox Mini 2.49 SETTINGS SAVE TEMPLATE RESTORE TEMPLATE SAVE TO DEVICE SAVE TO DEVICE	FOR ANDROID USERS: To save your configuration you will need to press the back button on your Android device to bring up the menu displayed below. Then press the "Save To Device" button.
STEP 12	FOR APPLE USERS: Then to exit the settings preview press the Disconnect icon.	U-Prox Mini 2.49 SETTINGS SAVE TEMPLATE RESTORE TEMPLATE SAVE TO DEVICE Solito	FOR ANDROID USERS: Then to exit the settings preview press the Red Cross icon.