





Bticino Keypad Module Programming Guide

1. Create Admin Code

-Take off keypad cover





-hold programming button until it starts blinking (When green led is flashing programming mode is on)

Press  7590  and enter admin code again to confirm  7590 

-wait till green led stops flashing or press Programming button 1 time to turn off programming mode

2. Create Passcode





- Enter Admin code to turn on programming mode.

-Enter passcode  0000  and enter passcode again to confirm  0000 

3. Replace Passcode







- Hold  C : till it makes a beep

-Enter old passcode 0000 

-Enter new passcode  1111  and enter new passcode again to confirm  1111 

4. Delete all Passcodes

-Enter admin code 3 times in a row

-  7590   7590   7590 

5. Delete All Admin Codes

- Hold down programming button

- Wait 10 beeps and when the red LED stops blinking then release button

