

# XR Cheat Sheet

## Default Pin Codes

Installer (user 256) - **9713**

Master (user 1) - **1234**

### Common Programming:

Voltage Siren output	Menu > Programming > System > Siren Options
Box Tamper	Menu > Programming > System > General options
Zone doubling	Menu > Programming > System > General options
Forced arming	Menu > Programming > Area > Area Options
Time & Date	Menu > Time > Time & Date (if connected to ultrasync this function is automatic)
Entry exit timer	Menu > Time > Entry Exit Time

### Check panel serial via Xr Series codepad:

Menu > Settings > Status > select Panel Details > go to next page

### To enable App, internet connection must be available and the Ultrasync Passcode must be setup:

Ultrasync Passcode      Menu > Programming > Ultrasync > Web Access Passcode

### Indicator devices – Negatives are wired into Ouputs , Positives are wired into Aux+

External Siren - **Bell**

Strobe – **OP1-** (output 1)

Piezo (internal) – **OP2-** (output 2)

### Activor Universal Remote Kit

-Wire Remote kit into Legacy Bus (**POS/COM/DATA**)

-Program User 2 with Pin code

### ITI Keyfobs

XR (max 8)              learns into Inputs 25 – 32

XRpro (max 16)        learns into inputs 177 - 192

### Back to base Monitoring settings (Control Room will need to register unit on their Ultrasync Portal)

Menu > Programming > Channel > (Channel 1) > Account Number (set 4 digit no.)

Menu > Programming > Channel > (Channel 1) > Format (set to Ultrasync)

Control Room List:



DAS TRAINING



# ZANKAP

INTERCOM | VIDEO | SECURITY | HOME AUTOMATION