




HSLD Rack Installation Manual: Sprinter 170" WB

SKU: 1006-MK51-00

Date: 8/14/23

Revision: 0

Rack Features

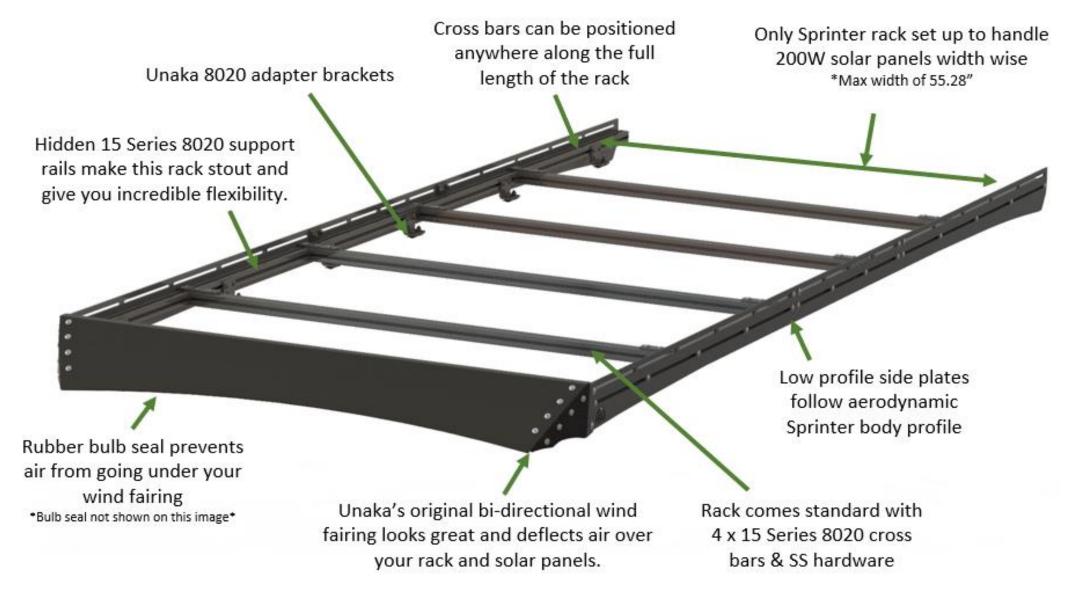

**Note: The image above is for the Sprinter 170" WB. The 144" WB and 170" WB Extended contain different side rail lengths, and different quantities of brackets and cross bars

Rack Accessories

The HSLD rack does not include any additional accessories, and this manual does not include the installation of these accessories. Failure to review accessory installation manuals may result in extended installation time.

Use this link to find the manuals for any accessories and Review them before beginning this installation. https://unakagearco.com/pages/manuals

Accessories Included:

• Top mount solar panel brackets for up to 400W of solar (16 brackets total)

Some of the common accessories purchased separately are listed below.

- Flush Mount Solar Panel Brackets: If you plan to install smaller solar panels on this rack, using flush mount brackets instead of top mount brackets may be desired
- Extrusion Tie Down Kits
- Sprinter Side Mount Ladder
- Awning Adapters
- More to come!

Safety and PPE

Ladders: Installation of this roof rack requires two ladders for two people to help with the installation. Make sure that you ladders are tall enough, and that you have a level area to use them on. Accessing the roof of your van will put you at extreme risk to potential falls which can result in injury or death.

Warning: Ladders are dangerous and should only be used with appropriate training. Incorrect use of ladders can result in injury or death.

Fall Protection: Accessing the roof of your van will put you at extreme risk to potential falls which can result in injury or death. Appropriate fall protection should be used when accessing your van roof. For general use situations, OSHA requires that fall protection be provided at elevations of four feet in general industry workplaces.

Required Tools

Required Tools

- 1 to 2 tall sturdy ladders
- Standard set of box wrenches
- Standard socket set
- 5/32" and 3/16" Allen Wrench
- Torque Wrench
- Measuring Tape

Loctite & Anti-seize

A small tube of Blue Loctite 242 and Loctite anti-seize are provided with each kit. Follow manufactures recommendation for application and safety.

Blue Loctite 242

Apply this to any bolt that is not used with a nylock nut

Loctite Anti-seize

 Apply a dab of anti-seize to the side of each bolt that will be paired with a nylock nut. Nylock nuts have a small plastic insert to make them vibration resistant.



Loctite 242



Loctite C5-A Anti-Seize

Installation Overview

For notes on solar panel selection or installation jump to the end of this manual

- 1. Layout and identify all parts
 - Keep hardware separate, some types may be only slightly different and are not interchangeable
- 2. Assemble side rail assemblies
 - Add additional hardware to top of extrusion slot as needed for flush mount solar panel brackets or other accessories
- 3. Assemble cross bar assemblies
 - Add additional hardware to top of extrusion slot as needed for flush mount solar panel brackets or other accessories
- 4. Assemble wind fairing
- 5. Loosely install rack brackets on the van
- 6. Loosely install side rails onto roof rack brackets on van
- 7. Loosely install cross bars on rack
- 8. Loosely install wind fairing to rack side rails
- 9. Use cross bars and wind fairing to set the spacing of the side rails, ensuring they are parallel
- 10. Snug up cross bar and wind fairing hardware making rack fairly uniform
- 11. Tighten and torque bolts securing rack to rack brackets
- 12. Loosen and adjust cross bar positions as needed, install solar panels, and re-tighten everything
- 13. Torque all hardware

Main Rack Parts

This rack kit is typically shipped in 3 separate boxes

ITEM							-					
NO.	Manufacturer	PART NUMBER	DESCRIPTION	MATERIAL	QTY.					REVISIONS		
1	Unaka Gear Co.	1006-MA52-00-WFB REV 1	SPRINTER HSLD HIGH ROOF WIND FAIRING BOX	ASSEMBLY	1		ZONE	REV.		DESCRIPTION	DATE	APPROVED
2	Unaka Gear Co.	1006-MK51-00-HWB REV 1	SPRINTER 170 HSLD HARDWARE BOX	ASSEMBLY	1			0	BUMPED	REVISION FOR REV CONTROL	5/30/2023	JEO
3	Unaka Gear Co.	1006-MK51-00-MRB REV 1	SPRINTER 170 HSLD MAIN RACK BOX	ASSEMBLY	1			1	SET REVISION	N TO 1 FOR PRODUCTION RELEASE	6/28/2023	JEO
	SHIPPING NOTES: 1. COMPLETE RACK KII IS SHIPPED IN 3 SEPERATE BOXES, BOX 1											
	1. COMPLETE RACK KIT IS SHIPPED IN 3 SEPERATE BOXES, BOX 1 CONTAINS THE WIND FAIRING & RESPECTIVE HARDWARE, BOX 2 CONTAINS THE BRACKETS / HARDWARE, AND BOX 3 CONTAINS THE SIDE PLATES AND EXTRUSION. KITTING / PACKAGING NOTES: 1. SEE BILL OF MATERIAL FOR TOTAL KITTING QUANTITIES AS IMAGES OF EVERY INDIVIDUAL ITEM MAY NOT BE SHOWN 2. IMAGES ARE SHOWN FOR PART IDENTIFICATION AND DO NOT REFLECT FULL QUANTITIES OF EACH PARTS, SEE SUB ASSEMBLY DRAWINGS AND BOMS FOR EXACT QUANTITIES 1. SEE BILL OF MATERIAL FOR TOTAL KITTING QUANTITIES AS IMAGES OF EVERY INDIVIDUAL ITEM MAY NOT BE SHOWN 2. IMAGES ARE SHOWN FOR PART IDENTIFICATION AND DO NOT REFLECT FULL QUANTITIES OF EACH PARTS, SEE SUB ASSEMBLY DRAWINGS AND BOMS FOR EXACT QUANTITIES 1. SEE BILL OF MATERIAL FOR TOTAL KITTING QUANTITIES AS IMAGES AND BOMS FOR EXACT QUANTITIES OF EACH PARTS, SEE SUB ASSEMBLY DRAWINGS AND BOMS FOR EXACT QUANTITIES INDIVIDUAL ITEM MAY NOT BE SHOWN FOR EXACT QUANTITIES OF EACH PARTS, SEE SUB ASSEMBLY DRAWINGS AND BOMS FOR EXACT QUANTITIES INDIVIDUAL ITEM MAY NOT BE SHOWN FOR EXACT QUANTITIES OF EACH PARTS, SEE SUB ASSEMBLY DRAWINGS AND BOMS FOR EXACT QUANTITIES OF EACH PARTS, SEE SUB DRAWING STREET AND ASSEMBLY DRAWINGS AND BOMS FOR EXACT QUANTITIES OF EACH PARTS, SEE SUB DRAWING STREET AND ASSEMBLY DRAWINGS AND BOMS FOR EXACT QUANTITIES OF EACH PARTS, SEE SUB DRAWING STREET AND ASSEMBLY DRAWINGS AND BOMS FOR EXACT QUANTITIES OF EACH PARTS OF EXACT QUANTITIES OF EACH PAR											
				POST PROC	CESSING:	ASSEMBLY	REPRO	A GEAR CO. AN' IDUCTION IN PAR IUT THE WRITTEN F A GEAR CO. IS ST BITED.	T OR AS A WHOLE	UNAKA	1006-MK51-00 I	SHEET 1 OF 1
				FINISH:		None				GEAR CO	nee, MIS	SHEET FOF T

Main Rack Box

Contains extrusion, side plates, and cross bars: Box Size: 8" x 8" x 91" Long

			,	,					0		
	ITEM NO.	Manufacturer	PART NUMBER	DESCRIPTION	MATERIAL	QTY.			REVISIONS		
	1	ANY	97525A505	RIVET, BLIND, 3/16" DIA, FOR MATL 0.251"-0.375", 18-8 SS	NA	4					
	2	Unaka Gear Co.	1006-MB50-01 REV 1	SPRINTER HSLD FRONT SIDE PLATE	5052-H32	2	ZONE	REV.	DESCRIPTION	DATE	APPROVED
	3	Unaka Gear Co.	1006-MB50-02 REV 1	SPRINTER HSLD REAR SIDE PLATE	5052-H32	2		0	SET REVISION TO 0 FOR NEW DRAWING REFEREN	CE 5/17/2023	JEO
	4	Unaka Gear Co.	1006-MB50-03 REV 0	SPRINTER 170 SPLICE SIDE PLATE	5052-H32	2		Ů	SEI KEVISION TO UTOK NEW DRAWING KETEKEN	25 3/17/2023	320
	5	Unaka Gear Co.	1006-MB50-04 REV 0	UNAKA HSLD LOGO PLATE	AISI 304	1		1	UPDATED PROFILE OF FRONT AND REAR SIDE PLA	ES 6/2/2023	JEO
	6	Unaka Gear Co.	1006-MB50-05 REV 0	UNAKA HSLD LOGO PLATE PASSENGER SIDE	AISI 304	1					
	7	Unaka Gear Co.	1515-UL-BLACK-53.75	8020 Style Extrusion, 15 Series, Ultra Lite, Grooved, Black, 53.75" LG.	6061 Alloy	4					
	8	Unaka Gear Co.	1515-UL-BLACK-75.875	8020 Style Extrusion, 15 Series, Ultra Lite, Grooved, Black, 75.875" LG.	6061 Alloy	2		(1)	DRIVER SIDE (1)	PASSENGER SID	-
	9	Unaka Gear Co.	1515-UL-BLACK-91	8020 Style Extrusion, 15 Series, Ultra Lite, Grooved, Black, 91" LG.	6061 Alloy	2			Numarya -	• CAUTIARA	0
	DETAIL B SCALE 1 : 6 OF THE REPORT OF THE R										
		\sim				<u> </u>				AND CO SUC	III D DE
		(2)							1. LOGO PLATES (s) AND (6) SHO	ULD BE
		770000	•						RIVETED TO SIDE	PLATE (2) BEFOR	E KITTING
-	9	6	<u> </u>	•	_	66" DRIVER	FRONT		USING SS RIVETS	1). NOTE ORIEN	ITATION OF
	\mathcal{C}				-	SIDE PL	.ATE			ITH RESPECT TO PL	
	=						∃	0.111	NOTES:	IIII KESPECTIO PE	AILS.
	-					_		"91 ONT SID		RIAL FOR TOTAL K	
	·	_ ·=			─ ── \		· FK	ONI SIL	ITEM MAY NOT B	MAGES OF EVERY II F SHOWN	NDIVIDUAL
		(3)	•		 ,				IMAGES ARE SHO	OWN FOR PART IDE	
		<u> </u>		·		— 62 € " REA	AR SIDE	PLATE		FLECT FULL QUANT SUB ASSEMBLY DE	
		-				= ~				EXACT QUANTITIES	
	(8)					75 7	" REAR	SIDE RAI	PACKAGING NOTES	D BE BACKACED	CARELLIA
	\sim	_				18		0.22	IN A SINGLE BOX	D BE PACKAGED (CAREFULLY
										D BE PACKAGED I	
					53 4 " 8	3020 CROSS	BAR		THAT WILL PREVE DURING SHIPPIN	NT DAMAGE OR N	NOVEMENT
			∘ ←						BOX SHOULD BE	LABELED WITH SKU	AND
		(4)	• — • •					DESCRIPTION		
		(<u> </u>	_	39"			INLESS OTHERW	KE SPECIBED	-	
				-	57		- 1	DIMENSIONS A	RE IN INCHES BONDI SCALE DRAWING ITTE		CLD 1444151
			ALL DADTS SHOULD B	SE WRAPPED CAREFULLY BEFORE BOX	VINC		ANG	GULAR: ±0.5* PLACE DECIMA	L: ±0.1 DRAWN BY JEO	SPRINTER 170 HS RACK BC	
			ALL PAKIS SHOULD E	DE WINAFFED CAREFULLI BEFORE BOX	VIING		TWO	E PLACE DECIM	LL: ±0.005 CHECKED	KACK BC	J/
							71.00	ROPRIETARY AND VEORMATION CO	SIZER	E DWG. NO.	REV
							UNAS	(A GEAR CO. A ODUCTION IN P	PERMISSION OF PERMISSION OF PERMISSION OF	1006-MK51-00-MRI	B REV 1
					OCESSING:	None	UN AS PROH	OUT THE WRITTEN (A GEAR CO. IS: (IBITED.	TRICILY OIL ALLA	ALE: NTS	SHEET 1 OF 1
				FINISH:		None			GEAR CO 2C	ALE, 1413	SHEEL LOFT


GEAR CO

HSLD Wind Fairing Box

Contains wind fairing pieces, hardware bag, and bulb seal: Box Size: $65 \times 13 \times 3$ in

ITEM NO.	Manufacturer	PART NUMBER	DESCRIPTION	MATERIAL	QTY.
1	Unaka Gear Co.	1003-MA52-00-HW REV 0	HSLD WIND FAIRING HARDWARE KIT	ASSEMBLY	1
2	Unaka Gear Co.	1006-MB52-01 REV 0	SPRINTER WIND FAIRING TO END CAP BRACKET	5052-H32	2
3	Unaka Gear Co.	1006-MB52-02 REV 0	SPRINTER WIND FAIRING TO END CAP BRACKET 2	5052-H32	2
4	Unaka Gear Co.	1006-MB52-03 REV 1	SPRINTER WIND FAIRING END CAP	5052-H32	1
5	Unaka Gear Co.	1006-MB52-04 REV 1	SPRINTER WIND FAIRING END CAP PASSENGER SIDE	5052-H32	1
6	Unaka Gear Co.	1006-MB52-05 REV 1	SPRINTER WIND FAIRING 2 BENDS	5052-H32	1
7	Unaka Gear Co.	1006-MP52-06 REV 0	BULB SEAL ON SIDE, HOLLOW, FOR 3/16" EDGE, 3/4" HIGH	7100B3X3/16A	1

		REVISIONS		
ZONE	REV.	DESCRIPTION	DATE	APPROVED
	0	CREATED REVISION TO START REV CONTROL	5/17/2023	JEO
	1	UPDATED PROFILE OF MAIN FAIRING AND END CAPS, ADDED BULB SEAL	6/2/2023	JEO

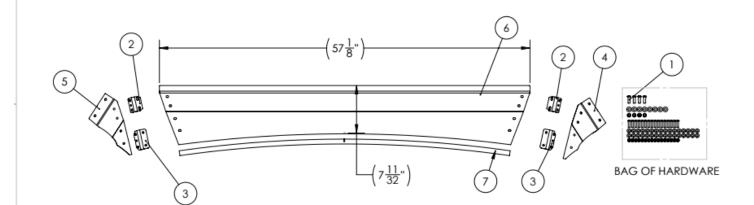

ASSEMBLY / PRE-KITTING NOTES:

SHOULD BE CUT TO APPROXIMATELY 51" LONG, AND INSTALLED ON ITEM (6) WITH THE MAIN BULB SEAL FACING BACK / DOWN

NOTES:

- SEE BILL OF MATERIAL FOR TOTAL KITTING QUANTITIES AS IMAGES OF EVERY INDIVIDUAL ITEM MAY NOT BE SHOWN
- IMAGES ARE SHOWN FOR PART IDENTIFICATION AND DO NOT REFLECT FULL QUANTITIES OF EACH PARTS, SEE SUB ASSEMBLY DRAWINGS AND BOMS FOR **EXACT QUANTITIES**

PACKAGING NOTES

- ALL ITEMS SHOULD BE PACKAGED CAREFULLY IN A SINGLE BOX.
- ALL ITEMS SHOULD BE PACKAGED IN A WAY THAT WILL PREVENT DAMAGE OR MOVEMENT DURING SHIPPING
- BOX SHOULD BE LABELED WITH SKU AND DESCRIPTION

UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES	DO NOT SI	CALE DRAW	ING	TITLE:				
TOLERANCES: ANGULAR: ±0.5*		NAME	DATE	SPRINTER HSL	ROOF			
ONE PLACE DECIMAL: ±0.1	DRAWN BY	JEO		WIND FA	X			
TWO PLACE DECIMAL: ±0.01 THREE PLACE DECIMAL: ±0.005	CHECKED							
PROFRIETARY AND CONFIDENTIAL THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF UNAKA GEAR CO. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITERY PERMISSION OF	UNAKA		SIZE DWG. NO. B 1006-MA52-00	0-WFB REV	REV 1			
UNAKA GEAR CO. IS STRICTLY PROHIBITED.	GEARCO			SCALE: NTS	SHE	ET 1 OF 1		

GEAR CO

POST PROCESSING: FINISH:


None None

HSLD Wind Fairing Hardware

Hardware required for wind fairing assembly, typically shipped in wind fairing box

ITEM NO.	Manufacturer	PART NUMBER	DESCRIPTION	MATERIAL	QTY.
1	ANY	92949A582	BHCS, 5/16-18 X 1" LG, FULLY THREADED, 18-8 S.S.	NA	4
2	ANY	92141A030	FLAT WASHER, 5/16" SCREW SIZE, 0.344" ID, 0.75" OD, 18-8 SS	NA	8
3	ANY	92949A542	BHCS, 1/4-20 X 1" LG, SS	NA	16
4	ANY	91831A029	LOCKNUT, 1/4-20, 18-8 S.S.	NA	16
5	ANY	92141A029	WASHER, 1/4", 0.625" OD, 18-8 SS	NA	32
6	ANY	91831A030	LOCKNUT, 5/16-18, 18-8 S.S.	NA	4

	REVISIONS							
ZONE	REV.	DESCRIPTION	DATE	APPROVED				
	0	ADDED REVISION FOR REV CONTROL	5/18/2023	JEO				

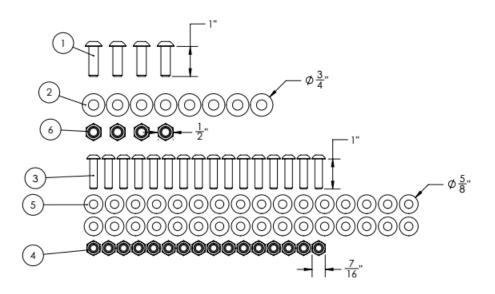

- ALL HARDWARE SHOULD BE BAGGED
- HARDWARE BAG/BAGS SHOULD INCLUDE IDENTIFICATION LABEL

UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES IOLERANCES: ANGULAR: ±0.5* ONE PLACE DECIMAL: ±0.1 TWO PLACE DECIMAL: ±0.01 HSLD WIND FAIRING HARDWARE KIT DRAWN BY JEO THREE PLACE DECIMAL: ±0.005 PROPRIETARY AND CONFIDENTIAL THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF UNAXA, GEAR CO. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF UNAXA, GEAR CO. IS STRICTLY PROPHIETED. SIZE DWG. NO.


None None

1003-MA52-00-HW REV 0 SCALE: NTS SHEET 1 OF 1

HSLD Hardware Box

All remaining pieces required to assemble and install your roof rack (Typical Box: $10 \times 6 \times 4$ in)

ITEM NO.	Manufacturer	PART NUMBER	DESCRIPTION	MATERIAL	QTY.
1	Loctite	1821A11	Antiseize, Ib8008, Electrically Conductive, 0.2 oz. Pack	NA	1
2	Loctite	91458A111	Threadlocker, Loctite® 242, 0.02 FL. oz Capsule	NA	3
3	Unaka Gear Co.	1005-MB01-01	STRAIGHT FLAT PLATE, 15 SERIES, 4 HOLE	6061 Alloy	2
4	Unaka Gear Co.	1005-MK03-00-HW REV 0	CROSS BAR HARDWARE KIT FOR 4 HOLE NARROW PLATES	ASSEMBLY	4
5	Unaka Gear Co.	1006-MB50-06 REV 0	SPRINTER HSLD SIDE RAIL SPLICE PLATE	5052-H32	4
6	UNAKA GEAR CO.	1006-MK10-00 REV A	Sprinter Rack 8020 Adapter Bracket & Hardware - Set of 2	ASSEMBLY	5
7	Unaka Gear Co.	1006-MK51-00-HW1 REV 1	SPRINTER 170 HSLD SIDE RAIL HARDWARE KIT	ASSEMBLY	2
8	Unaka Gear Co	1001-MK17-01 REV 1	TOP MOUNT SOLAR PANEL BRACKET, SET OF 4 W/8020 HARDWARE	ASSEMBLY	4

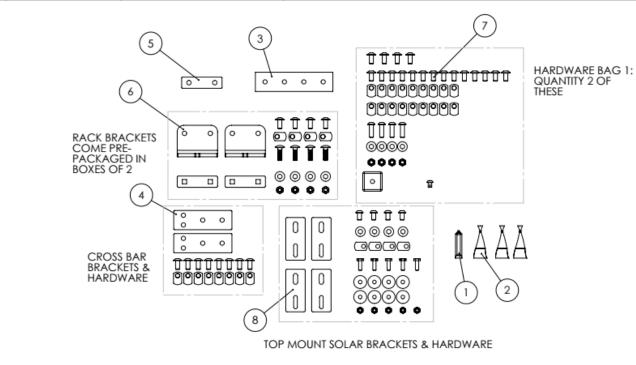

NOTES:

- SEE BILL OF MATERIAL FOR TOTAL KITTING QUANTITIES AS IMAGES OF EVERY INDIVIDUAL ITEM MAY NOT BE SHOWN
- IMAGES ARE SHOWN FOR PART IDENTIFICATION AND DO NOT REFLECT FULL QUANTITIES OF EACH PARTS, SEE SUB ASSEMBLY DRAWINGS AND BOMS FOR EXACT QUANTITIES

PACKAGING NOTES

- ALL ITEMS SHOULD BE PACKAGED CAREFULLY IN A SINGLE BOX.
- ALL ITEMS SHOULD BE PACKAGED IN A
 WAY THAT WILL PREVENT DAMAGE OR
 MOVEMENT DURING SHIPPING
- BOX SHOULD BE LABELED WITH SKU AND DESCRIPTION

ZONE	REV.	DESCRIPTION	DATE	APPROVED
	0	BUMPED REVISION FOR RELEASE	5/30/2023	JEO
	1	UPDATED REVISION FOR OFFICIAL PRODUCTION	6/28/2023	JEO

DIMENSIONS ARE IN INCHES

TOLERANCES:
ANGULAR: 90.5'
ONE PLACE DECIMAL: 90.1
TWO PLACE DECIMAL: 90.01
THREE PLACE DECIMAL: 90.005
PROPRIETARY AND CONFIDENTIAL

UNLESS OTHERWISE SPECIFIED

PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS
DRAWING IS THE SOLE PROPERTY OF
UNAKA GEAR CO. ANY
EFFOODLOID ON PART OR AS A WHOLE
WITHOUT THE WIT

DO NOT SCALE DRAWING

ITTLE:

SPR

DRAWN BY JEO -
CHECKED --
CHECK

GEAR CO

SPRINTER 170 HSLD HARDWARE BOX

SIZE DWG. NO.

B 1006-MK51-00-HWB REV 1

SCALE: NTS SHEET 1 OF 1

POST PROCESSING: FINISH:


None None

Side Rail Hardware Bags

2 Total: 1 is used for drive side, and 1 is used for passenger side

Hardware required for assemble side rails

ITEM NO.	Manufacturer	PART NUMBER	DESCRIPTION	MATERIAL	QTY.
1	8020	203001-PLAIN	END CAP, 15 SERIES, PLAIN, BLACK	NA	1
2	8020	3267	SELF TAPPING END CAP SCREW, M7 X 0.36"	NA	1
3	8020	3607	BHCS, FLANGED, 5/16 X 0.687" LG., S.S.	NA	4
4	8020	3678	T-NUT, ECONOMY, 5/16 THREAD, SS	NA	18
5	ANY	91831A030	LOCKNUT, 5/16-18, 18-8 S.S.	NA	4
6	ANY	92141A030	FLAT WASHER, 5/16" SCREW SIZE, 0.344" ID, 0.75" OD, 18-8 SS	NA	4
7	ANY	92949A582	BHCS, 5/16-18 X 1" LG, FULLY THREADED, 18-8 S.S.	NA	4
8	ANY	97654A304	BHCS, FLANGED, 5/16 X 0.625" LG., S.S.	NA	14

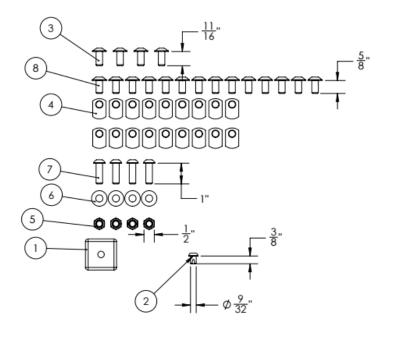

POST PROCESSING:

FINISH:

None

None

		REVISIONS		
ZONE	REV.	DESCRIPTION	DATE	APPROVED
	0	BUMPED REVISION FOR REV CONTROL	5/30/23	JEO
	1	SET UP DRAWING FOR PRODUCTION, NO REAL CHANGES	6/28/2023	JEO

- ALL HARDWARE SHOULD BE BAGGED HARDWARE BAG/BAGS SHOULD INCLUDE IDENTIFICATION LABEL

UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES TITLE: DO NOT SCALE DRAWING TOLERANCES; ANGULAR: ±0.5* ONE PLACE DECIMAL: ±0.1 SPRINTER 170 HSLD SIDE NAME DATE JEO RAIL HARDWARE KIT DRAWN BY TWO PLACE DECIMAL: ±0.01 THREE PLACE DECIMAL: ±0.005 CHECKED PROPRIETARY AND CONFIDENTIAL SIZE DWG. NO. THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF UNAYA GEAR CO. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF UNAYA GEAR CO. IS STRICTLY PROHIBITED. REV B 1006-MK51-00-HW1 REV 1 SCALE: NTS SHEET 1 OF 1 **GEAR CO**


Rack Bracket & Hardware

Quantity 5 Total

Hardware required for bolt brackets to van roof rails, and brackets to 8020 side

ITEM NO.	Manufacturer	PART NUMBER	DESCRIPTION	MATERIAL	QTY.
1	8020	3607	BHCS, FLANGED, 5/16 X 0.687" LG., S.S.	NA	4
2	8020	3678	T-NUT, ECONOMY, 5/16 THREAD, SS	NA	4
3	ANY	91831A030	LOCKNUT, 5/16-18, 18-8 S.S.	NA	4
4	ANY	92141A030	FLAT WASHER, 5/16" SCREW SIZE, 0.344" ID, 0.75" OD, 18-8 SS	NA	4
5	ANY	92356A583	CARRIAGE BOLT, 5/16"-18 X 1" LG, 18-8 SS	NA	4
6	Unaka Gear Co.	1006-MB10-01 REV A	SPRINTER ROOF RAIL 8020 BRACKET	5052-H32	2
7	Unaka Gear Co.	1006-MB10-02	SPRINTER RACK RAIL DOUBLE WASHER, 2" SPACING	AISI 304	2

	REVISIONS					
ZONE	REV.	DESCRIPTION	DATE	APPROVED		
	A	REVISION A FOR UPDATED HARDWARE	12/9/2022	JEO		
	1	CHANGED DRAWING LAYOUT TO SHOW ALL PARTS	7/10/2023	JEO		

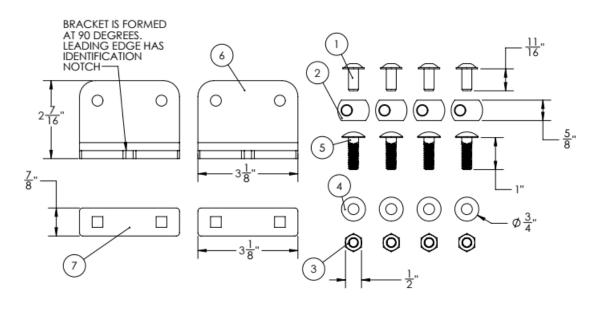


FINISH:

None

KITTING NOTES:

- . LABEL AND BAG HARDWARE
- 2. WRAP OR BOX BOTH BRACKETS AND HARDWARE
- 3. LABLE COMPLETE KIT / BOX

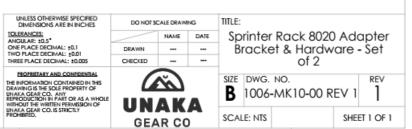


Top Mount Solar Panel Bracket Kits

4 Total: 8 **Brackets per** 200W Solar **Panel**

Hardware top mount solar panel brackets

ITEM NO.	Manufacturer	turer PART NUMBER DESCRIPTION		MATERIAL	QTY.
1	8020	3678	T-NUT, ECONOMY, 5/16 THREAD, SS	NA	4
2	ANY	90313A107	WASHER, 1/4" X 1" OD, 18-8 SS	NA	8
3	ANY	91831A029	LOCKNUT, 1/4-20, 18-8 S.S.	NA	4
4	ANY	92141A030	FLAT WASHER, 5/16" SCREW SIZE, 0.344" ID, 0.75" OD, 18-8 SS	NA	4
5	ANY	92240A540	HEX BOLT, 1/4-20 X 0.75" FULLY THREADED, 18-8 S.S.	NA	4
6	ANY	92949A580	BHCS, 5/16-18 X 5/8" LG, FULL THREAD, 18-8 SS	NA	2
7	ANY	92949A853	BHCS, 5/16-18 X 0.5625" LG, FULLY THREADED, 18-8 S.S.	NA	4
8	UNAKA GEAR CO.	1001-MB17-01 REV 1	SOLAR PANEL TOP MOUNT BRACKET	AISI 304	4

		REVISIONS		
ZONE	ZONE REV. DESCRIPTION		DATE	APPROVED
	1	CREATED REV 1 FOR REVISION CONTROL. UPDATED HARDWARE FROM 2 SETS OF BRACKETS TO 4	6/23/2023	JEO
C6	C6 2 ADDED 5/16-18 X 5/8 BHCS, CHANGED PROFILE OF BRACKET, ELIMINATED EXTRA HARDWARE		7/21/2023	JEO

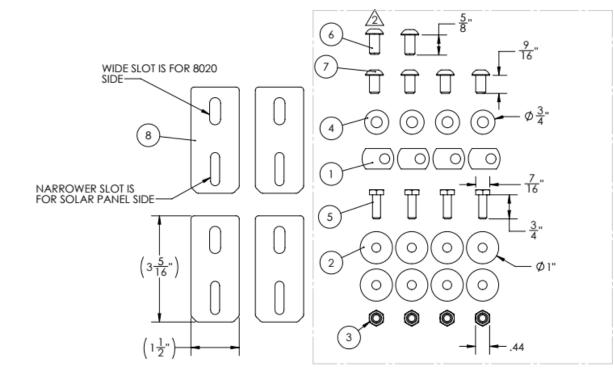

ASSEMBLY NOTES: ITEM(6 IS ONLY USED WHEN TWO **BRACKETS ARE BEING BOLTED ON TOP OF EACH** OTHER

KITTING NOTES:

- PLACE ALL HARDWARE IN A SINGLE LABLED HARDWARE BAG
- PLACE BAG OF HARDWARE AND BRACKETS INTO A LABELED BOX
- IF LABELED BOX IS NOT AN OPTION, STACK BRACKETS, AND SHRINK WRAP HARDWARE **BAG TO BRACKETS**

UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES IOLERANCES: ANGULAR: ±0.5* ONE PLACE DECIMAL: ±0.1 TWO PLACE DECIMAL: ±0.01 THREE PLACE DECIMAL: ±0.005

PROPRIETARY AND CONFIDENTIAL THE INFORMATION CONTINUED IN THIS DRAWING IS THE SOLE PROPERTY OF UNAXA GEAR CO. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WINTEN PERMISSION OF UNAXA GEAR CO. IS STRICTLY PROHIBITED.

DO NOT SCALE DRAWING DATE NAME DRAWN CHECKED ---

GEAR CO

TOP MOUNT SOLAR PANEL BRACKET, SET OF 4 W/8020 HARDWARE

SIZE DWG. NO.

B 1001-MK17-01 REV 2

SCALE: NTS

SHEET 1 OF 1

POST PROCESSING:

FINISH:

PLACE ALL HARDWARE IN A BAG, LABEL BAG

1001-MK17-01 HARDWARE

None

ASSEMBLY


Cross Bar Hardware

Quantity 4 Total

CROSS BAR HARDWARE KIT

						-
ITEM NO.	Manufacturer	PART NUMBER	DESCRIPTION	MATERIAL	QTY.	Ш
1	8020	3678	T-NUT, ECONOMY, 5/16 THREAD, SS	NA	8	1L
2	8020	3607	BHCS, FLANGED, 5/16 X 0.687" LG., S.S.	NA	8	1
3	Unaka Gear Co.	1005-MB03-01 REV 0	NARROW CROSS BAR CONNECTOR, 15 SERIES, 4 HOLE	6061 Alloy	2] - -

1	REVISIONS				
7	ZONE REV. DESCRIPTION		DATE	APPROVED	
		0	BUMPED REVISION FOR RELEASE	5/30/2023	JEO

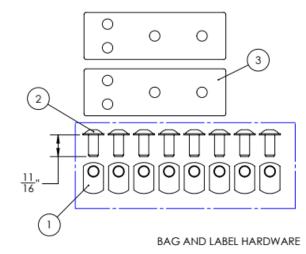

KITTING NOTES:

THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF

UNAKA GEAR CO. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF UNAKA GEAR CO. IS STRICTLY PROHIBITED.

- HARDWARE SHOULD BE BAGGED
- HARDWARE BAG SHOULD BE LABELED
- ALL PARTS SHOULD BE PACKAGED WITH THE PART NUMBER AND DESCRIPTION LOCATED LABELED ON THE OUTSIDE OF THE PACKAGE
- IF FORMAL PACKAGE DESIGN HAS NOT BE PROVIDED, CAREFULLY WRAP BAG OF HARDWARE TO BRACKETS USING SHRINK WRAP, AND APPLY LABEL TO OUTSIDE

UNLESS OTHERWISE SPECIFIED
DID NOT SCALE DRAWING

IOLERANCES

ANGURA: 9.0.5

NAME
DATE

CROSS BAR HARDWARE KIT
FOR 4 HOLE NARROW
PLATES

PROPRIETARY AND CONFIDENTIAL

PROPRIETARY AND CONFIDENTIAL

POST PROCESSING: FINISH:

None None UNAKA GEAR CO B DWG. NO. 1005-MK03-00-HW REV 0


SCALE: NTS

SHEET 1 OF 1

Extrusion T-Nut Installation Overview: Part # 3678 or similar


- 1. T-nuts are used to connect 8020 style extrusion and other components
- 2. When installing T-nuts, leave the flat side towards the outside of the extrusion, and have the boss facing the center of the extrusion
- 3. Once inside the extrusion, slide the t-nut to the desired location

Correct way to Orient T-nuts when sliding into extrusion

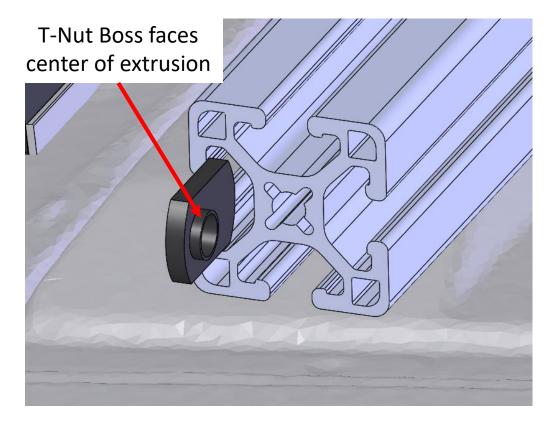


Extrusion T-Nut Installation Overview: Part # 3678 or similar

- 1. One side of the t-nut is longer than the other so installation orientation is critical
- 2. Note, the example below is just one portion of the rack shown as an example, but the same principle may apply to other locations
- 3. When the long side is pointed at the long side of another t-nut, in some cases they can physically interfere
- 4. When the long side is pointed at the end of the extrusion, in some cases they can extend past, and physically prevent 1 piece from correctly touching the other
- 5. In most cases if a t-nut creates an interference, reversing its orientation will solve the issue

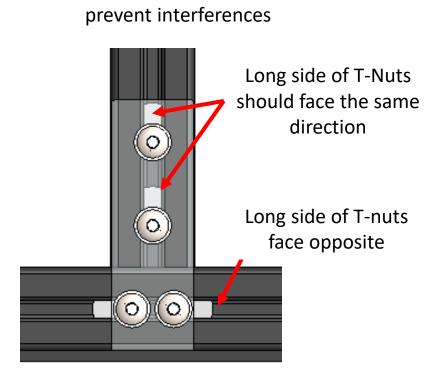


Correct way to Orient T-nuts to

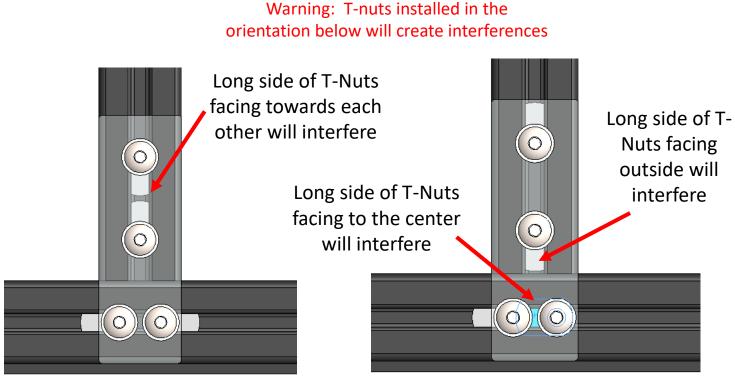

Long side of actual t-nuts is longer than shown in the image and will interfere


Unaka Narrow Cross Bar Brackets:


- 1. The Unaka narrow cross bar bracket was designed to reduce the amount of side rail space a bracket occupied while still providing a robust connection
- 2. Please note the orientation of the T-nuts.
- 3. Incorrectly installed T-nuts will create interferences
- 4. Note: Racks shipped late 4th quarter of 2023 and after will utilize a double t-nut at the side rail connection

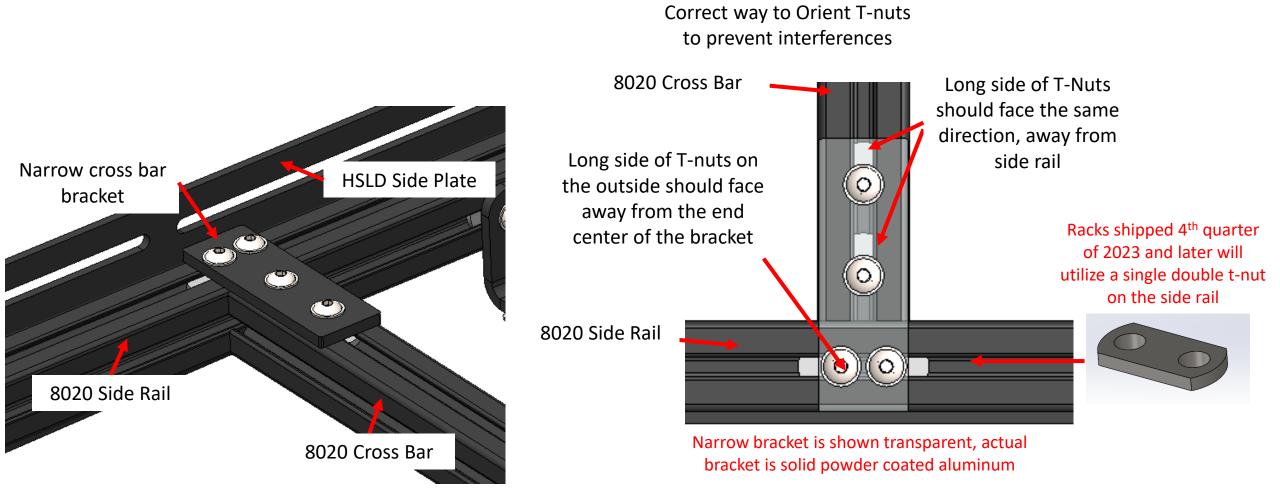

Unaka Narrow Cross Bar Brackets Continued

- 1. In some cases, the cross-bar position may need to be adjusted slightly to prevent the single t-nuts on the cross-bar brackets from interfering.
 - End Caps
 - Splice Plates
 - Other accessories
- 2. The single t-nut extends 0.33" from the side of the cross bar, so if an adjustment needs to be made it will be a small one
- 3. Note: Racks shipped late 4th quarter of 2023 and after will utilize a double t-nut at the side rail connection

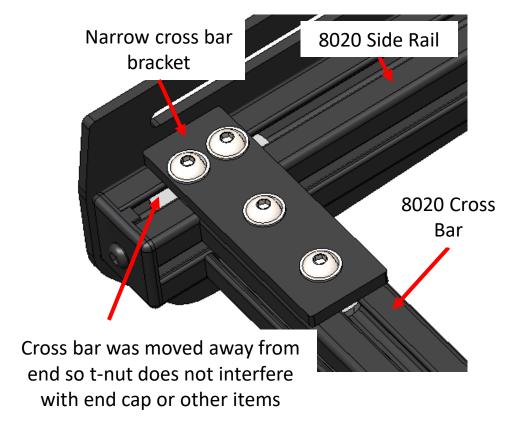

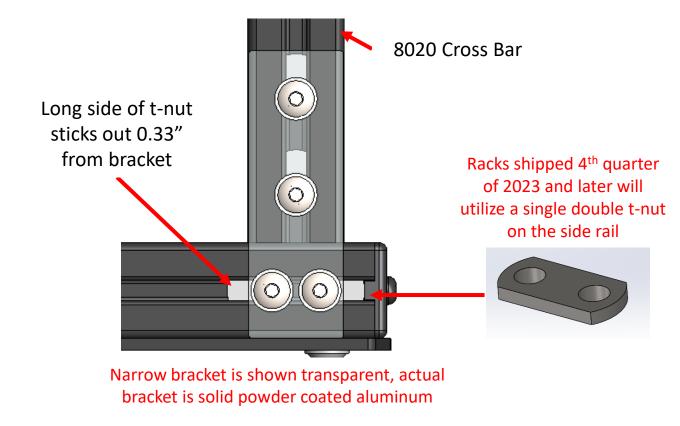


170" WB Side Rail Assembly:

- This section covers the HSLD side rail assembly. Note the images shown are for the Driver side assembly. The passenger side assembly is a mirrored image.
- Below is the bill of material (BOM) for Qty 1 side rail assembly. These individual parts are found in the sub kits outlined shown on previous pages.
- The BOM for the driver side, and passenger side rail assemblies are identical and match the table below.

		The state of the s	The state of the s		1
ITEM NO.	Manufacturer	PART NUMBER	DESCRIPTION	MATERIAL	QTY.
1	8020	203001-PLAIN	END CAP, 15 SERIES, PLAIN, BLACK	NA	1
2	8020	3267	SELF TAPPING END CAP SCREW, M7 X 0.36"	NA	1
3	8020	3607	BHCS, FLANGED, 5/16 X 0.687" LG., S.S.	NA	4
4	8020	3678	T-NUT, ECONOMY, 5/16 THREAD, SS	NA	18
5	ANY	91831A030	LOCKNUT, 5/16-18, 18-8 S.S.	NA	4
6	ANY	92141A030	FLAT WASHER, 5/16" SCREW SIZE, 0.344" ID, 0.75" OD, 18-8 SS	NA	8
7	ANY	92949A582	BHCS, 5/16-18 X 1" LG, FULLY THREADED, 18-8 S.S.	NA	4
8	ANY	97525A490	RIVET, BLIND, 3/16" DIA, FOR MATL 0.126" - 0.25", 18-8 SS	NA	2
9	ANY	97654A304	BHCS, FLANGED, 5/16 X 0.625" LG., S.S.	NA	14
10	UNAKA	1003-MB50-03	FT EXL SIDE RAIL SPLICE PLATE	5052-H32	2
11	UNAKA	1006-MA10-00	PROMASTER 80/20 ROOF RACK BRACKET ADAPTER	ASSEMBLY	6
12	Unaka Gear Co.	1005-MB01-01	STRAIGHT FLAT PLATE, 15 SERIES, 4 HOLE	6061 Alloy	1
13	Unaka Gear Co.	1006-MB50-01 REV 1	SPRINTER HSLD FRONT SIDE PLATE	5052-H32	1
14	Unaka Gear Co.	1006-MB50-02 REV 1	SPRINTER HSLD REAR SIDE PLATE	5052-H32	1
15	Unaka Gear Co.	1006-MB50-03 REV 0	SPRINTER 170 SPLICE SIDE PLATE	5052-H32	1
16	Unaka Gear Co.	1006-MB50-04 REV 0	UNAKA HSLD LOGO PLATE	AISI 304	1
17	Unaka Gear Co.	1515-UL-BLACK-75.875	8020 Style Extrusion, 15 Series, Ultra Lite, Grooved, Black, 75.875" LG.	6061 Alloy	1
18	Unaka Gear Co.	1515-UL-BLACK-91	8020 Style Extrusion, 15 Series, Ultra Lite, Grooved, Black, 91" LG.	6061 Alloy	1

Driver Side HSLD Side Rail

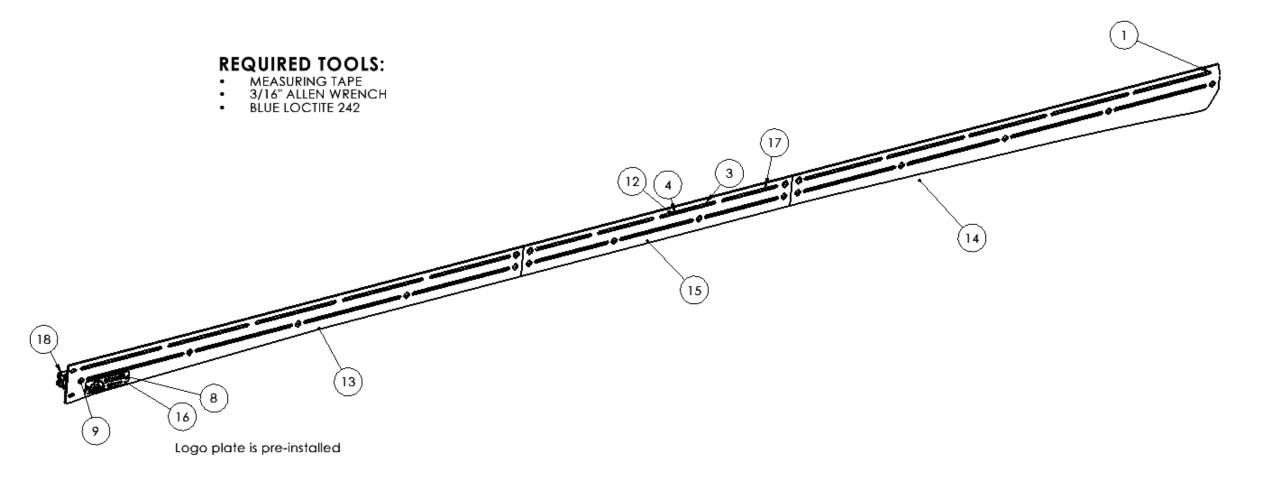

170" WB Side Rail Assembly:

Driver Side HSLD Side Rail


ASSEMBLY STEPS:

FRONT OF VAN

- 1. LAYOUT PARTS, ENSURE SIDE PLATE ITEMS (18), (14), (15) AND 8020 ADAPTER BRACKETS (11)
 ORIENTATIONS ARE CORRECT FOR THE SIDE RAIL YOU ARE ASSEMBLING
- FOR PASSENGER SIDE RAIL ASSEMBLY, LAYOUT PARTS TO ENSURING YOU WILL BE CREATING AN OPPOSITE HAND VERSION TO THE DRIVER SIDE ASSEMBLY SHOWN BELOW.

91" LONG 8020-


- 3. DO NOT INSTALL END CAPS ITEM (1) AND (2) AT THIS TIME. THEY WILL BE INSTALLED AFTER ALL TNUTS FOR THE CROSS BARS ARE INSTALLED
- 4. SPLICE PLATES ARE USED TO SECURE TWO SIDE PLATES TOGETHER. INSERT BOLT 7 THROUGH
 WASHER 6 THROUGH SIDE PLATE, THROUGH SPLICE PLATE 10, THROUGH WASHER 6, AND
 INTO NYLOCK NUT 5. THIS STEP IS REPEATED TWICE PER SPLICE PLATE. ***APPLY ANTISEIZE TO BOLT
 7 DURING THIS STEP.

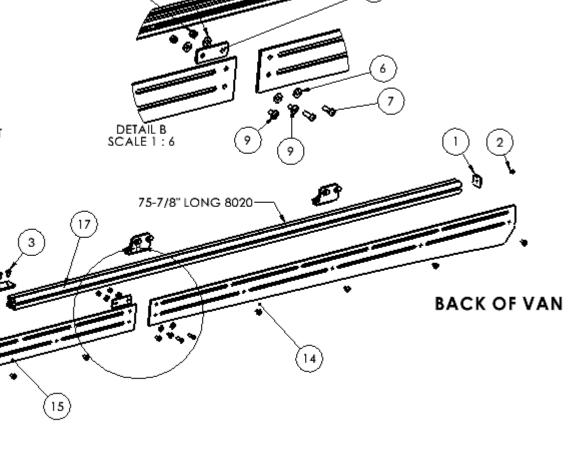


THIS LAYOUT IS FOR THE DRIVER SIDE SIDE RAIL ASSEMBLY, THE PASSENGER SIDE IS AN OPPOSITE SIDE VERSION

Driver Side HSLD Side Rail


DRIVER SIDE RAIL ASSEMBLY

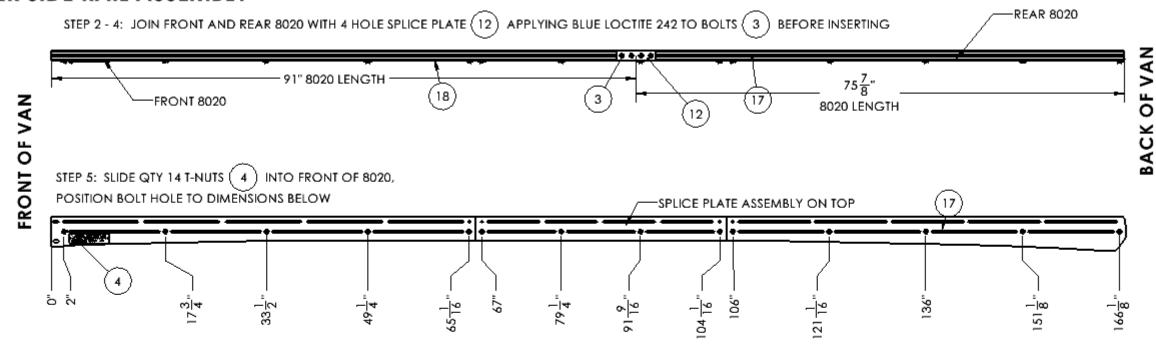

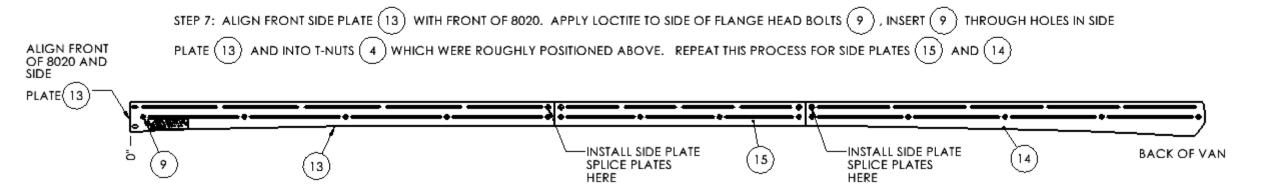

Driver Side HSLD Side Rail

DRIVER SIDE RAIL ASSEMBLY

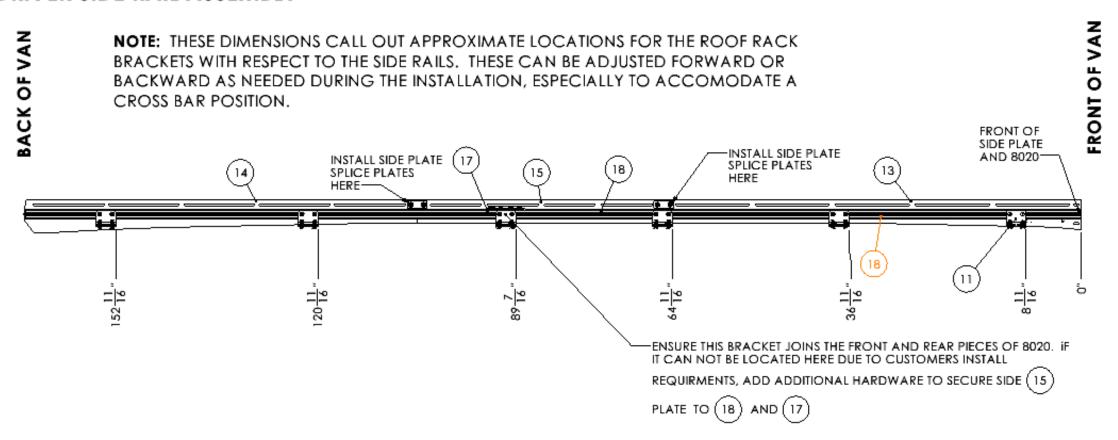

Cross Bar Initial Assembly:


ITEM NO.	Manufacturer	PART NUMBER	DESCRIPTION	MATERIAL	QTY.
1	Unaka Gear Co.	1515-UL-BLACK-56.75	8020 Style Extrusion, 15 Series, Ultra Lite, Grooved, Black, 56.75" LG.	6061 Alloy	1
2	Unaka Gear Co.	1005-MB03-01 REV 0	NARROW CROSS BAR CONNECTOR, 15 SERIES, 4 HOLE	6061 Alloy	2
3	8020	3607	BHCS, FLANGED, 5/16 X 0.687" LG., S.S.	NA	8
4	8020	3678	T-NUT, ECONOMY, 5/16 THREAD, SS	NA	10

REQUIRED TOOLS:

- 3/16" ALLEN WRENCH
- BLUE LOCTITE 242


ASSEMBLY STEPS:

- SLIDE ANY T-NUTS INTO TOP OF 8020 REQUIRED FOR FLUSH MOUNT SOLAR PANEL BRACKETS OR OTHER ACCESSORIES. NOTE
 THESE ADDITIONAL T-NUTS ARE NOT PROVIDED WITH THIS CROSS BAR ASSEMBLY
- 2. SLIDE QTY 2 ITEM 4 INTO TOP OF BOTH ENDS OF 8020, APPLY BLUE LOCTITE 242 TO SIDE OF BOLT 3, USE BOLT TO SECURE
 - THE NARROW BRACKETS (2) TO TOP OF 8020. SNUG BOLTS UP ONLY IN CASE L BRACKET NEEDS TO BE ADJUSTED WHEN INSTALLED ON VAN RACK
- REMAINING QTY 4 OF BHCS AND T-NUTS WILL BE USED TO SECURE THIS CROSS BAR TO THE RACK SIDE RAIL ASSEMBLY ON THE ROOF OF THE VAN
- 4. WHEN SECURING CROSS BAR TO 8020 SIDE RAIL ON ROOF OF VAN, PLACE BLUE LOCTITE 242 ON SIDE OF BOLT BEFORE INSERTING IT THROUGH BRACKET AND INTO T-NUT

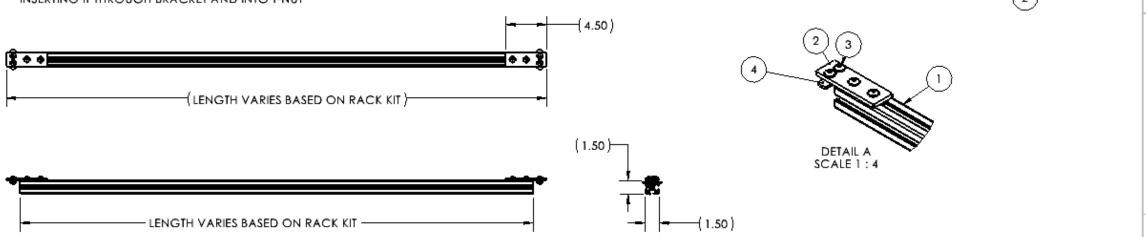

Cross Bar Initial Assembly:


- 1. If you haven't done so, double check to see if any other parts in future steps will need to be attached to your cross bars and how many t-nuts will be required for each item. This includes flush mount solar panel brackets, other 8020 brackets, the tie downs, etc.
- 2. Install the brackets required to secure your cross bar to the side rails. The Unaka standard option is the flat narrow 4 hole brackets which each use 4 bolts and t-nuts. Other options include using cross bars that use 4 x 2 hole corner brackets, 5 hole L brackets, or your own custom solution.
- 3. Do not fully tighten the hardware at this time. Leave at least one or two pieces of hardware tight enough where the brackets won't come loose and slide off the end of the extrusion while lifting and lower the cross bars into place.
- 4. If cross bar assemblies include different quantities of hardware for different accessories, mark them so that they get installed in the correct order or location on the roof rack

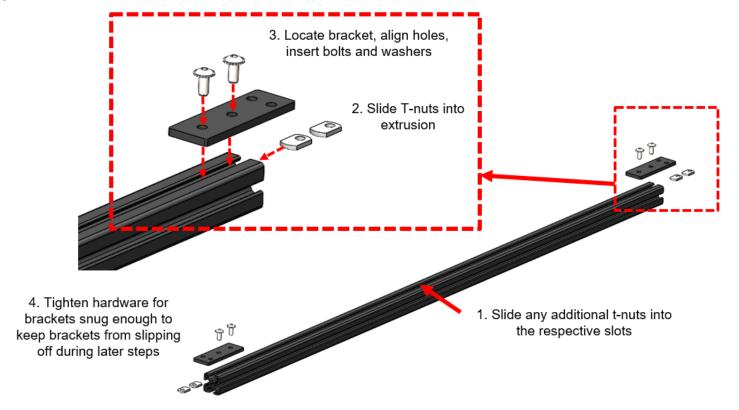


Assemble Wind Fairing End Caps

- 1. Apply anti-seize to all bolts in this step during installation
- 2. Warning: Top and bottom end cap brackets look very similar, but they have identifying notches. Lower bracket has 1 notch, upper bracket has no notches.
- 3. End cap brackets should be installed with the tab with the chamfered corners bolting to wind fairing end cap
- 4. Bolt top and bottom wind fairing brackets to driver side end cap. ***Leave the bolts just loose enough so the brackets can float around in their slots
- 5. Repeat process for passenger side end cap

Driver Side End Cap Assembled

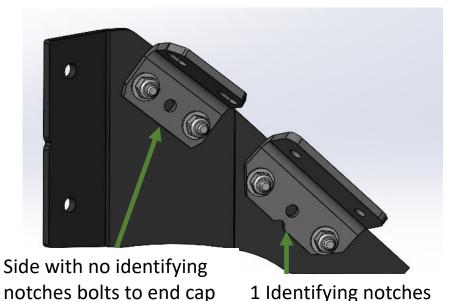


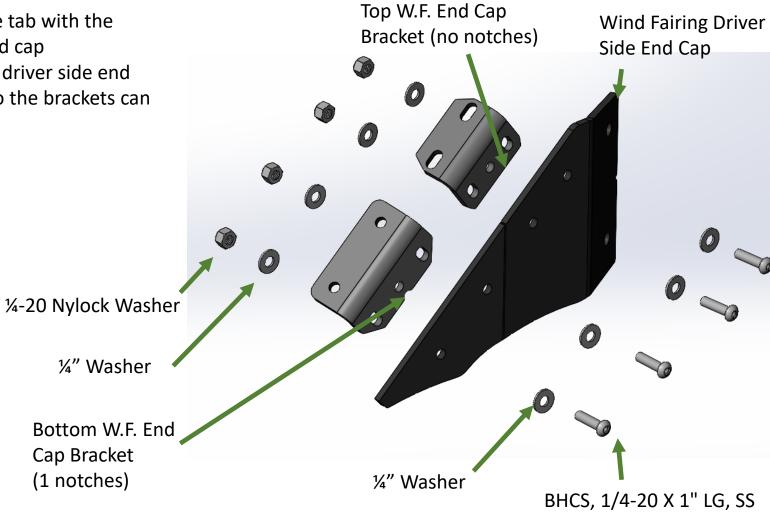


Bolt wind fairing to end caps

- 1. Apply anti-seize to all bolts in this step during installation
- 2. Hardware holding end cap brackets to the end cap still slightly loose
- 3. Loosely bolt the wind fairing to the wind fairing end cap assemblies
- 4. **Tighten the hardware carefully. Do not tighten hardware one at a time. Holding / position the wind fairing to align the edges of the fairing with the end cap as best you can. All edges may not be perfectly aligned due to manufacturing tolerances. Move between the bolts tightening them each a bit slowly until everything is nice and tight. If you tighten one bracket to much, it may not allow the adjustment slots in the brackets to compensate for manufacturing and installation tolerances
- 5. Repeat for the passenger side end cap
- 6. Install the bulb seal on the front edge of the wind fairing

Completed passenger side end cap / wind fairing

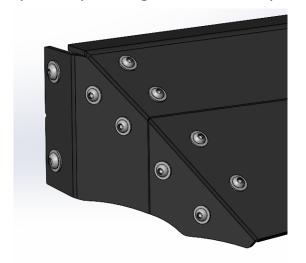

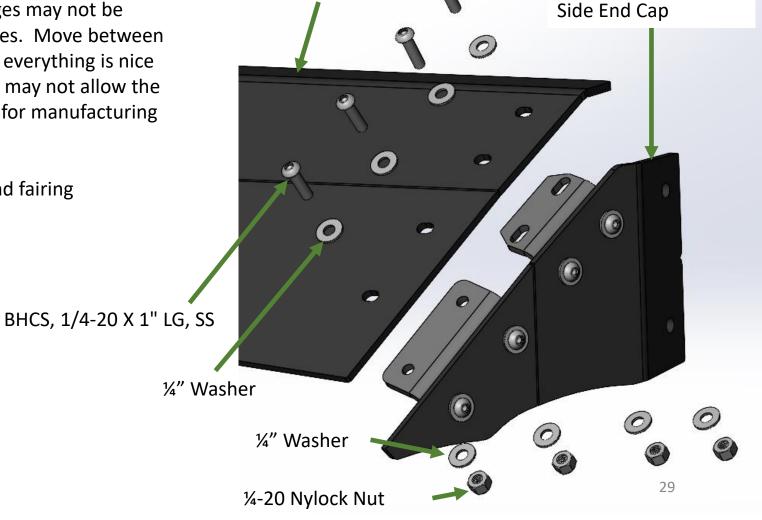



Wind Fairing Driver

Wind Fairing

Install Washer Plates & Loosely Install Side Rails


- 1. Each side of the van gets the following brackets:
 - a) 144" WB: 4 bracket assemblies per side
 - b) 170" WB: 5 bracket assemblies per side
 - c) 170" WB EXT: 6 bracket assemblies per side
- 2. Insert carriage bolts into washer plates, slide all washer plate assemblies roughly into place in the factory roof channels

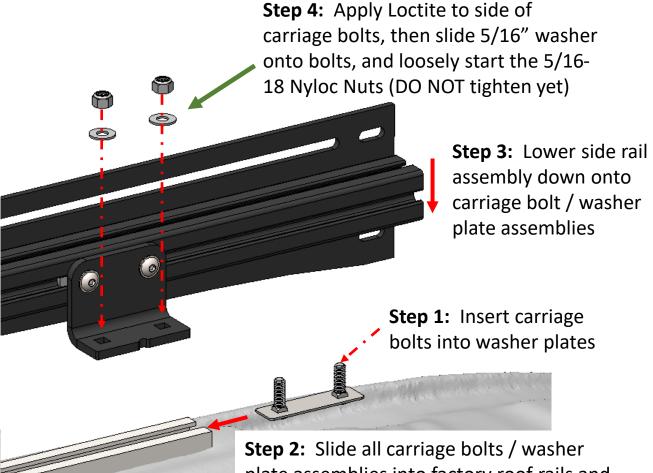

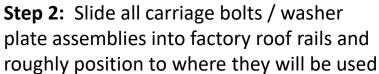


Loosely Install Side Rail Assemblies


- 1. Install 1 side rail assembly at a time using 2 people
- 2. Hold side rail assembly next to rail, slide washer plates so they very closely line up with brackets on side rail assembly
- 3. Lower side rail assembly over washer plate assemblies (move side rail forward / backward as needed to get the bolts into the brackets)
- 4. Apply Loctite to carriage bolts, install washers and nylock nuts. Only loosely tighten so that entire assembly can still move forward and backwards on the factory roof channel. DO NOT Fully Tighten.

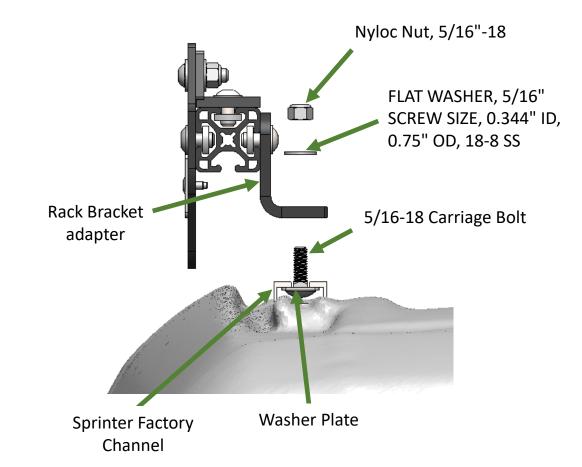

Sprinter Roof Reference


- 1. All Sprinters have a generic identification point at the back center of the roof just in front of the back up camera
- 2. This point can be used to reference dimensions during or post installation
- 3. When required, measure from the center of this identification circle

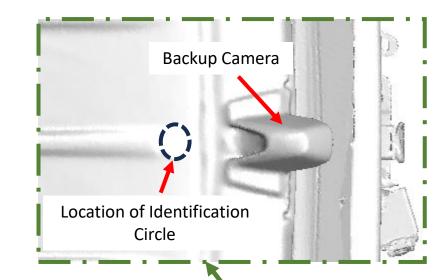

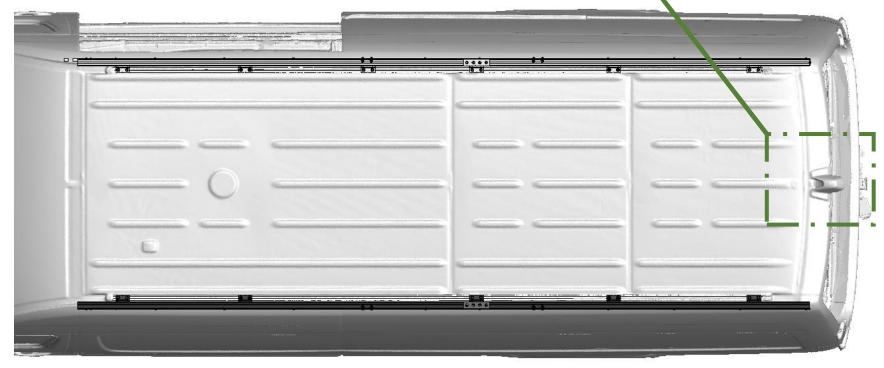


Position Side Rail Assemblies

- 1. The HSLD side rails & wind fairing were designed to fit a specific spot on the roof of your van, but variations in factory installed components on the van, aftermarket rails, or customers requirements may require the position of the side rails and wind fairing to be adjusted during installation.
- 2. Once the side rails are on the brackets, slide them forward so that the 8020 adapter is all the way at the front of the factory track
- 3. This should position the front of your side rail at 8-11/16" in front of the factory rack or 163.56" from the van reference point
- 4. Note, this is a target dimension, once the wind fairing is installed, it can be adjusted as desired or needed.

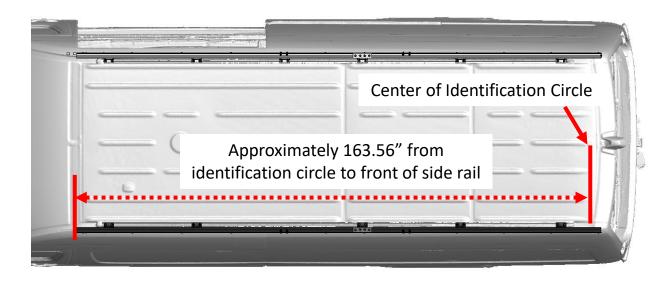


Position the front of each side rail assembly so that it is 8-11/16" in front of the leading edge of the 8020 adapter which should be slide all the way forward in the factory tracks.

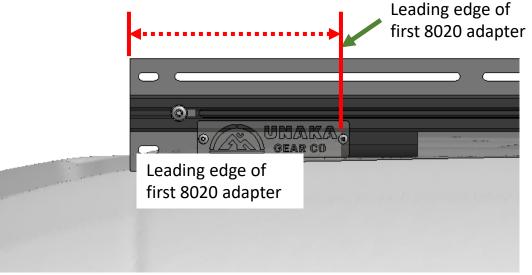

Loosely Install Cross Bar Assemblies


- 1. Rough position your cross bars to set the rail to rail spacing. In order to set the side rail to rail spacing in a later step, you will need at least one towards the front, one towards the middle, and one towards the back even if you move them based on your design needs later.
- 2. Slide 2 t-nuts or 1 double t-nut into the top of each side rail assembly for each cross bar bracket.
- 3. Some of these t-nuts will need to be installed from the front, and others from the back. Unless you remove the splice plate you will not be able to install all t-nuts from the front or back.
- 4. Now is also a good time to add any additional t-nuts into the top of your 8020 side rails that you may need for other accessories (awnings, etc.). Even if you get them close and have to remove one cross bar bracket to re-position them bolts past it, at least you won't have to remove all of them.
- 5. In some cases, your 4 hole splice plate may interfere with your desired cross bar location. If this is the case, slide the 4 hole splice plate to one side, or just use the 4 hole cross bar bracket as the splice plate.
- 6. Note, your 8020 rack adapters and cross bars may also interfere from time to time. If your cross bar can not be moved, just re-position the roof rack bracket forward or backward as needed.
- 7. Lower your cross bars onto the 8020 side rails
- 8. Apply Blue Loctite 242 to the sides of the hardware provided with the cross bar assemblies, and thread them into the installed t-nuts. Do not fully tighten.

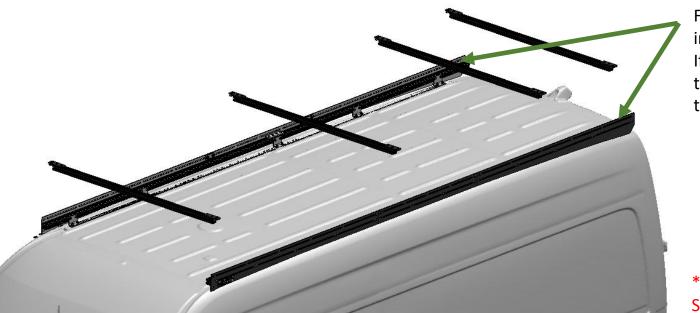


For every cross bar, slide 2 t-nuts into the top of each 8020 side rail. If cross bars are located in front of the 4 hole splice plate, insert those t-nuts from the front

Potential Interference / Adjustments

• In some cases, your 4 hole splice plate may interfere with your desired cross bar location. If this is the case, slide the 4 hole splice plate to one side, or just use the 4 hole cross bar bracket as the splice plate.

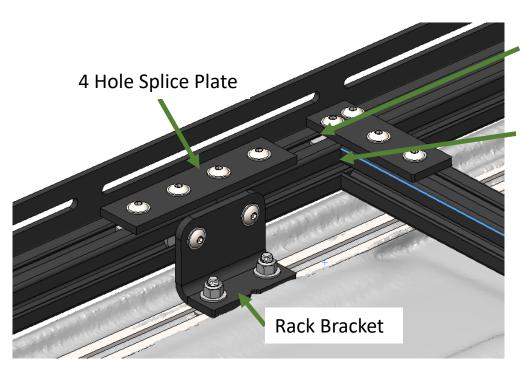


 Cross Bar Plate would interfere with 4 hole splice plate.

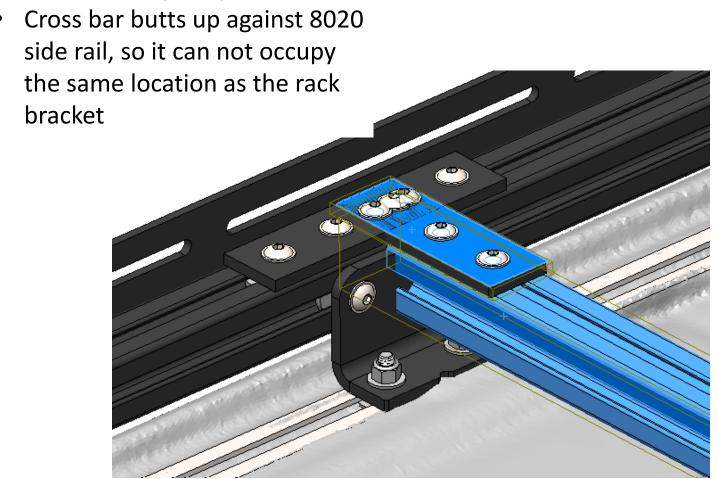


Potential Interference / Adjustments

Solutions to splice plate interference

Side rack bracket and splice plate forward or backwards, trying to leave at least 1 bolt engaged on both pieces of 8020 to keep that splice strong

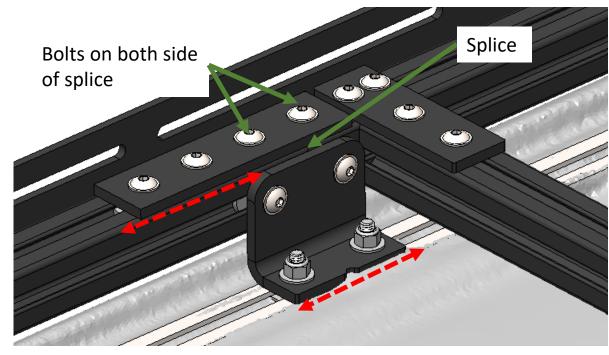


Or slide splice plate and bracket out of position, and let the cross-bar bracket rest at the 8020 splice

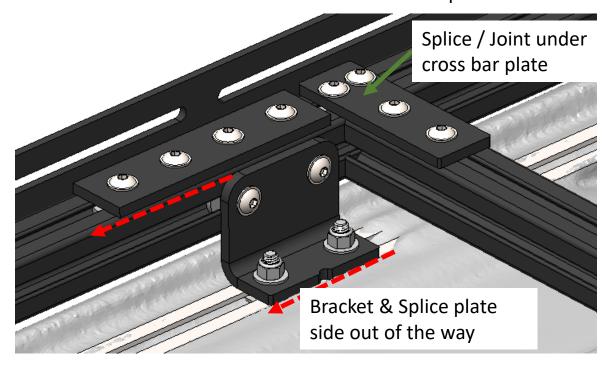

Potential Interference / Adjustments

 Note, your 8020 rack adapters and cross bars may also interfere from time to time. If your cross bar can not be moved, just re-position the roof rack bracket forward or backward as needed.

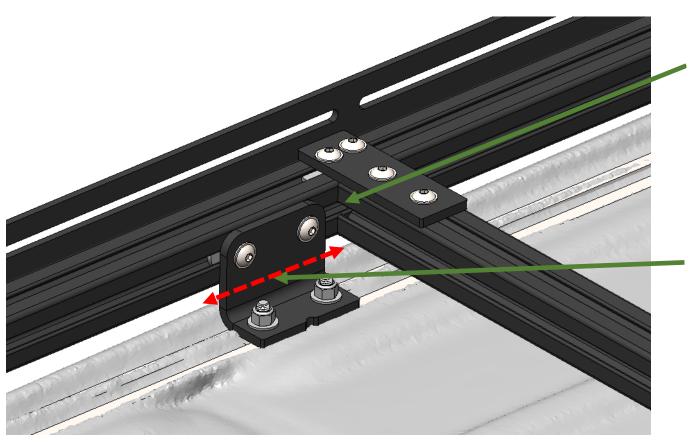

Cross bar butts up against 8020 side rail, so it can not occupy the same location as the rack bracket

Options:

- 1. Reposition cross bar
- Slide rack bracket forward or backwards to eliminate interference

Loosely Install Wind Fairing Assembly

This step should be completed with 2 people using 2 ladders

Tip: Use rags as needed to protect the van if you need to sit the wind fairing on the van roof


Warning: Take extra precautions to not drop the wind fairing onto the wind shield, and down the front of the van

Note: The slots in the side plate allow for forward / backward adjustment of the wind fairing, as well as gives the ability to adjust the

angle of the wind fairing

1. Install rubber bulb seal onto the leading edge of the wind fairing assembly

- 2. Lower the wind fairing assembly down so it is on the outside of the side plates
- 3. Insert the 5/16-18 x 1" long BHCS through the 5/16" washer, apply anti-seize to the side of the bolt, insert through the side plate, through the 2nd 5/16" washer, and into the nylock nut. Use a 3/16" allen wrench and a ½" socket wrench to tighten, do not fully tighten.
- 4. Repeat for other bolts
- Use the slots in the side rail assembly to position the wind fairing as desired and snug up hardware
- 6. Confirm that both side rails are the same distance from the end of the factory rack track.
- 7. Confirm wind fairing and side rail assembly achieve desired fit and look
- 8. Tighten all hardware attaching wind fairing to side rail assemblies

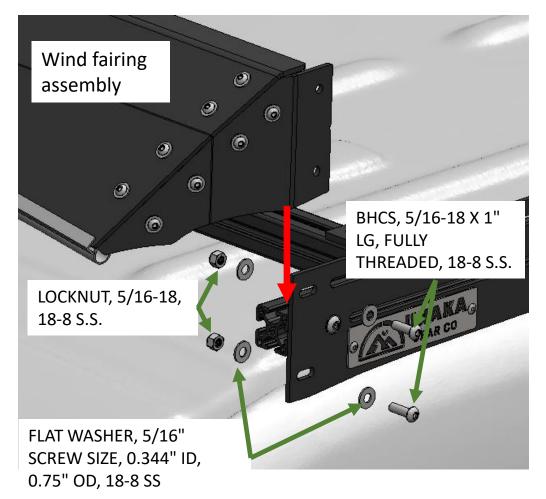



Set side rail to side rail spacing

This step should be completed with 2 people using 2 ladders

- Position 3 to 4 of the installed cross bars along the length of the rack
 - a) At a minimum place one towards the front, one towards the middle, and one towards the back
 - b) Do not place cross bars directly over a rack bracket
- 2. Loosely bolt the cross bars to the 8020 rails
- Once the cross bars are in place, center the rack on the van and set the side rail to side rail spacing so that the cross bars are tight, but can still be removed, or adjusted forward or backwards. As you adjust, the rail to rail spacing, snug up the roof rack brackets and cross bar hardware
 - a) If the rack brackets are too tight, loosen them just enough to allow the rail to rail spacing to be set
- 4. Once everything is parallel and even with each other, tighten the rack brackets to the van roof.
- Double check that all rack brackets are tight before moving to the next step. Once solar panels and other items are installed, tightening and checking this hardware is difficult.

*Image shows a Sprinter 170 Van

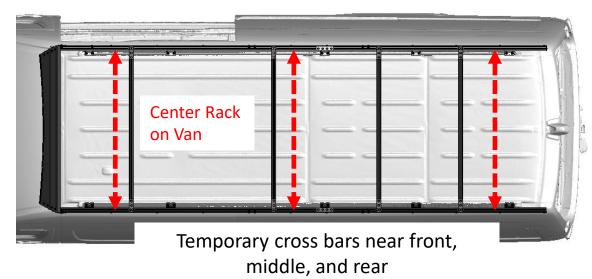

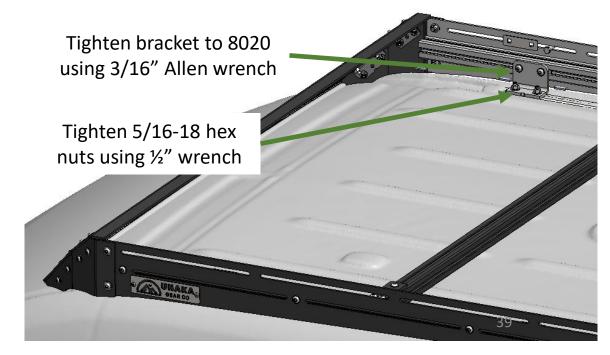


Final Install of Cross Bar Assemblies

- 1. Remove and reposition any cross bars that were not located in their final locations during the rail to rail spacing step
- 2. The final position of the cross-bar assemblies can now be set
 - See subsequent pages about potential cross bar and splice plate interferences
 - See subsequent pages on solar panel layouts
- 3. If you completely loosen, or find your self loosening a bolt that already has Loctite on it several times, remove it and apply some more


Final Torque Checks

Once everything is installed, go back and check that all hardware is tight.

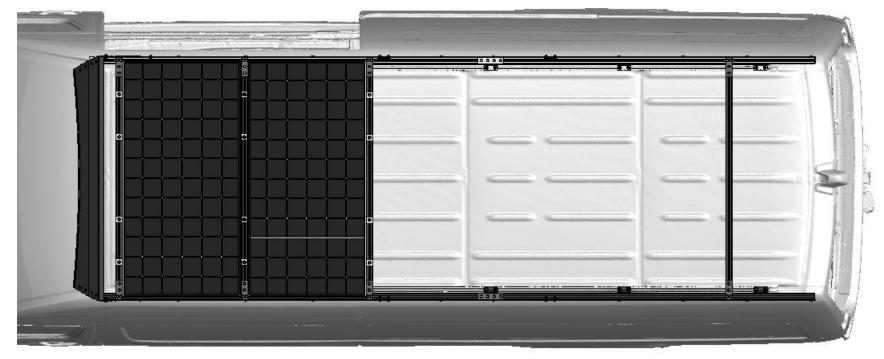

Potential Cross Bar to Splice Plate Interference

In some cases, your rack layout may require your cross bars to occupy the same space as the splice plates, see Figure 8. In this example, there are no fans or other items on the roof that would prevent the solar panels and cross bars from being installed a few inches further back to eliminate the interference. If this was not an option, the L-bracket can simply be rotated 180 degrees so that it is pointed away from the splice plates instead of towards them.

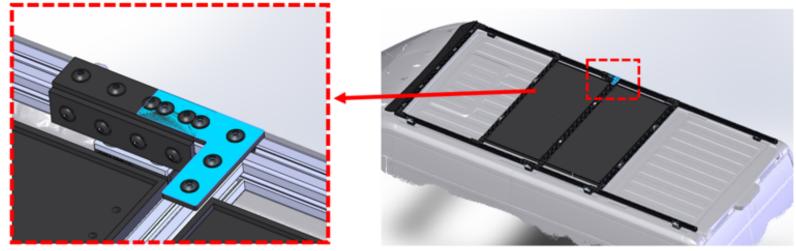

*Image shows a ProMaster 159" WB


Figure 8: Top splice plate and cross bar bracket interference, flip L-bracket 180 degrees or move splice plate


If you cannot re-arrange your layout the following options can be used to eliminate the interference

- If possible, rotate the L-brackets 180 degrees so they do not interfere with the splice plates.
- If the rack is only supporting solar panels and the front and rear side rail are being joined at an Unaka 8020 adapter bracket on one side, then consider just using 1 splice plate instead of both plates.

200W Solar Panel Notes

- 1. This rack was designed to fit specific 200W solar panels
- 2. When these panels are installed, they will rest over the top of the 8020 side rails
- 3. If the solar panel occupies the same area as the splice plate, just remove the splice plate or relocate it to the inside of the side rail if a rack bracket is not used at that location

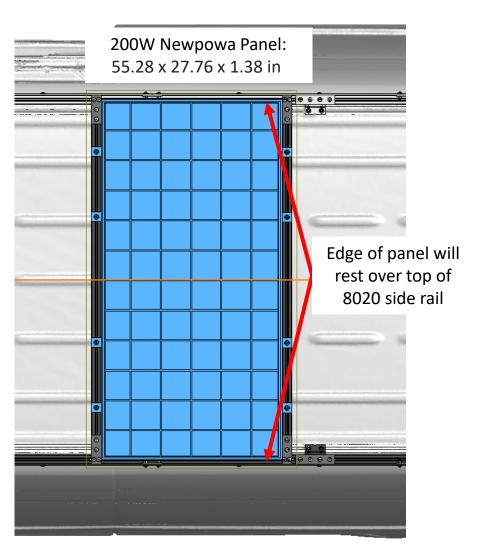


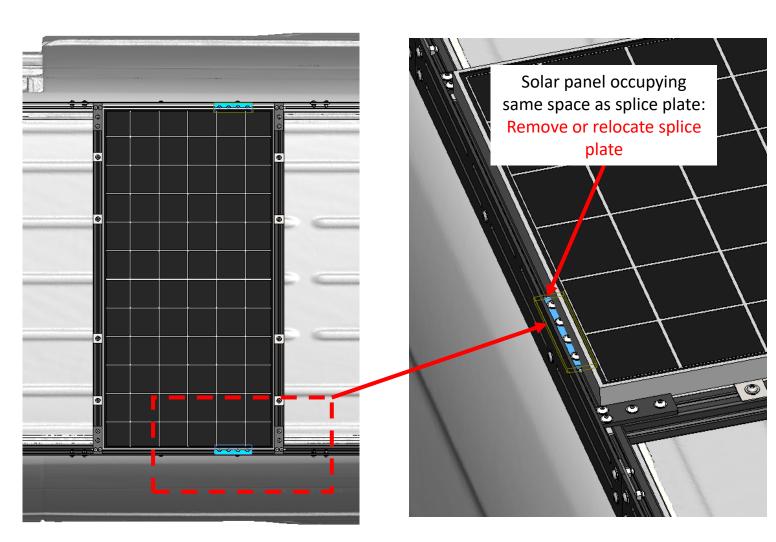

Top Mount Solar Panels: 200W Solar Panel Notes


- 1. The Unaka Sprinter HSLD rack was designed to fit certain 200W solar panels width wise on the van while still being concealed behind the side plates
- 2. To accomplish this, these panels must be mounted using our Top Mount solar panel brackets
- 3. 200W solar panels should be mounted using 8 top mount or flush mount solar panel brackets per panel (4 per side)
- 4. Max solar panel length is 55.28" long



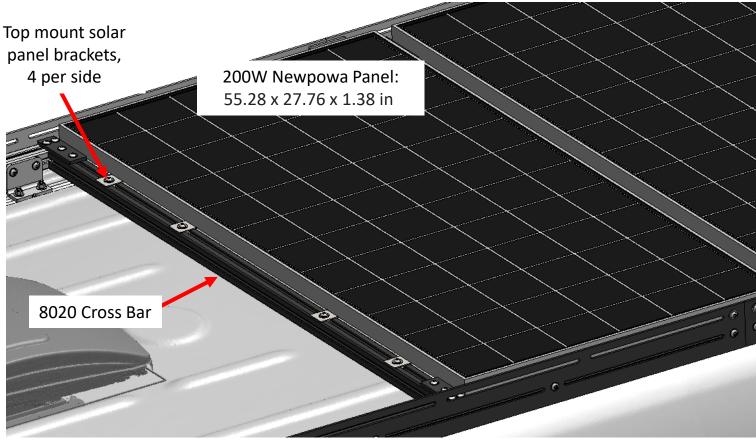

Optional Flush Mount Solar Panels: Renogy 175W Solar Panel

- 1. If you are using smaller solar panels, you may choose to install them with flush mount solar panel brackets. This allows the solar panels to rest down inside of the cross bars / side rail profiles in a more traditional flush style.
- 2. To install solar panels with flush mount brackets, the total width must be less than 52.75" which is roughly the useable width between side rails
- 3. Flush mount solar panel brackets are sold separately
- 4. Approximately useable width between side rails: 52.75"
- 5. The Renogy 175W solar panels are 49.7" long and fit down between the cross bars and side rails nicely

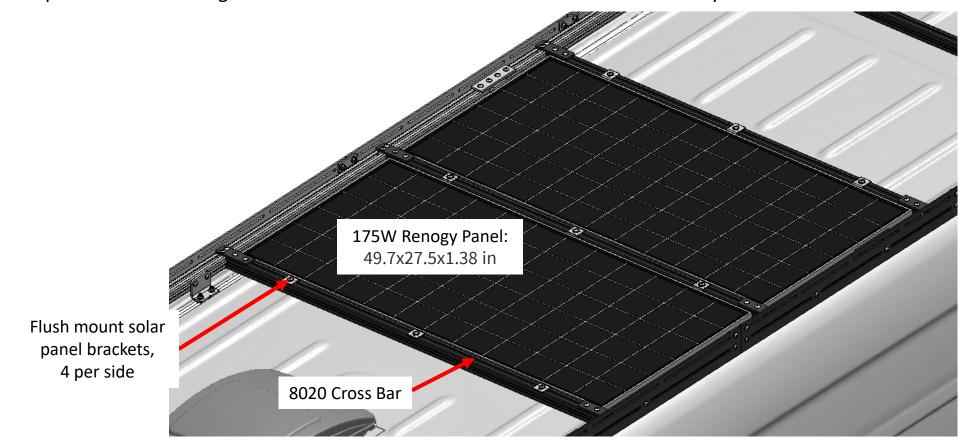

Preventative Maintenance Checks

Even though we do not expect any of the hardware to come loose, we recommend checking your roof rack hardware from time to time to help minimize the chance of something coming loose over time. Using the appropriate wrenches check the roof rack hardware to ensure nothing is coming loose at the intervals below.

- Initial check after 4 to 7 days of moderate driving
- Follow Up Check 1 month after moderate driving
- Routine checks 3 to 4 months of moderate driving
- Anytime after moderate driving on bumpy roads or gravel roads

This completes the installation of your HSLD kit.

Legal Disclaimer

Legal Disclaimer:

Unaka Gear Co. makes no warranties whatsoever, expressed, or implied, oral, or written to any purchasers, except the limited warranty described on our website. Unaka Gear Co. is hereby specifically excluded from any implied warranty of incidental, secondary, or consequential damages of any kind whatsoever. All purchasers and users of products manufactured by Unaka Gear Co. agree to hold harmless and indemnify Unaka Gear Co from any and all claims arising from their use. Failure to receive notice of any limitations or the limitations contained in this disclaimer shall not serve to extend liability to Unaka Gear Co. for any claims arising out of use of its products.

