

# **BLADES SLIPPING?**

**IF YOU ENCOUNTER AN ISSUE WITH THE BLADES  
SLIPPING ON YOUR RED HOME SERIES TOOL, IT  
MAY BE DUE TO THE CLEAR COAT ON THE PAINT IN  
THE BLADE POCKET**

**TO RESOLVE THIS ISSUE, FOLLOW THE STEPS BELOW**



- 1. REMOVE THE BLADES (CAUTION - SHARP)**
- 2. LOCATE THE BLADE POCKET**
- 3. LIGHTLY SAND OFF THE CLEAR COAT WITH 150 GRIT SANDPAPER**
- 4. VERIFY THAT THE CLEAR COAT HAS A 'ROUGHED UP' SURFACE**
  - THIS ALLOWS THE BLADE TO HAVE A BETTER GRIP WHILE CUTTING**
- 5. REPLACE THE BLADES & TRY CUTTING AGAIN TO ENSURE IT FUNCTIONS PROPERLY**
- 6. REPEAT STEP 3 IF NECESSARY**

**STILL EXPERIENCING ISSUES? GIVE US A CALL AT 715-720-4719**