

## **ARC-H Wireless Charger**

ARC-H has a charging range of 15-30mm. Standard surfaces up to 25mm do not require under surface routing.

ARC-H can be fixed to the underside of the surface using screws. The decal is placed on the surface using the unique magnet alignment method.

Dimensions: - 154mm X 110mm X 10mm



INSTALLATION: ARCH has a wireless range 15-30mm, no routing is required for thicknesses up to 25mm.



Position your wireless changing marker decal on the dask where you would charge your phone. Under desk / surface must be clear of framing, motal objects and motal shactures.



Romove the backing from the wireless decal marker and stick firmly onto the clean surface. I'sace the magnet provided in the center of the




Hold the top magnet firmly in place while aligning with the cardboard magnet template under the surface to find the correct position for the ARC-H. Use a pencil to mark the screw hole locations.



Use screws to secure the ARC-H wireless charger in place. Plug in the power supply and use cable clips to monage any loose cables. (ensure the arc logo is aligned with desktop decal marker)

## Charging Coil Alignment

When installing ARC-H please note the magnet alignment lines up with the charging coil located at one end of the module. The centre of the arc logo is the centre of the charging coil. When installing it is necessary to have the module arc logo line up with the surface arc logo.

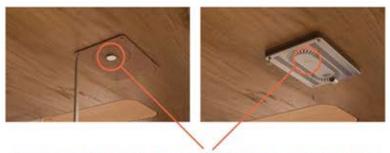

The Magnet and ARC logo indicate the centre of the charging coil. Ensure the module is mounted aligning the desktop decal with the module arc logo

## Metal Objects

Once installed ARC-H must be a minimum of 35mm from any metal objects or structures. ARC-H will not operate through metal surfaces. ARC-H modules must be a minimum of 300mm apart.

