







DESKY







XL Pro

Ergonomic Chair

ASSEMBLY INSTRUCTIONS

BEFORE ASSEMBLING THIS PRODUCT, PLEASE READ THE INSTRUCTIONS CAREFULLY

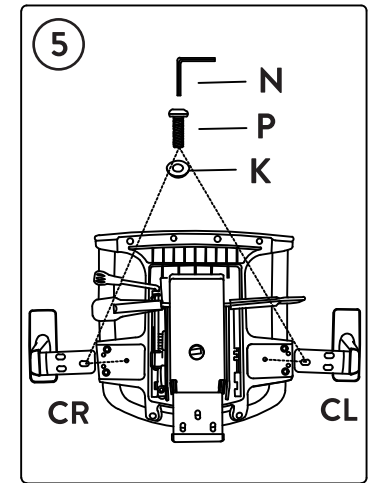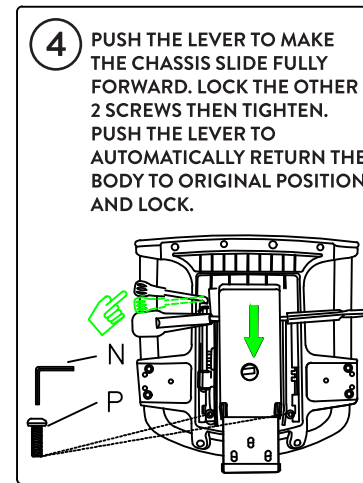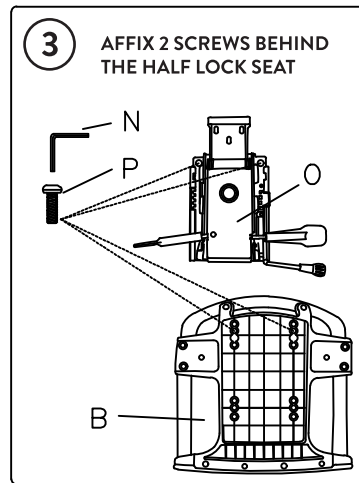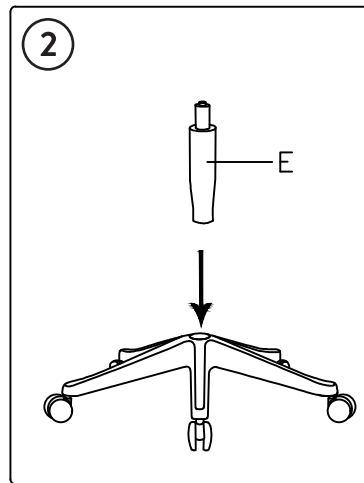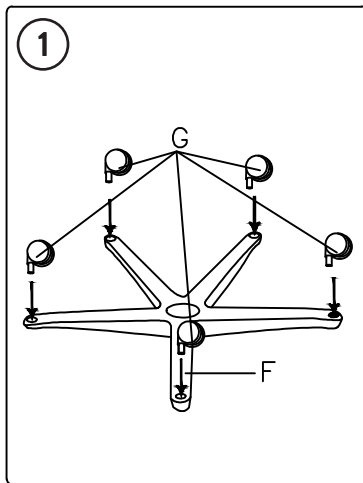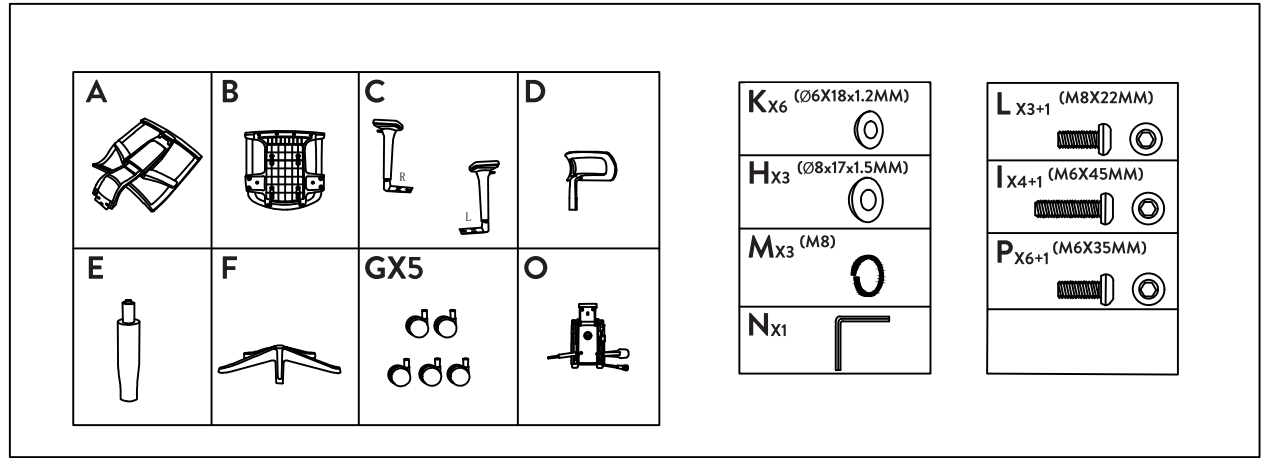

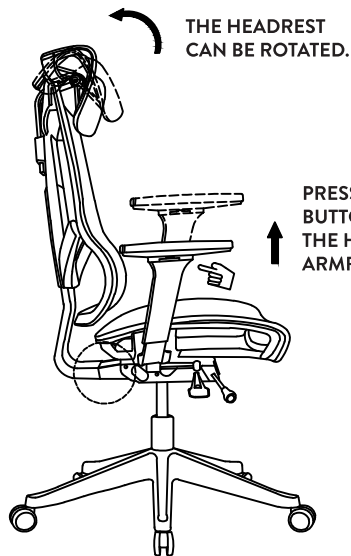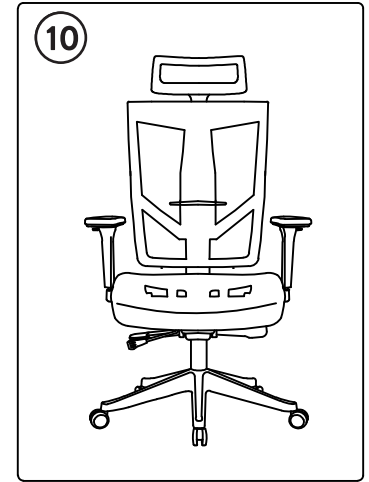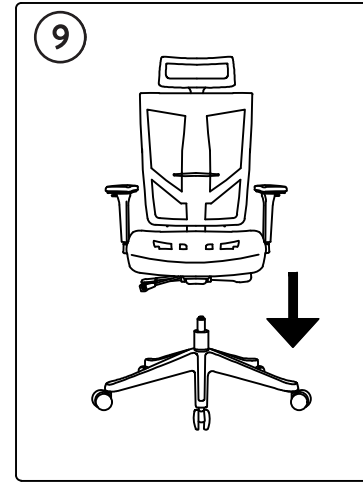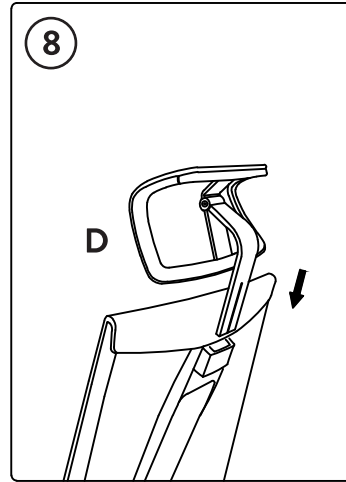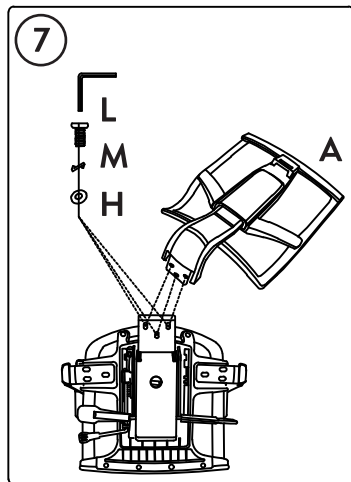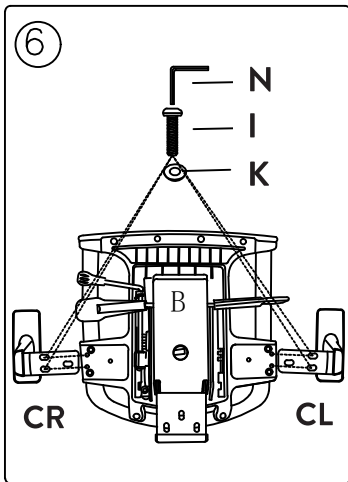


THE HEADREST CAN BE ROTATED.


PRESS THE ARMREST'S BUTTON TO ADJUST THE HEIGHT OF THE ARMREST.

ADJUST THE CHASSIS HANDLE UPWARDS TO SUIT THE HEIGHT OF THE USER. ADJUST THE SEAT HEIGHT TO ACHIEVE THE DESIRED SEAT POSITION.


ADJUSTABLE CHASSIS HANDLES TO CONTROL THE BACKREST ANGLE. LOCKS IN FOUR POSITIONS.

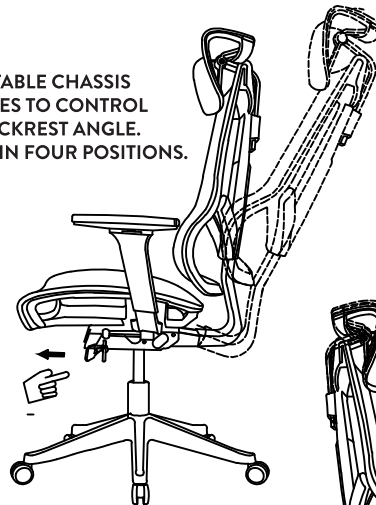

DRAG THE BACK FRAME UP WITH BOTH HANDS AT THE SAME TIME TO ADJUST THE HEIGHT OF THE BACK OF THE CHAIR ACCORDING TO THE HEIGHT OF THE USER.

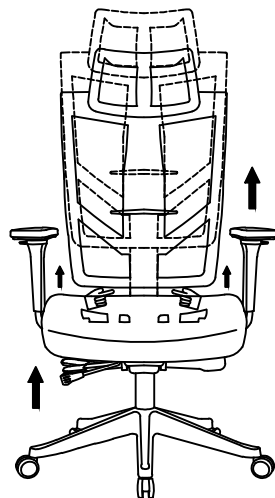

THE HEADREST CAN BE ADJUSTED UP AND DOWN.

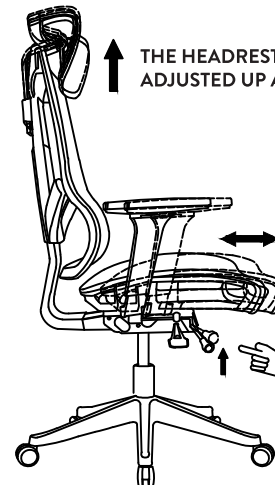

ADJUST THE CHASSIS HANDLE UPWARDS TO ADJUST THE SEAT DEPTH.

FUNCTIONS



WARNING
FAILURE TO FOLLOW THESE INSTRUCTIONS
MAY RESULT IN SERIOUS INJURY

1. THIS PRODUCT IS DESIGNED AS SEATING ONLY. DO NOT STAND ON THIS PRODUCT. DO NOT USE IT AS A STEP LADDER.
2. DO NOT USE THIS PRODUCT UNLESS ALL BOLTS AND PARTS ARE FIRMLY TIGHTENED.
3. IF ANY PARTS ARE MISSING, DAMAGED OR WORN, STOP USING THIS PRODUCT. REPAIR THE PRODUCT ONLY WITH MANUFACTURER'S SUPPLIED PARTS.
4. DO NOT SIT ON THE ARMREST OF THIS PRODUCT.
5. THIS PRODUCT IS DESIGNED FOR SITTING ONE PERSON AT A TIME.
6. CHILDREN UNDER THE AGE OF 10 SHOULD ONLY USE UNDER ADULT SUPERVISION.