9-305-1035 07-12 Mustang GT500 DW300m Fuel Pump Installation Guide





Parts List:

- DW300m (x2)
- Fuel Sock (x2)
- 5" Electrical Connector (x2)
- Super Lube



DeatschWerks

07-12 GT500 DW300m Fuel Pump Installation Guide

07-12 GT500 DW300m Fuel Pump Install

PLEASE READ – this guide is intended to aid in the installation of our products. It is recommended that factory manuals or instructions are followed to remove the fuel pump assembly from the vehicle. Some instructions in this guide are generic. The factory manual should supersede any contradiction.

Below is a picture of suggested tools that will make the installation process easier.







DeatschWerks 07-12 GT500 DW300m Fuel Pump Installation Guide

1- remove the 2 screws (3/16" head) from the assembly base



2 – pry the fuel sock off the pumps and then pull the base away from the assembly



3 – disconnect the electrical connectors from the pumps and then pull the pumps out of the assembly





DeatschWerks

07-12 GT500 DW300m Fuel Pump Installation Guide

4 – the DW300m pumps are ready to install out of the packaging, install into the pump assembly and plug in the electrical connectors. The connectors on the original assembly should plug into the DW300m pumps. If the pump assembly has a different connector design than the DW300m or if the original connectors and wires are not in usable condition, wire in the supplied connectors from the DW kit



5 – reinstall the base on the assembly and reinstall the screws






DeatschWerks

07-12 GT500 DW300m Fuel Pump Installation Guide

6 – either the OE pre-filter or the supplied DW pre-filters may be used to complete the installation

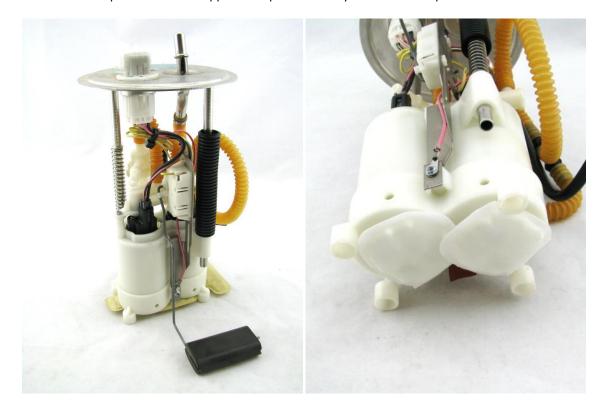

7 – reinstall the assembly into the fuel tank and attach a length of hose to the outlet of the pump assembly allowing it to drain into a fuel safe container and prime the fuel pump assembly

8 – cycle the key to the on position as many times as required to prime the pump assembly and evacuate the air introduced during the pump installation process

9 – attach supply line to the outlet of the pump assembly

