

>> USER GUIDE

POWER ROW

P

FLUID POWER ZONE

REGISTER YOUR PRODUCT AT WWW.FIRSTDEGREEFITNESS.COM/SUPPORT

Congratulations on your purchase of POWER ROW.

FIRST DEGREE FITNESS is proud to present the Rower as a full commercial use product featuring patented Adjustable Fluid Resistance.

 
Follow all instructions carefully for correct assembly, tank filling, water treatment, service and safety.

Access to our world-wide distributor and service network is available at www.firstdegreefitness.com

Check contents of Box 1 and Box 2 to assure all parts are present and correct prior to assembly.

Training with the POWER ROW

- 1. As with any piece of fitness equipment, consult a physician before beginning your Rower exercise program.
- 2. Follow instructions provided in this manual for correct foot position and basic rowing techniques.
- 3. For more detailed rowing techniques, please refer to our international website at <u>www.firstdegreefitness.com</u>



- 1. Keep hands and fingers away from moving parts, as indicated in this manual.
- 2. The Rower can stand vertically for storage. Make sure a secure location is chosen, such as the corner of a room or against a wall on an even, secure surface.

>> Contents

Safety	. 5
Assembly	. 7
POWER ROW Box 1 & 2 Contents	. 8
Assembly Instructions	. 9
Operating Instructions	14
Bluetooth Auto-Adjust Monitor	17
Calibration Procedure	18
Vaintenance	19
Troubleshooting	20
Tank Belt Adjustment	22
Bungee Cord Replacement. Dealer Assistance Required	23
nternational Warranty	24

Safety Information

- Before using this product, it is essential to read this ENTIRE operation manual and ALL instructions. The Rower is intended for use solely in the manner described in this manual.
- UNDERSTANDING EACH AND EVERY WARNING TO THE FULLEST IS IMPORTANT
- As with any piece of fitness equipment, consult a physician before beginning your Rower exercise program.
- Please be aware that any fitness regime, before being undertaken, is best preceded by a physical checkup from a certified physician.
- Injuries to health may result from incorrect or excessive training.
- WARNING Heart rate monitoring systems may be inaccurate. Over exercise may result in serious injury or death. If you feel faint, stop exercising immediately.
- Stop the machine immediately if any signs of excessive wearing is present on the belts, pulleys and bungee cords. Do not use unit until said parts are repaired or replaced.
- Do not allow children unattended access to the machine.
- The Rower can stand vertically for storage. When doing so, please follow the instructions given in the manual.
- Please keep hands away from moving parts, as indicated by the warning label on the mainframe of your machine.
- If any of the adjustment devices are left projecting, they could interfere with the user's movement.
- Do not store in freezing conditions with water in the tank as it can expand and crack the components.

Installation

- Place on a stable, flat surface in a horizontal position during use for maximum stability.
- Check all belts, pulleys and bungee cords regularly for signs of wear, and replace if needed.
- Check regularly and follow all instructions for maintenance as specified in this manual.
- Replace immediately any defective parts and do not operate unit until all repairs are complete.

Proper Usage

- Do not use any equipment in any way other than designed or intended by the manufacturer. It is imperative that FIRST DEGREE FITNESS equipment is used properly to avoid injury.
- Injuries may result if exercising improperly or excessively. It is recommended that all individuals consult a physician prior to commencing an exercise program. If at any time during exercise you feel faint, dizzy or experience pain, STOP EXERCISING and consult your physician.
- Keep body parts (hands, feet, hair, etc.), clothing and jewelry away from moving parts to avoid injury.
- Follow instructions provided in this manual for correct foot position and basic rowing techniques.
- For more detailed rowing techniques, please refer to our International website www.firstdegreefitness.com

Inspection

- DO NOT use or permit use of any equipment that is damaged and/or has worn or broken parts. For all FIRST DEGREE FITNESS equipment use only replacement parts supplied by FIRST DEGREE FITNESS.
- Cables and belts pose an extreme liability if used when frayed. Always replace any cable or belt at first sign of wear (consult FIRST DEGREE FITNESS if uncertain).
- EQUIPMENT MAINTENANCE Preventative maintenance is the key to smooth operating equipment as well as to keep your liability to a minimum. Equipment needs to be inspected at regular intervals.
- Ensure that any person(s) making adjustments or performing maintenance or repair of any kind is qualified to do so.
- DO NOT ATTEMPT TO USE OR REPAIR ANY ACCESSORY APPROVED FOR USE WITH THE FIRST DEGREE FITNESS EQUIPMENT WHICH APPEARS TO BE DAMAGED OR WORN.
- Check all belts, pulleys and bungee cords regularly for signs of wear, and replace if needed.
- Check regularly and follow all instructions for maintenance as specified in this manual.
- Replace immediately any defective parts and do not operate unit until all repairs are complete.


Operating Warnings

- Keep children away from the equipment. Parents or others supervising children must provide close supervision of children if the equipment is used in the presence of children.
- Do not allow users to wear loose fitting clothing or jewelry while using equipment. It is also recommended to have users secure long hair back and up to avoid contact with moving parts.
- All bystanders must stay clear of all users, moving parts and attached accessories and components while machine is in operation.
- MARNING Do not insert fingers into tank!
- **CAUTION** After rowing exercise, please allow the unit to sit for 5 minutes before standing it up for storage.
- CAUTION Do not fill past the calibration mark as indicated on the tank level sticker or water spillage can occur.
- WARNING Never operate this rower without feet properly secured in Footstraps, or without the sliding portion of the Slider Footplate locked into position!

Product Specifications


Product Class: SC Braking System: Speed Independent Product Net Weight: 61.9kg (136.47lb) Product Gross Weight: 72.5kg (159.84lb) Minimum Safe Operating Surface Area: 3150mm (124.02") Length x 2010mm (79.13") Width Dimensions: 1950mm (76.77") Length x 810mm (31.89") Width x 860mm (33.86") Height Maximum User Weight: 180kg (396.83lb) Compact Footprint: 2550mm x 1410mm or upright 860mm x 810mm

Product Highlights

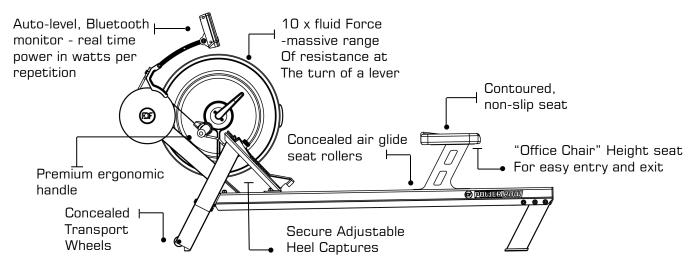


The live area shall be not less than 23.62"(60cm) greater than the training area in the directions from which the equipment is accessed. The live area must also include the area for emergency dismount.

Live area and Training area

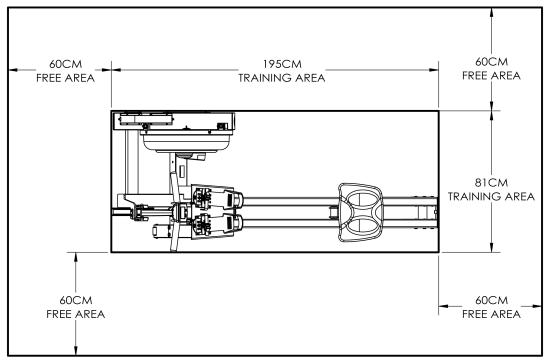

Note: Rower is not suitable for therapeutic purposes.

POWER ROW Box 1 & 2 Contents

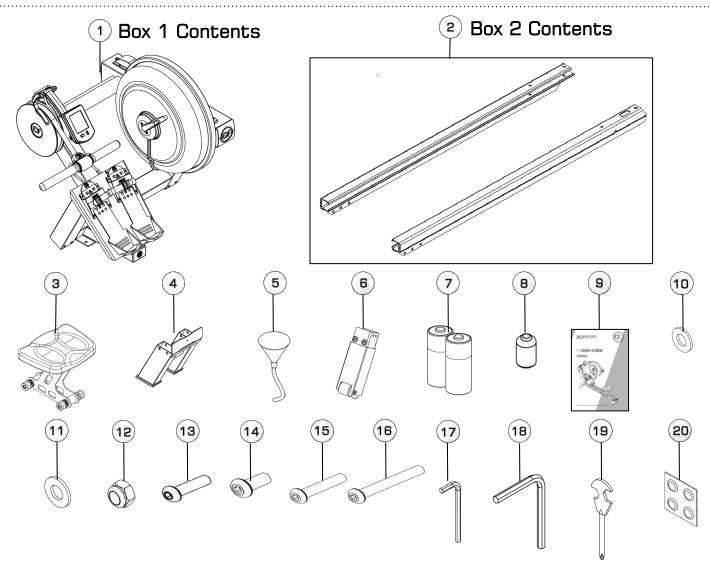

ltem	Qty.	Description	ltem	Qty.	Description
1	1	Main Frame	6	2	Front Leg
2	2	Left/Right Seat Rail	7	2	D Cell Duracell Battery
3	1	Rower Seat	8	1	Touch Up Paint
4	1	Rear Leg	9	1	User Guide
5	1	Funnel and Hose			
Hardware KIT					
10	4	M6 Washer	16	4	M10x70mm Bolt
11	18	M10 Washer	17	1	4mm Allen Key
12	4	M10 Nylock Nut	18	1	6mm Allen Key
13	4	M6x20mm Bolt	19	1	Multi-Tool
14	8	M10x20mm Bolt	20	4	Water Treatment Tablet
15	4	M10x47.5mm Bolt			

* Note Hardware pack contains 2 Bolts only. The remaining Bolts are pre-installed on the Rower seat rails for assembly convenience.

>>> Assembly Instructions

STEP 1

REQUIRED

- Mainframe [1]
- 2 x Front Leg [4]
- 8 x M10 Washer [11]
- 8 x M10 x 20 mm Bolt [14]


Do not free the Rowing Handle and Computer Stalk before assembly is complete.

The Rower components such as mainframe and seat rails are heavy. Use care during assembly.

Rower Seat Rails Can have Sharp Edges on the Front Portion Facing the Mainframe Use Caution During Assembly. a) Remove the **Mainframe[1]** and all components from Box 1 Check all parts against the box contents.


Installation Rowing Front Leg for POWER ROW

 b) Lay on soft surface such as carpet as shown. Tilt frame upward slightly and install rower Front Leg [4] with 4x
M10x20mm Bolt [14] and M10 Washer[11]. Repeat for other leg.

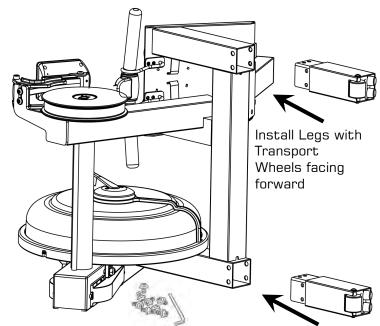

Tilt Mainframe upward slightly to install the Lower Leg

c) Slowly stand Rower Mainframe upright.

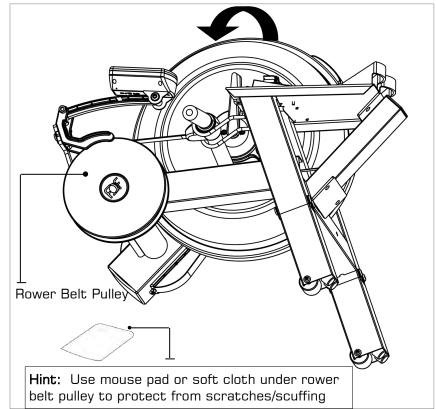

>> Assembly Instructions

 
a)


Attach Seat Rails to Frame

REQUIRED

STEP 2

- Mainframe [1]
- Loft/Dight Spat Dail [2]
- 4 v M10 Wachers [11]
- 4 x M10 Nyloc Nuts [12]
- 2 x M10 x 70mm Bolts [16]




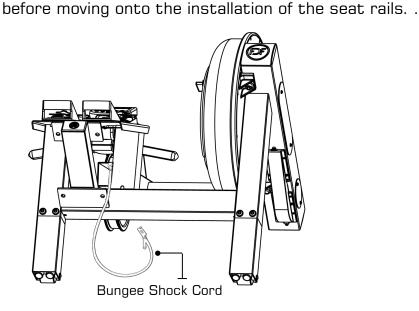

b) Once the Mainframe is safely standing upright on a stable surface, unpack the Left/ Right Seat Rails[2] and hardware kit from Box 2 for the next step of assembly.

Locate and unwrap the Bungee Shock Cord from the frame


c) Align and secure lower attachment points using M10x70 mm Bolts[16], M10 Nyloc Nuts[12] and M10 Washers[11]

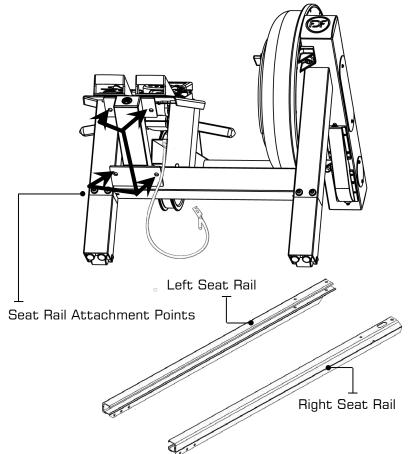


Note: $2 \times M10 \times 70$ mm Bolts are Preinstalled on the Seat Rails For your Convenience


Attach Seat Rails to Frame

d) Begin with left **Seat Rail[2]**. using the preinstalled **M10x70mm[16]** Secure from behind with **M10 Nylock[12]**.

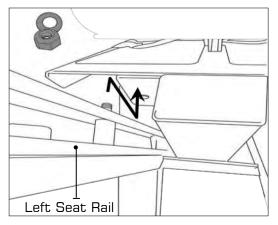


 e) Install lower left Seat Rail[2] using M10x70mm Bolts[16], Nyloc Nuts[12] and M10 Washers[11].

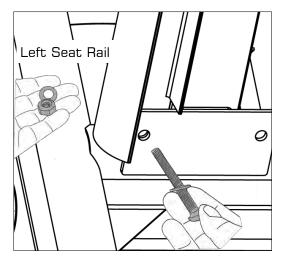



f) Before installation of the right **Seat Rail[2]**, thread the Bungee Shock Cord through the top of the Seat Rail, around the Bungee Pulley and out the bottom as shown.

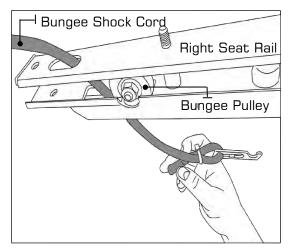


g) Once this is complete, follow the same assembly procedure for the left Seat Rail.

>>> Assembly Instructions

STEP 3

Assemble Rowing Seat


- CAUTION The Rower Seat[3] is Heavy. Use Both Hands and Keep Fingers Clear of the Rower Channels When Guiding the Seat down the seat Rails.
- a) Slide the assembled Seat Rails[2] facing in the direction of the arrow in the above graphic. The Seat indentation Must be towards the rear of the rower.

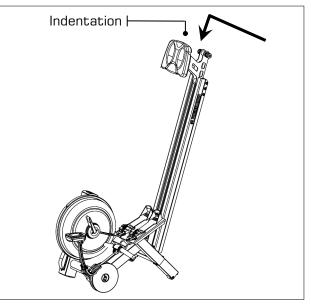


STEP 4

Install Rear Leg


- REQUIRED
- Rear Leg [4]
- 4 x M6 Washers [10]
- 4 x M10 Washers [11]
- 4 x M6x20mm Bolts [13]
- 4 x M10x47.5mm Bolts [15]
- a) Mount the **Rear Leg[4]** onto the seat Rails and secure as shown.

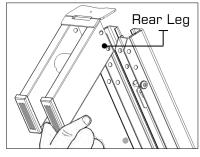

b) Install all M10x47.5mm bolts[15] and M10 washers[11] first from the outside to hold the Rear Leg[4] in position.

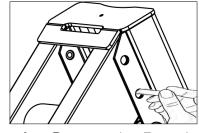

c) Secure the Rear Leg from the inside with the M6x20 mm Bolts[13] and M6 Washers[10].

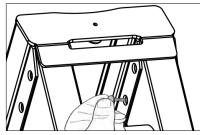


Note: Third bolt hole on right of Rear Leg and Seat Rail is for Bungee Hook Attachment

>>> Assembly Instructions

Attach Bungee Shock Cord

STEP 5

The Bungee Shock Cord will be Under Tension when Stretching to Install. Do Not Let Go of the Bungee While Under Tension as This Could Cause Injury And/ or Damage to the Rower a) Connect the Bungee Shock Cord to the Seat Rail and install the rower Seat.

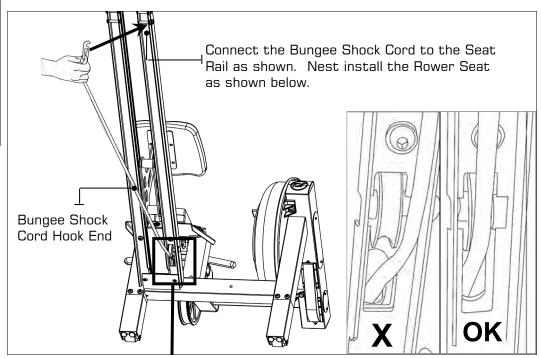


b) When attaching the Bungee Hook, make sure that the Bungee Shock Cord is running correctly the Bungee Pulley as shown upper.

STEP 6

VARNING Do Not Free the Rower Handle Before the Bungee Shock Cord has Been Correctly Attaching (See Step 5 of Assembly Instructions)

Complete the Assembly

a) Lower the rower to the operational position and free the Heel Support Plate, Rowing Handle and Computer Stalk Mount.

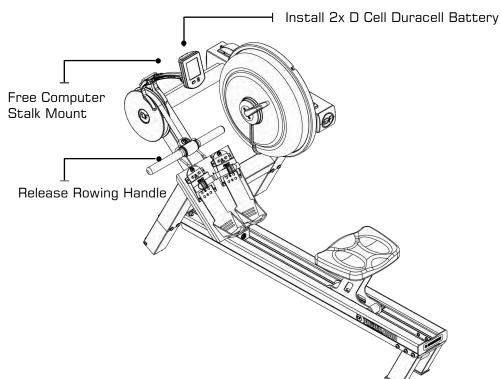


Operation Instructions

>> Tank Filling and Water Treatment

REQUIRED Funnel and Hose [5].	i
Use a drop cloth under the tank when filling to avoid damaging to floor or	

avolu uarnaying to noor or			
carpet.			
Do not fill past the			
calibration mark as			
indicated on the tank			
level sticker or water			
spillage may occur.			

- a) Filling requires a large bucket (not Supplied) and the supplied water **Funnel and hose[5]**. Filling will take approximately 8 liters of water.
- b) Open the yellow fill plug on the back of the tank and insert hose (rotating the impeller slightly may be necessary to allow the hose to pass). Note: In areas where tap water quality is known to be poor, FDF recommends the use of distilled water.
- c) Move the Tank Adjuster Handle to Level 10 and begin filling. Do not fill the tank higher than the level indicator on the front of the clear shell.
- d) Once filling is complete follow the water treatment procedure below, then replace the tank plug.

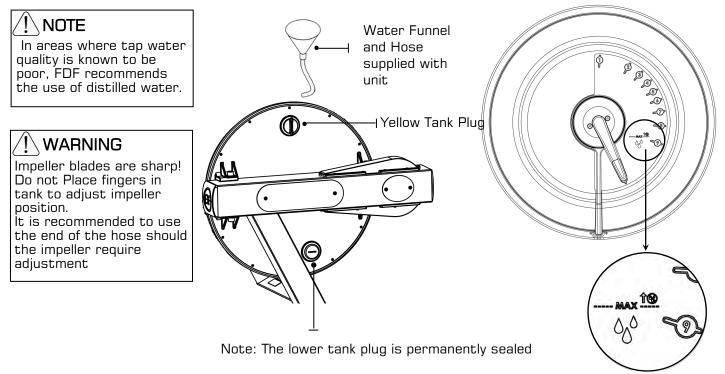

NOTE: For simple, fast and efficient filling and/or drainage of the Fluid Tank, we have a battery operated pump (rechargeable via USB) available as an option. We recommend this to any commercial facility, with multiple units, that has a need to drain and refill Tanks from time to time. To purchase, contact your nearest First Degree Fitness distributor or go to our website on www.firstdegreefitness.com for details.


INITIAL WATER TREATMENT

Add One Water Treatment Tablet per full tank. Do NOT, UNDER ANY CIRCUMSTANCE, USE A WATER TREATMENT TABLET OTHER THAN THOSE SUPPLIED WITH YOUR UNIT. Your unit purchase includes 4xWater Treatment Tablets, which is sufficient for several years of use.

To purchase additional Water Treatment Tablets, please consult your nearest regional dealer/distributor or check our website at www.firstdegreefitness.com

CHANGING RESISTANCE LEVEL

Changing resistance on your Power ROW is simple. The level of resistance is determined by the level indicator located on the front of the tank. Level one indicates lightest resistance, level ten represents heaviest resistance. The tank's variable fluid resistance technology ensures an instant catch and constant resistance throughout the movement.

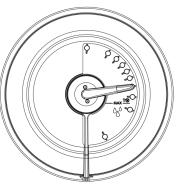

Your Power ROW computer will automatically adjust to the resistance level selected on the tank. Allow three to four seconds after adjusting resistance handle for the correct resistance level to be achieved.

LONG-TERM WATER TREATMENT


WARNING: DO NOT USE ANY OTHER WATER TREATMENT TABLET OTHER THAN THOSE SUPPLIED WITH YOUR UNIT.

The amount of time between water treatments can vary greatly depending on your unit's location and exposure to sunlight. Typically you can expect to treat your tank water every 12-24 months. If water becomes discolored or shows signs of algae / bacterial growth simply add one Water Treatment Tablet.

CAUTION: It is strongly recommended that a drop cloth be used under the fluid tank whenever the tank plug is opened for water treatment.

Draining / Changing Tank Water

- 1. Open the yellow Tank Plug.
- 2. Turn the rower onto its side. Once the rower is in this position, the tank can be drained.
- 3. For refill instructions refer to the tank filling section of this manual (Page 14).

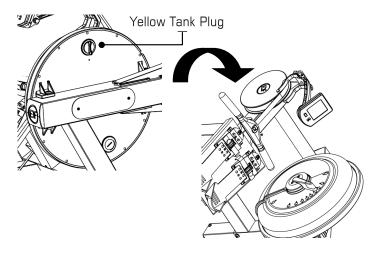


>> Storate

The rower is designed for compact storage in the vertical position. To ensure your safety, choose a suitable location, such as the corner of a room. It is recommended that something soft (such as carpet or a small towel) be placed under the rowing pulley of the unit to avoid chipping or floor damage.

CAUTION: The Rower is heavy, lift from back and pull at 45-degree angle.

>> Start Rowing

There are six phases to completing a rowing stroke

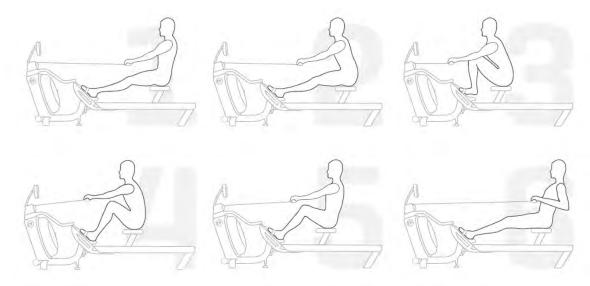

- 1. Sit with straight legs and back, leaning forward slightly at the hips with arms out straight and hands level with the lower ribs. Swing back.
- 2. Legs and back straight, leaning slightly forward from the hips, arms out in front. Lean and slide forward.

Note: Hands should now be around your knees, keeping legs straight.

- 3. Legs come forward, aiming to get the shins vertical. Back is still straight, and posture leaning slightly forward with arms still out front. Now drive hard, this is the CATCH.
- 4. Knees partially straightened so seat is now at mid-point of travel, back and arms still straight. Maintain the stroke.
- 5. Knees are nearly straight, back is still straight but now leaning slightly back from the hips. Arms straight. Now squeeze through.
- 6. Legs now fully extended. Back straight and leaning slightly back, now pull with the arms so they are close to the chest, forearms horizontal and elbows close in to the rib cage. This is the FINISH.

For more information on correct rowing technique and workout tips visit our website www.firstdegreefitness.com/indoor-rowing-technique


Adjust Footplates

The Footplate Slider accommodates most foot sizes, and is designed to keep your feet securely in place as you row. The feet should be positioned so that the foot strap covers the section of the foot naturally bend as row. (e.g. The **board** of the foot)

TO ADJUST:

Lift the top of the footplate from the mounting peg and slide vertically between 1-6 to suit your foot length. Secure by hooking the footplate back onto the mounting peg and pushing down firmly to lock it into position. Place feet on the foot plates and tighten the foot straps to ensure your feet sit firmly against the heel captures.

Note: The heel capture should bend to allow your foot to pivot naturally as you row.

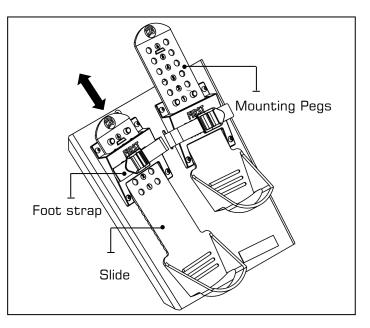


Bluetooth Auto-Adjust Monitor

Auto Start: Commence exercise to activate.

Reset all values: Press and hold RESET button for 3 seconds.

Auto Power Down: Over 5 minutes. All values revert to zero after restart.

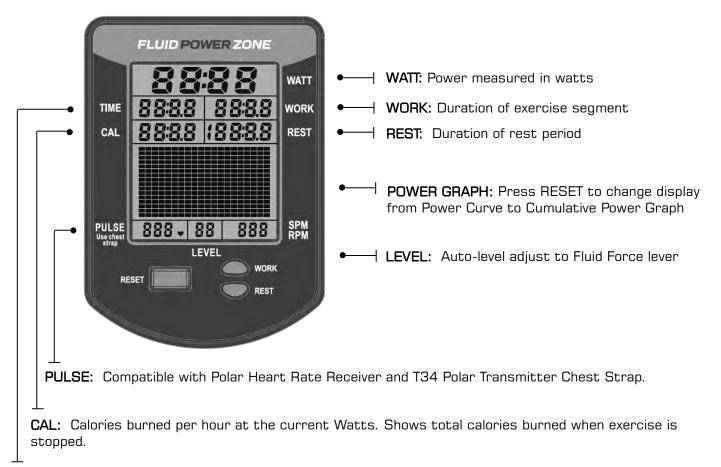

TIME: Auto start elapsed time.

WATT: Measures peak power in watts, calculating the strength and acceleration provided to accurately measure a user's power.

TRAINING DATA: Data gathered from each workout is displayed in a power curve and cumulative power graph, enabling real-time comparisons for effective progressive training.

AUTO ADJUST LEVEL: Built in potentiometer automatically adjusts the computer's resistance level according to the position of the Fluid Force Lever on the Tank .

BLUETOOTH CONNECTIVITY: Each Rower is fitted with the most advanced console technology, enabling Bluetooth connectivity with any compatible smart device. Designed to integrate with rowing and fitness apps, the console will assist with effective training progression, capturing and comparing data for the competitive individual. (Including FDF Power Zone APP available via FDF Website)

NOTE: T34 Polar Heart Rate Transmitter Chest Strap is sold separately.




Heart rate monitoring systems may be inaccurate, Over exercising may result in serious injury or death. If you feel faint stop exercising immediately and seek professional medical advice.

Calibration Procedure


STEP 1

Press and hold $\ ^{\lceil} RESET_$ and $\ ^{\lceil} REST_$ for 5 seconds. Display will show LEVEL" 1 "



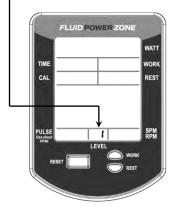


STEP 2

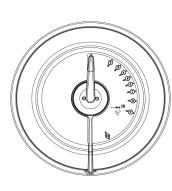




Turn handle to Level 1. Press Reset. Display will now show Level 2. Level 1 Calibration is complete.

STEP 3

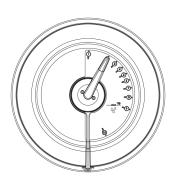

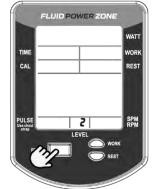

Turn handle to Level 2. Press Reset. Display will now show Level 3. Level 2 Calibration is complete.

STEP 4

Repeat for 3,4,5,6,7,8,9,10. Level 10 Press Reset.

Calibration is complete.

All preventive maintenance activities must be performed on a regular basis. Performing routine preventive maintenance actions can aid in providing safe, trouble-free operation of all First degree fitness equipment.

First degree fitness is not responsible for performing regular inspection and maintenance actions for your machines. Instruct all personnel in equipment inspection and maintenance actions and also in accident reporting and recording.

First degree fitness representatives are available to answer any questions that you may have.

ltem	Time Frame	Instructions	Notes
Bails Lightly spray the ins		Wipe seat rails with a clean, dry cloth. Lightly spray the inside of rails with silicone spray.	
Frame.	Weekly.	Wipe down with lint free cloth.	
Tank and Water Treatment.	12 months to 2 years.	Follow instructions as specified in the "Water Treatment" section of this manual.	
Check every hundred hours for correct tension and for signs of wear.		The Bungee Cord should last for many years. If a bungee cord change is required, please follow the instructions provided in the "Changing the Bungee Cord" section of this manual.	
Rowing Belt. hundred hours for correct tension and for signs of wear.		The Rowing Belt should provide many years of trouble free use. If a rowing belt change is required, please contact your local service representative or go online at <u>www.firstdegreefitness.com</u> for further details.	



>>> Troubleshooting

Fault	Probable Cause	Solution
Water changes color or becomes cloudy.	Rower is in direct sunlight or has not had water treatment.	Change rower location to reduce direct exposure to sunlight. Add water treatment or change tank water as directed in the water treatment section of this manual. Consider using distilled water to refill tank.
Rowing stroke return is too light.	Bungee not under enough tension. Rowing Belt missing one wrap around rower belt pulley. Bungee has slipped off the Bungee Pulley Wheel.	Cut Bungee Tie Rack and tighten slightly on Bungee Hook.
Computer screen illuminates, but does not register when rowing.	Loose or failed connection/Sensor gap too wide (see erratic computer display).	Check that the computer lead is connected properly. If connected properly check sensor gap. Contact your local service center if this fails to ad- dress the problem.
Rowing Belt can't extend to the end of rowing stroke or no resistance.	Rowing Belt needs to be unwrapped 1 turn or, requires an extra wrap on the Rower Belt Pulley	Condition 1: Short pull. Solution: Unwrap 1 turn. Shock Cord Joiner Condition 2: No return. Solution: Wrap one extra turn.

.




>>> Troubleshooting


Fault	Probable Cause	Solution
The Rower computer does not illuminate after battery installation.	Batteries installed incorrectly or need replacing.	Reinstall batteries in correct position and try again. If the LCD screen fails to illuminate, try rotating the batteries slightly in the computer. If this fails, contact your local service center.
The Rower computer display is erratic while displaying SPM and 500meter times.	Gap between sensor and magnetic ring is too wide.	Remove large service cover and check gap between sensor and magnetic ring (should be no more than 2.5mm).
The Bluetooth Au- to-Adjust Monitor LEVEL is not syn- chronized with the tank LEVEL.	Bluetooth Auto-Adjust Monitor LEVEL needs to be recalibrated.	Please refer to "Calibration Procedure" page 18 of this manual.

.


1. Remove large metal inspection plate.

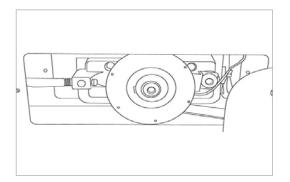


3. Loosen both the rear and front tank bolts slightly as shown left. Remove front Rubber Belt Cover. Using a long tool, push out the rear end cap as pictured below left. This will give you access to the tank tensioning bolt (shown lower right).

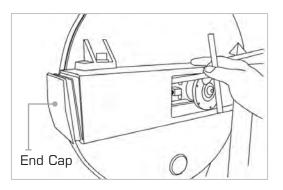

4. Using a 6mm Allen Key, tighten the Belt using the Tank Tensioning Bolt until the belt no longer slips during hard rowing.

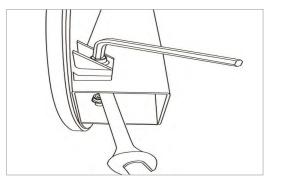


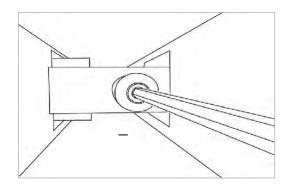


Note: Do not over tighten tank bolts.

Tip: Twist the Belt by hand to gauge tightness. Correct tension should be obtained when no longer able to twist more than 60 degrees (Expect 2-5 years bungee life in commercial use. Damage during initial rower assembly is not covered under warranty)


1. Unhook Bungee Cord Hook. Remove computer mount with 6mm Allen key.

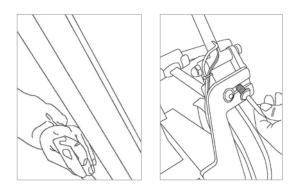


3. Remove the Belt Pulley and the Spacer. Unhook the Bungee Cord End from the Pulley and remove by pulling out from the bottom.

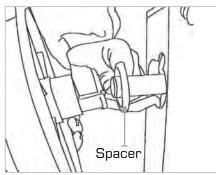


5. Attach the Spacer to the end of the rower pulley and use the "ear" to help thread the strap into the machine. Note that the Spacer may require being tilted just slightly to allow it to pass through.

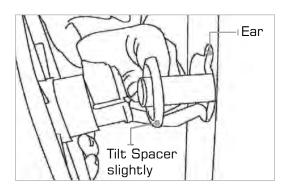


2. Carefully peel back and remove the Belt Pulley Sticker. Then remove C-Clip and Black Spacer as shown.

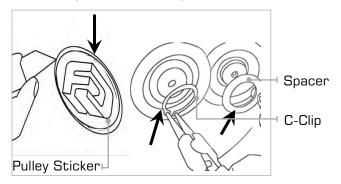

4. Feed the new Bungee Cord from below and reattach end strap to the Belt Pulley.

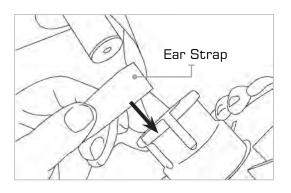

 Reattach the Bungee Hook to the end of the Seat Rail, install outer Spacer, C-Clip and Sticker. Test for proper installation. If the C-Clip cannot be reinstalled, then remove Pulley and try again as the Strap may be jammed.

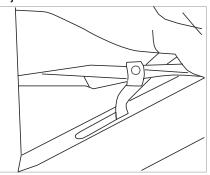

Note: A light tap may be required if the black inner Spacer will not pass inside the frame. A tight C-Clip mounting indicates the process should be repeated as the belt is jammed up.

FULL COMMERCIAL USE

This product is designed and constructed for use in any Health Club / Fitness Studio application. FIRST DEGREE FITNESS Limited warrants that the **POWER ROW (model PZ-ROW)**, purchased from an authorized agent and in its undamaged original packaging, is free from defects in materials and workmanship. FIRST DEGREE FITNESS Limited or its agent will, at their discretion, repair or replace parts that become defective within the warranty period, subject to the specific inclusions and exclusions below.

Metal Frame - 10 Year Limited Warranty

FIRST DEGREE FITNESS will repair or replace the Metal Main Frame of the Rower should it fail due to any defect in materials or workmanship within 10 years of the original purchase. Warranty does not apply to frame coating.

Polycarbonate Tank & Seals - 5 Year Limited Warranty

FIRST DEGREE FITNESS will repair or replace the polycarbonate tank or seals should they fail due to any defect in materials or workmanship within 5 years of the original purchase.

Mechanical Components (of a non-wearing nature) - 2 Year Limited Warranty

FIRST DEGREE FITNESS will repair or replace any mechanical component should it fail due to any defect in materials or workmanship within 2 years of the original purchase.

All Other Components (of a wearing nature) - 2 Year Limited Warranty

FIRST DEGREE FITNESS will repair or replace any component should it fail due to any defect in materials or workmanship within 2 years of the original purchase.

Specific Inclusions

Bungee recoil cord, belt and pulley Hand grips & foot straps Polyester rowing belt Seat All pulleys, rollers & bearings All rubber components Computer & speed sensor (excluding replaceable batteries) All drive belts Aluminum seat rails Sliding Footplate

General Exclusions

Damage to the finish of any part of the machine Damage due to neglect, abuse, incorrect assembly or use of the machine Any charges for freight or customs clearance associated with the return or dispatch of parts Any damage to or loss of goods during transport of any kind Any labour cost associated with a warranty claim

General Conditions

- The serial number of the machine must be correctly registered with First Degree Fitness Limited or one of its appointed distributors
- FIRST DEGREE FITNESS Limited reserve the right to examine any part where replacement is claimed under warranty
- Warranty period applies only to the original purchaser from the date of purchase and is not transferable
- The product must be returned to your place of purchase in original packaging with transportation, insurance and associated charges paid for by you and risk of loss or damage assumed by you
- FIRST DEGREE FITNESS makes no other warranties except as stated here and expressly disclaims all warranties not stated in this warranty. Neither FIRST DEGREE FITNESS nor its associates shall be responsible for incidental or consequential damages
- Manufacturer's warranty automatically commences upon sale of the product to end user or upon the expiration of one (1) year from month of manufacture, whichever occurs first





FITNESS PRODUCTS INSPIRED BY REAL LIFE

WWW.FIRSTDEGREEFITNESS.COM

NOUS CONTACTER

Pour le soutien à la clientèle, veuillez visiter **firstdegreefitness.com/support**

TAÏWAN T: +886 3 478 3306 764 Chung Shan South Rd Yangmei Taoyuan Taiwan R.O.C.

