



MALAMOO
BY OZTENT

XH 2-P TENT

MASHTEXH2PA



OWNER'S MANUAL



HELPFUL HINT

We recommend that you set up this product before you leave for your trip. Check that all parts are present and that you familiarise yourself with the assembly and disassembly of the product.

Congratulations and thank you for choosing your new Malamoo by Oztent product.

We are sure that you will find your new Malamoo product a pleasure to use and enjoy.

Before set-up or use, we recommend that you read through this entire manual. It provides full user instructions.

To avoid any problems that may occur when you use a new product for the first time, it is important that the Malamoo product is set up correctly. Please ensure that you read all instructions contained in this manual carefully. We want you to have a safe and enjoyable experience.

After unpacking your new Malamoo product, please check that it is not damaged and that all parts have been supplied. If in doubt, contact your local Malamoo Customer Care Centre or dealer.

**Don't like reading instructions?
Scan the QR code below watch
the how to video**



Contents

Package Contents	4
Warning	5
Important Information.....	5
Safety and Care Instructions	6
Ventilation.....	6
Campsite Choice.....	6
Pegs and Ropes.....	6
Cleaning.....	6
Storage.....	6
Animals and Insects.....	6
Setting Up The Malamoo XH-2P	7
Parts Identification	9
Warranty	10

Package Contents

Item	General Part Name	Qty
1	Tent Body	1
2	Tent Fly	1
3	Fibreglass Poles - Green	2
4	Fibreglass Poles - Black	1
5	Carry Bag	1
6	Pole Bag	1
7	Peg Bag	1
8	Guy Rope	7
9	Tent Pegs	15

Warning

Never use any fuel-burning products (stoves, lanterns, heaters, etc.) inside or within proximity of this tent. Use of fuel-burning inside or within proximity of this tent can result in the accumulation of dangerous concentrations of carbon monoxide - a colourless, odourless gas. Breathing carbon monoxide will cause serious injury or death. Avoid spraying your tent with deodorant or other aerosols as it may destroy the waterproofing.

Keep all flame and heat sources away from this tent. This tent is made with flame resistant fabric but it is not fireproof. The tent fabric will burn if left in continuous contact with an open flame or other heat source. Failure to keep all flame and heat sources away from this tent can result in a fire that can burn.

Before using this product, read and fully understand: 1) attached warnings; 2) the instruction manual and all accompanying documentation. Failure to follow these directions can cause an unsafe situation leading to injury.

Important Information

Environmental Tips

Packaging disposal

- Most of the packaging materials are recyclable. Please dispose of packaging materials through your local recycling depot or by placing them in the appropriate recycling bins.
- If you wish to discard this product, please contact your local authorities and ask them for the correct method of disposal.

Cautions

- This product is not intended for use by young children or infirmed persons without supervision.
- Young children should be supervised so that they do not play with the product.
- Contact an authorized service technician for repair or maintenance of this product.
- Installation work must be performed in accordance with any local, state and national Standards.

Safety and Care Considerations

Ventilation

1. Maintain adequate ventilation inside the Tent at all times.

Campsite Choice

1. When choosing a campsite, carefully consider the possibility of falling rocks or tree limbs, lightning, flash floods, avalanches, strong winds, and other potential hazards, to reduce the risk of loss or injury.
2. Keep clear of overhead power lines.
3. Select a site that is level, well drained, and is protected from the wind and other elements
4. Clear the campsite of sharp stones, sticks, and other debris, both for comfort and to protect the floor of the Tent. If possible, avoid setting up the Tent on ground that is already wet.

Pegs and Ropes

1. Peg down the Tent properly at all times to reduce the risk of loss or injury to Tent users.
2. All Tents require pegging to prevent them from being blown away in strong winds. Always anchor the Tent. Tent pegs and guy ropes are supplied to safely setup the Tent in most situations. It may be necessary to purchase additional and/or specialized pegs and ropes for use in extreme or varied soil conditions.
3. Tightly tensioning the Tent with the attached guy ropes greatly increases the Tent's strength and stability.

Cleaning

1. If the Tent should require cleaning, set it up and use a garden hose to wash off dirt. Do not use detergent, soap, bleach, or have the Tent dry cleaned, as this may remove the waterproofing and/or damage the fabric.
2. Allow the Tent to air-dry completely before packing or storing.

Storage

1. Packing and storing the Tent while it's wet or damp leads to premature breakdown of the fabric and coatings. Storing a wet Tent can cause mildew to form on the fabric. Mildew will cause the Tent to stain, smell, and may lead to the premature breakdown of the materials.
2. Dry the Tent thoroughly after every trip.


Animals and Insects

1. To prevent damage from animals chewing holes in the Tent fabric, never store food or cooking equipment in the Tent. When packing away, ensure that there are no insects inside the Tent as they may try to eat their way out causing holes in the material.

Setting Up The Malamoo XH-2P


Step 1:

1. Verify package contents listed on Page 4. Confirm all parts are present.
2. Select a smooth, level site and spread out the tent body.
3. Extend the two green poles and place them crossing on the tent body as illustrated.

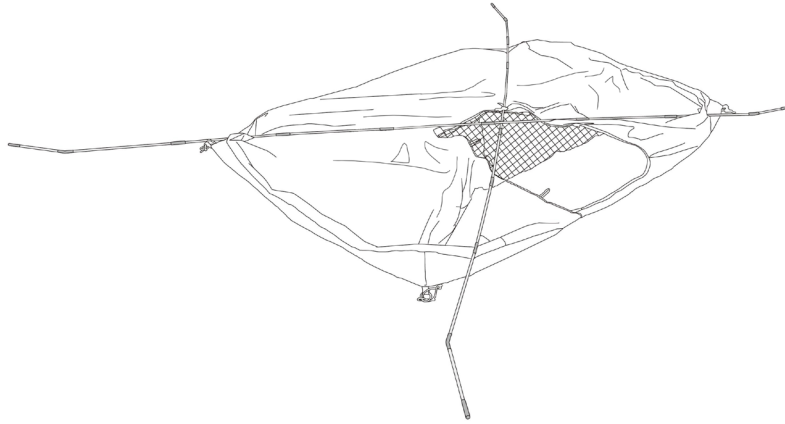

Step 2:

 1. Lift the pole and insert the ring-pin into the bottom of the green fibreglass leg poles. (A)
2. Attach G-hooks (on green webbing) on the tent to the green poles. (B)
3. Attach G-hook (on black webbing) to the uppermost pole at the top of the tent.
4. Peg out the tent at the four corners through the ring-pins. Make sure the tent base is fully spread out.

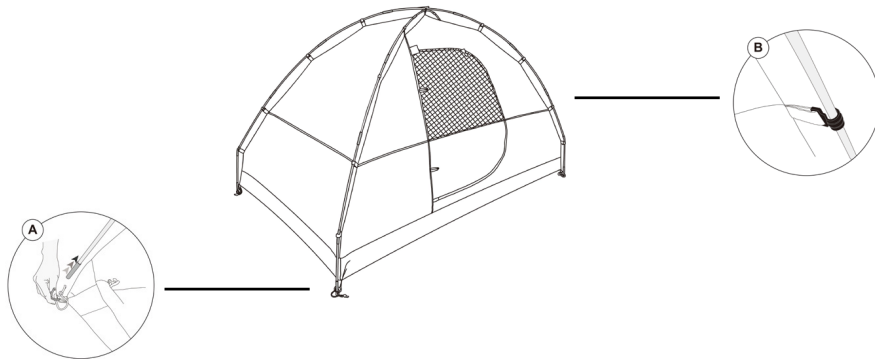


Setting Up The Malamoo XH-2P

Step 3:

1. Spread out the tent fly and drape it over the tent body.
2. Attach S hooks on rear corners of the tent fly to the fabric loops located about 20cm from the base of the rear of the tent(D). Attach remaining S hooks to the ring-pins on the forward part of the tent body (E).
3. Extend the black pole and slide it through the sleeve located on the underside of the front of the tent fly.(F)
4. Insert the ends of black awning pole into the webbing pocket on the bottom of the tent fly.(G)
5. Secure all the hook-and-loop closures on the fly to the tent poles.(H)

Step 4:

 1. Ensure that the tent fly is sitting squarely over the body of the tent. If there are issues, review Step 3.
2. Peg down the tent fly.
3. Peg out guy ropes away from the tent with ropes at roughly a 45° angle to the ground. (I)

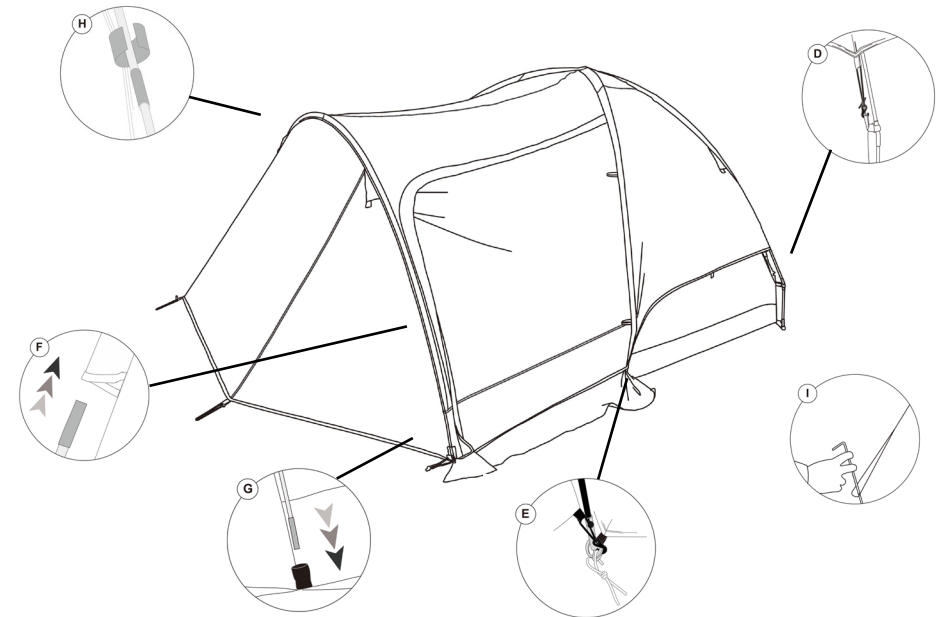

Parts Identification

Item	General Part Name	Qty	Part No.
1	Tent Body	1	
2	Tent Fly	1	MASPXH2FLY
3	Fibreglass Poles - Green	2	MASPXH2PSGR
4	Fibreglass Poles - Black	1	MASPXH2PSBK
5	Carry Bag	1	MASPXH2CBAG
6	Pole Bag	1	OZTPB
7	Peg Bag	1	OZPB
8	Guy Rope	7	GUYLONGGR
9	Tent Pegs	15	OZPEG

Warranty

FOR SALES IN AUSTRALIA USA AND INTERNATIONAL MARKETS. TENTS, FURNITURE AND ACCESSORIES: [OZTENT, MALAMOO, AND FOXWING]

This document sets out the terms and conditions of product warranties for Oztent, Malamoo and Foxwing branded products. It is an important document. Please keep it with your proof of purchase documents in a safe place for future reference should you require service for your Oztent, Malamoo, or Foxwing branded product.

General Terms and Conditions

- In this warranty
 - 'Oztent' means Oztent Australia Pty Limited ABN 19 050 035 964 in respect of products purchased in Australia, USA and International markets;
 - 'Product' means any Oztent product purchased by you accompanied by this document;
 - 'Warranty Period' means
 - where you use the Product for personal, domestic or household purposes in Australia the period of '12' months and in USA and International markets the period of '12' months;
 - for Tents and Tent Accessories used for personal, domestic or household purposes (e.g. Peaked Side Panel) the period of '24' months;
 - for Furniture (e.g. Chairs) and Furniture Accessories used for personal, domestic or household purposes the period of '60' months;
 - following the date of original purchase of the Product; 'you' means the purchaser of the Product not having purchased the appliance for re-sale, and 'your' has a corresponding meaning.
- This warranty only applies to Products purchased and used in Australia, USA or International markets and is in addition to (and does not exclude, restrict, or modify in any way) any non-excludable statutory warranties in Australia, USA or International markets.
- Oztent warrants that, when dispatched from an Oztent warehouse, the Product is free from defects in materials and workmanship for the Warranty Period.
- During the Warranty Period Oztent or its Authorised Service Centre will, at no extra charge if your product is readily accessible without special equipment, and subject to these terms and conditions, repair or replace any parts which it considers to be defective. You agree that any replaced Product or parts become the property of Oztent. This warranty does not apply to guy ropes, tent pegs, or similar perishable parts.
- Parts and Products not supplied by Oztent are not covered by this warranty.
- Where you are within an Oztent service area, this warranty covers the cost of transport of the Product only to and from Authorised Service Centres of Oztent ("ASC") and travelling costs for representatives of the ASC to and from your home or business. If you are outside an Oztent service area, or you are claiming for an accessory you will bear these costs. For information about whether you are within an Oztent service area, or information on your nearest ASC please phone 1800 OZTENT or 1800 698368 in Australia, +8555 OZTENT or +855 569 8368 in the USA or +61 2 8706 5100 in International markets.
- Proof of purchase is required before you can make a claim under this warranty.
- You may not make a claim under this warranty unless the defect claimed is due to faulty or defective parts or workmanship. Oztent is not liable in the following situations (which are not exhaustive):
 - The Product is damaged by:
 - accident
 - misuse or abuse, including failure to properly maintain or service
 - normal wear and tear
 - storm damage or improper storage
 - incomplete or improper installation
 - incorrect, improper or inappropriate operation
 - insect or vermin infestation.

- The Product is modified without authority from Oztent in writing.
- The Products model number, serial number or warranty seal has been removed or defaced.
- The Product was serviced or repaired by anyone other than Oztent or its Authorised Service Centres.

- This warranty, the contract to which it relates and the relationship between you and Oztent are governed by the law applicable in the Australian State where the Product was purchased or the law applicable in the USA or International markets if the Product was purchased in the USA or International markets. Where the Product was purchased in the USA or International markets for business purposes the Consumer Guarantee Act does not apply.

Limitation of Liability

- To the extent permitted by law:
 - Oztent excludes all warranties other than as contained in this document;
 - Oztent shall not be liable for any loss or damage whether direct or indirect or consequential arising from your purchase, use or non-use of the Product.
- Provisions of the Trade Practices Act and State consumer legislation in Australia, and the Consumer Guarantees Act, the Sale of Goods Act and the Fair Trading Act in New Zealand or any Act or State consumer legislation in the USA or International markets, imply warranties or conditions, or impose obligations, upon Oztent which cannot be excluded, restricted or modified. To the extent permitted by law, the liability of Oztent (if any) arising out of or in relation to the Product or any services supplied by Oztent shall be limited (where it is fair and reasonable to do so):
 - in the case of Products, at its option, to the replacement or repair of the Product or the supply of equivalent products or the payment of the cost of replacing the Product or having the Product repaired or of acquiring equivalent Product. Upon being replaced, parts and Products become the property of Oztent; or
 - in the case of services, at its option, to the supply of the services again or the payment of the cost of having the services re-supplied; and in the case of Products or services supplied in the USA or International markets, loss or damage whether direct or indirect or consequential that is reasonably foreseeable.

Privacy

You acknowledge that if you make a warranty claim it will be necessary for Oztent and its Authorised Service Centres to exchange information in relation to you to enable Oztent to meet its obligations under this warranty.

Important Notice

 
Before calling for service please check carefully the owner's manual, use and care instructions and the warranty terms and conditions.

Product Registration

To assist in validating warranty, we kindly ask that you register your product purchase online with Oztent in your country of origin or alternatively complete the warranty card provided with your product (if applicable) and return it to Oztent care of the nominated address.

Please visit our website for more warranty information & to register your Oztent product
oztent.com/product-rego



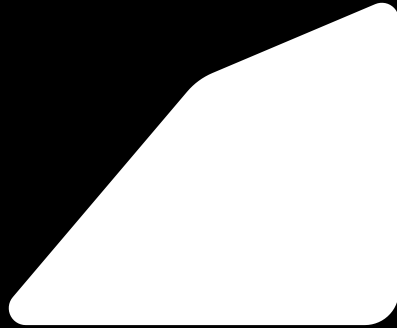

OZTENT[®]

Oztent Australia Pty Ltd

PO Box Q1700 Sydney NSW 2000

Australia PH: 02 8706 5100

USA PH: 855 569 8368

International PH: +61 2 8706 5100

www.oztent.com

