



**OZTENT<sup>®</sup>**

***RV-3/5 PLUS***

**ORV3PTELUA / ORV5PTELUA**



**OWNER'S MANUAL**

# **Congratulations and thank you for choosing your new Oztent product.**

We are sure that you will find your new Oztent product a pleasure to use and enjoy.

Before set-up or use, we recommend that you read through this entire manual. It provides full user instructions.

To avoid any problems that may occur when you use a new product for the first time, it is important that the Oztent product is set up correctly. Please ensure that you read all instructions contained in this manual carefully. We want you to have a safe and enjoyable experience.

After unpacking your new Oztent product, please check that it is not damaged and that all parts have been supplied. If in doubt, contact your local Oztent Customer Care Centre or dealer.

**Don't like reading instructions?  
Scan the QR code below watch  
the how to video**



**RV-3 PLUS**



**RV-5 PLUS**

---

## Contents

---

<b>Package Contents</b> .....	<b>2</b>
<b>Warning</b> .....	<b>3</b>
<b>Setting Up Your Oztent</b> .....	<b>4</b>
Campsite Choice.....	4
Lay Out the Tent.....	4
Setting Up .....	5
Setting Up Your Awning.....	6
Securing the Fly.....	6
<b>Packing Up Your Oztent</b> .....	<b>7</b>
<b>Safety and Care Considerations</b> .....	<b>8</b>
Ventilation .....	8
Campsite Choice.....	8
Pegs/Stakes and Ropes .....	8
Zippers.....	8
Cleaning.....	8
Condensation .....	8
<b>Warranty</b> .....	<b>9</b>

---

## Package Contents

Item	General Part Name	Qty
1	Complete RV Plus Tent with Internal Frame	1
2	Fly	1
3	Aluminium Fly Poles	2
4	1.9m/74.8" Telescopic Tent Poles	2
5	2.2m/86.6" Telescopic Tent Poles	2
6	2.6m/102.3" Telescopic Spreader Poles	2
7	Tent Pegs/Stakes	27
8	Reflective Guy Ropes	17
9	Owner's Manual and Repair Kit	1
10	Carry Bag	1

## Warning

**Never use any fuel-burning products (stoves, lanterns, heaters, etc.) inside or within proximity of this tent.** Use of fuel-burning inside or within proximity of this tent can result in the accumulation of dangerous concentrations of carbon monoxide - a colourless, odourless gas. Breathing carbon monoxide will cause serious injury or death. Avoid spraying your tent with deodorant as it will destroy the waterproofing.

**Keep all flame and heat sources away from this tent.** This tent is made with flame resistant fabric but it is not fireproof. The tent fabric will burn if left in continuous contact with an open flame or other heat source. Failure to keep all flame and heat sources away from this tent can result in a fire that can burn.

**Before using this product, read and fully understand:** (1) attached warnings; (2) the instruction manual and all accompanying documentation. Failure to follow these directions can cause an unsafe situation leading to injury.

## HELPFUL HINT

We recommend that you set up this product before you leave for your trip. Check that all parts are present and that you familiarise yourself with the assembly and disassembly of the product.

## Setting Up Your Oztent

### Step 1: Campsite Choice


When choosing a campsite, carefully consider the possibility of falling rocks or tree limbs, lightning, flash floods, avalanches, strong winds, and other potential hazards to reduce the risk of loss or injury to the tent or occupants.

Select a site that's level, will drain well if it rains, and is protected from wind and other elements. Clear the area of sharp stones, sticks, and other debris, both for comfort and to protect your floor. If possible, avoid setting the tent on ground that is already wet. If you can't, minimize the resulting humidity and potential of condensation by keeping your tent well ventilated.

We also recommend that you consider some form of ground sheet/protection to minimize wear, tear and damage to the floor of your tent. The Oztent RV-5 Mesh Floor Saver is an option you may wish to consider. If you are using a ground sheet/floor saver, ensure that you peg it down before setting up your tent.



### Step 2: Lay Out the Tent

- 2.1 Unpack your tent. Place the poles, pegs and fly somewhere clear of your tent space.
- 2.2 Release the webbing strap around your tent.
- 2.3 Unroll the tent and then swing out both arms, one at a time.

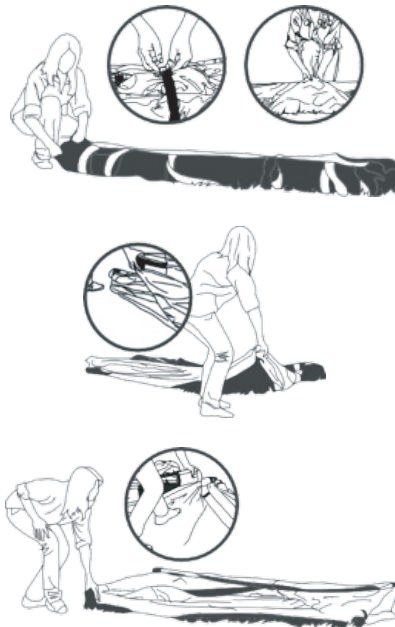

**Step 3: Setting Up**

- 3.1 If you are using the fly (recommended), attach the fly to the zipper located on the upper forward edge of the tent. This is easiest to do when the tent is still laying on the ground.
- 3.2 Using the strap attached to the middle of the frame, lift the frame up and over your head.
- 3.3 While supporting the tent, gently slide the bracing arm on either side of the tent into its 'lock' position.
- 3.4 Attach the Velcro tabs located below the bracing arm. This ensures that the tent is not accidentally collapsed.
- 3.5 Ensure the tent is in the best position and that it sits correctly. Pull out the rear of the tent to expose all peg points. Secure all the bottom peg points, open out the attached guy ropes and peg them down.

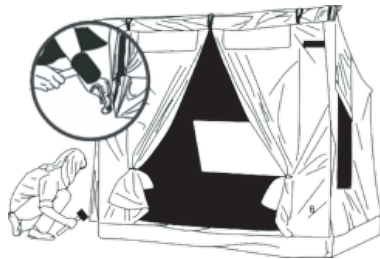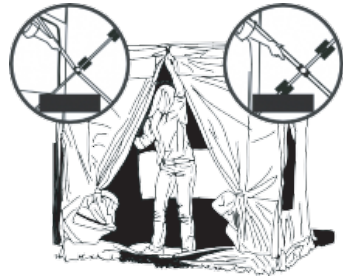

**Step 4: Setting Up Your Awning**

- 4.1 Once the tent has been pegged to the ground, unroll the front awning.
- 4.2 Twist to unlock awning poles and twist again to lock at desired height. Attach the horizontal/spreader pole between the two uprights. Pop up the awning and secure with guy ropes as shown. If you are wishing to install the 2.2 m Peaking Poles, these are inserted in the eyelet midway along the awning and are assembled in the same manner as the front uprights. Adjust all poles and guy ropes to ensure the tent awning is fully secured.

**Step 5: Securing the Fly**

- 5.1 Ensure the fly has been attached to the zipper located at the top of the tent (this is easiest to do before the tent is erected). Connect the fly poles through the eyelet on each side of the fly and secure the fly with guy ropes as shown.





## **Packing Up Your Oztent**

1. Remove all awning poles and attached guy ropes;
2. Roll up the tent awning and the rear window flap;
3. Remove all pegs/stakes;
4. Fold the rear of the tent into and over the rear frame;
5. Ensure that the Velcro loops located below the sliding arm have been released;
6. Walk inside the tent, with one hand supporting the middle of the top frame, use your other hand to release the sliding arms, one at a time.
7. To collapse the tent, allow the top frame to pass over your head all the way to the ground;
8. Fold arm "A" towards the tent;
9. Fold arm "B" towards the tent;
10. Roll the tent up neatly and secure with strap;
11. Place the tent, poles pegs and ropes in the carry bag.

Note that it is not necessary to remove the fly if you do not wish to;

Ensure that the tent is clean and dry before storage.

## Safety and Care Considerations

### Ventilation

Maintain adequate ventilation inside your tent at all times.

### Campsite Choice

When choosing a campsite, carefully consider the possibility of falling rocks or tree limbs, lightning, flash floods, avalanches, strong winds, and other potential hazards to reduce the risk of loss or injury to the tent or occupants.

Select a site that's level, will drain well if it rains, and is protected from wind and other elements. Clear the area of sharp stones, sticks, and other debris, both for comfort and to protect your floor. If possible, avoid setting the tent on ground that is already wet. If you can't minimize the resulting humidity and potential of condensation by keeping your tent well ventilated.

### Pegs/Stakes and Ropes

Peg down your tent properly at all times to reduce the risk of loss or injury to the tent or occupants.

All tents require pegging/staking to prevent them from flying away in a gust of wind. Always anchor your Oztent. Enough pegs/stakes and ropes are supplied to safely set up your tent in most situations. It may be necessary to purchase additional and/or specialised pegs/stakes and ropes for use in extreme or varied soil conditions. For optional sand pegs/stakes Oztent recommends use of an Oztent Edition Bluescrew.

Tightly tensioning your tent with our attached ropes greatly increases the tent's strength and stability. This will also reduce fabric droop and wrinkles, and prevent rainwater from pooling. To pull out a peg never use the edge of the tent as a handle. If hard to remove, use of another peg as a hook is recommended.

### Zippers

Be careful with your zippers. Go slow when zipping. Make sure to align the tracks before sliding the zipper - and don't exert excessive force. If fabric gets caught in the slider, stop and slowly reverse the slider to remove. A silicone based lubricant may be used to enhance zipping.

When dirt gets in the zipper teeth, they can cause abrasion and damage to the zipper sliders. You can clean the zipper teeth by rinsing them out with water. The pressure from a regular garden hose will push out small sand particles.

### Cleaning

If your tent should require cleaning, set it up and use a sponge with warm water. If further cleaning is needed, a garden hose should be able to wash off any remaining dirt. Do not use detergent, soap, bleach, as these may remove the waterproofing and/or damage the fabric. Allow the tent to air-dry completely before packing or storing.

### Condensation

Condensation is an unavoidable fact of physics. When warm, moist air comes in contact with the cool tent fabric, it forms condensation. In most conditions condensation can be controlled by allowing air inside the tent to vent outside. During periods of high humidity, such as rain, it can be too difficult to remove or reduce condensation. In these conditions, a high degree of ventilation can actually increase the condensation by drawing in more humid air.

To reduce condensation, use Oztent Fly. Your Oztent Fly is designed to collect humid air that passes through your tent. It is normal to find the underside of the fly covered in water droplets in humid conditions.

Condensation can also collect on parts of the floor inside the tent. This is also normal and does not indicate leaking fabric.

# Warranty

**FOR SALES IN AUSTRALIA USA AND INTERNATIONAL MARKETS. TENTS, FURNITURE AND ACCESSORIES: [OZTENT, MALAMOO, AND FOXWING]**

This document sets out the terms and conditions of product warranties for Oztent, Malamoo, JetTent and Foxwing branded products. It is an important document. Please keep it with your proof of purchase documents in a safe place for future reference should you require service for your Oztent, Malamoo, JetTent or Foxwing branded product.

**General Terms and Conditions**

1. In this warranty
  - (a) 'Oztent' means Oztent Australia Pty Limited ABN 964 035 050 19 in respect of products purchased in Australia, USA and International markets;
  - (b) 'Product' means any Oztent product purchased by you accompanied by this document;
  - (c) 'Warranty Period' means
    - (i) where you use the Product for personal, domestic or household purposes in Australia the period of '12' months and in USA and International markets the period of '12' months;
    - (ii) for Tents and Tent Accessories used for personal, domestic or household purposes (e.g. Peaked Side Panel) the period of '24' months;
    - (iii) for Furniture (e.g. Chairs) and Furniture Accessories used for personal, domestic or household purposes the period of '60' months;
 following the date of original purchase of the Product;
  - (d) 'you' means the purchaser of the Product not having purchased the appliance for re-sale, and 'your' has a corresponding meaning.
2. This warranty only applies to Products purchased and used in Australia, USA or International markets and is in addition to (and does not exclude, restrict, or modify in any way) any non-excludable statutory warranties in Australia, USA or International markets.
3. Oztent warrants that, when dispatched from an Oztent warehouse, the Product is free from defects in materials and workmanship for the Warranty Period.
4. During the Warranty Period Oztent or its Authorised Service Centre will, at no extra charge if your product is readily accessible without special equipment, and subject to these terms and conditions, repair or replace any parts which it considers to be defective. You agree that any replaced Product or parts become the property of Oztent. This warranty does not apply to guy ropes, tent pegs, or similar perishable parts.
5. Parts and Products not supplied by Oztent are not covered by this warranty.
6. Where you are within an Oztent service area, this warranty covers the cost of transport of the Product only to and from Authorised Service Centres of Oztent ("ASC") and travelling costs for representatives of the ASC to and from your home or business. If you are outside an Oztent service area, or you are claiming for an accessory you will bear these costs. For information about whether you are within an Oztent service area, or information on your nearest ASC please phone 1800 OZTENT or 698368 1800 in Australia, +8555 OZTENT or +569 855 8368 in the USA or +5100 8706 2 61 in International markets.
7. Proof of purchase is required before you can make a claim under this warranty.
8. You may not make a claim under this warranty unless the defect claimed is due to faulty or defective parts or workmanship. Oztent is not liable in the following situations (which are not exhaustive):
  - (a) The Product is damaged by:
    - (i) accident
    - (ii) misuse or abuse, including failure to properly maintain or service
    - (iii) normal wear and tear
    - (iv) storm damage or improper storage
    - (v) incomplete or improper installation
    - (vi) incorrect, improper or inappropriate operation
    - (vii) insect or vermin infestation.
  - (b) The Product is modified without authority from Oztent in writing.
  - (c) The Products model number, serial number or warranty seal has been removed or defaced.

- (d) The Product was serviced or repaired by anyone other than Oztent or its Authorised Service Centres.
9. This warranty, the contract to which it relates and the relationship between you and Oztent are governed by the law applicable in the Australian State where the Product was purchased or the law applicable in the USA or International markets if the Product was purchased in the USA or International markets. Where the Product was purchased in the USA or International markets for business purposes the Consumer Guarantee Act does not apply.

**Limitation of Liability**

10. To the extent permitted by law:
  - (a) Oztent excludes all warranties other than as contained in this document;
  - (b) Oztent shall not be liable for any loss or damage whether direct or indirect or consequential arising from your purchase, use or non-use of the Product.
11. Provisions of the Trade Practices Act and State consumer legislation in Australia, and the Consumer Guarantees Act, the Sale of Goods Act and the Fair Trading Act in New Zealand or any Act or State consumer legislation in the USA or International markets, imply warranties or conditions, or impose obligations, upon Oztent which cannot be excluded, restricted or modified. To the extent permitted by law, the liability of Oztent (if any) arising out of or in relation to the Product or any services supplied by Oztent shall be limited (where it is fair and reasonable to do so):
  - (a) in the case of Products, at its option, to the replacement or repair of the Product or the supply of equivalent products or the payment of the cost of replacing the Product or having the Product repaired or of acquiring equivalent Product. Upon being replaced, parts and Products become the property of Oztent; or
  - (b) in the case of services, at its option, to the supply of the services again or the payment of the cost of having the services re-supplied;
 and in the case of Products or services supplied in the USA or International markets, loss or damage whether direct or indirect or consequential that is reasonably foreseeable.

**Privacy**

You acknowledge that if you make a warranty claim it will be necessary for Oztent and its Authorised Service Centres to exchange information in relation to you to enable Oztent to meet its obligations under this warranty.

**Important Notice**

Before calling for service please check carefully the owner's manual, use and care instructions and the warranty terms and conditions.

<p><b>AUSTRALIA</b></p> <p>www.oztent.com.au                  Ph: (02) 5100 8706                  Toll Free: 1800 OZTENT (698368)</p> <p>Product Registration:                  www.oztent.com.au/product-rego</p>
<p><b>USA</b></p> <p>www.oztent.com/us                  Ph: +8555 OZTENT (368 698)</p> <p>Product Registration:                  www.oztent.com/product-rego</p>
<p><b>INTERNATIONAL</b></p> <p>www.oztent.com (Select country code INT)                  Ph: +5100 8706 2 61</p>

**Product Registration**

To assist in validating warranty, we kindly ask that you register your product purchase online with Oztent in your country of origin or alternatively complete the warranty card provided with your product (if applicable) and return it to Oztent care of the nominated address.



***OZTENT***<sup>®</sup>

**Oztent Australia Pty Ltd**

PO Box Q1700 Sydney NSW 2000

Australia Ph: 5100 8706 02

USA Ph: 8368 569 855

International Ph: +5100 8706 2 61

**[www.oztent.com](http://www.oztent.com)**

