



RX-5 TENT
RX-5 LIVING ROOM & ZIP-IN FLOOR

ORX05TELUA AND ORX05ACLRA

A black and white photograph of a coastal landscape. In the foreground, there is a rocky cliffside with sparse vegetation. The middle ground shows a wide beach with waves breaking onto the shore. In the background, several large, isolated rock formations stand in the ocean under a cloudy sky.

OWNER'S MANUAL

HELPFUL HINT

We recommend that you set up this product before you leave for your trip. Check that all parts are present and that you familiarise yourself with the assembly and disassembly of the product.

Oztent Australia Pty Ltd
www.oztent.com

Prepared by: Michael Champ
Authorised by: Trent Fitzgibbins
Issue No. 0001
Issue date: 10/12/2021

Congratulations and thank you for choosing your new Oztent product.

We are sure that you will find your new Oztent product a pleasure to use and enjoy.

Before set-up or use, we recommend that you read through this entire manual. It provides full user instructions.

To avoid any problems that may occur when you use a new product for the first time, it is important that the Oztent product is set up correctly. Please ensure that you read all instructions contained in this manual carefully. We want you to have a safe and enjoyable experience.

After unpacking your new Oztent product, please check that it is not damaged and that all parts have been supplied. If in doubt, contact your local Oztent Customer Care Centre or dealer.

Note that the RX Tent is sold with the Living Room by some retailers. If you have purchased the RX Tent/Living room Combo, ensure that you have two packages - one for the Tent, one for the Living Room. If you have purchased the RX tent only, you can purchase the Living Room at a later date.

**Don't like reading instructions?
Scan the QR code below watch
the how to video**



Contents

Package Contents.....	4
Warning.....	5
Use and Caring.....	5
Important Notes	7
Setting Up the Oztent RX-5	8
Setting Up the Awning	12
Setting Up Your Oztent RX-5 Fly	13
Setting Up the Living Room	14
Parts Identification.....	17
Warranty	18

Package Contents RX-5 Tent

Item	General Part Name	Qty
1	Tent	1
2	Fly	1
3	Reflective Guy Ropes	13
4	Pegs	18
5	1.9m Poles	2
6	2.3m Poles	2
7	2.6m Spreader	2
8	Oversized Zippered Carry Bag	2

Package Contents RX-5 Living Room & Zip-In Floor

Item	General Part Name	Qty
1	Zip In Entry Floor	1
2	Complete Panel System	1
3	Reflective Guy Ropes	2
4	Tent Pegs	4
5	Oversized Zippered Carry Bag	1

Warning

Never use any fuel-burning products (stoves, lanterns, heaters, etc.) inside or within proximity of this tent. Use of fuel-burning products inside or within proximity of the tent can result in the accumulation of dangerous concentrations of carbon monoxide – a colourless, odourless and tasteless gas that is slightly denser than air. Breathing carbon monoxide could cause serious injury or death.

Keep all flame and heat sources away from this tent. This tent is made with flame resistant fabric but it is not fireproof. The tent fabric will burn if left in continuous contact with an open flame or other heat source. Failure to keep all flame and heat sources away from this tent may result in a fire that could cause serious injury or death.

Before using this product, read and fully understand: 1) attached warnings; 2) the instruction manual and all accompanying documentation. Failure to follow these directions can cause an unsafe situation leading to injury.

Use and Caring

Conditioning Canvas

It is important that you season your canvas when it's new and also after long periods of storage so it gives its best performance. Simply pitch your tent and wet it down with a garden hose. This enables the stitching holes to shrink around the thread in the stitch lines and the cotton in the canvas to swell. Let the canvas dry completely before repeating this process another two times.

Due to the nature of canvas, any seam even after seasoning can still cause a drip. If you do notice a seam has not been seasoned properly, simply rub a wax candle on the exterior of the stitch line. This will create a waterproof barrier quickly and easily.

If cared for correctly, your tent will still be around for the next generation of campers to enjoy.

Ventilation

Maintain adequate ventilation inside the tent at all times.

Campsite Choice

When choosing a campsite, carefully consider the possibility of falling rocks or tree limbs, lightning, flash floods, avalanches, strong winds, and other potential hazards, to reduce the risk of loss or injury.

Select a site that's level, well drained, and is protected from the wind and other elements. Clear the campsite of sharp stones, sticks, and other debris, both for

comfort and to protect the floor of the tent. If possible, avoid setting the tent on ground that is already wet. If this is not possible keep the tent well ventilated to minimize humidity and condensation within the tent.

Pegs and Ropes

Peg down the tent properly at all times to reduce the risk of loss or injury to tent users.

All tents require pegging to prevent them from being blown away in strong winds. Always anchor the tent. Tent pegs and ropes are supplied to safely setup the tent in most situations. It may be necessary to purchase additional and/or specialized pegs and ropes for use in extreme or varied soil conditions.

Tightly tensioning the tent with attached ropes greatly increases the tent's strength and stability. This will also reduce fabric sagging and wrinkles and prevent rainwater from pooling.

Using a Floor Saver

A Floor Saver keeps the tent floor clean and dry and it minimises floor wear and tear by protecting it from excessive abrasion. The RV5 MeshFloor Saver suits the RX5.

Condensation

When warm, moist air comes in contact with the cool tent fabric condensation can form. In most situations condensation can be controlled by allowing air inside the tent to vent outside. During periods of high humidity, such as during rain storms, it may be difficult to prevent or reduce condensation. In these situations ventilation could actually increase the condensation by drawing in more humid air.

To reduce condensation use the included Tent Fly. The Tent Fly is designed to reduce the temperature difference between the inside and outside of the tent. It is normal to find the underside of the fly covered in water droplets in humid conditions.

Condensation can also collect on parts of the floor inside the tent. This is also normal and does not indicate leaking fabric.

Zippers

Be careful when using tent zippers. Go slow when zipping. Make sure to align the zipper tracks before sliding the zipper and don't exert excessive force on the zipper. If fabric gets caught in the zipper, stop and slowly reverse the zipper to remove. A silicone based lubricant may be used to improve zipping.

When dirt gets in the zipper teeth, it can cause abrasion and damage to the zipper sliders. You can clean the zipper teeth by rinsing them with water. The pressure from a regular garden hose will push out small sand particles.

Cleaning

If the tent should require cleaning, set it up and use a sponge with warm water to clean. If further cleaning is required, a garden hose can be used to wash off any remaining dirt. Do not use detergent, soap, bleach, or have the tent dry cleaned, as this may remove the waterproofing and/or damage the fabric. Allow the tent to air-dry completely before packing or storing.

Storage

Packing and storing the tent while it's wet or damp leads to premature breakdown of the canvas and coatings. Prolonged exposure to moisture causes the waterproof layer to break down, becoming soft, sticky and no longer waterproof. Storing a wet tent can cause mildew to form on the fabric. Mildew will cause the tent to stain, smell, and may lead to the premature breakdown of the waterproof coating. Dry the tent thoroughly after every trip.

Animals and Insects

To prevent damage from animals chewing holes in the tent fabric, never store food or cooking equipment in the tent.

When packing away ensure that there are no insects inside the tent as they may try to eat their way out, causing holes in the material.


Important Notes

1. If you have an Oztent Floor Saver, place it where you want to set up prior to setting up your tent.
2. Assemble your Tent Fly before Step 6 of "Setting Up the Oztent RX" in the following instructions.
3. Pack your tent away in the reverse order of set up. Roll up your rear window and front awning and leave the front door open. Remove your awning poles and take all pegs out. Lower the tent to the ground and first swing in arm "A" followed by arm "B". Always swing the arms low to the ground.
4. If you have an Oztent RX-5, ensure your back extension is neatly tucked inside the tent prior to pack down.
5. Although the Oztent RX series and accessories are designed for one person operation, a second person will make your set-up significantly easier and faster.
6. The following illustrations are artistic representations of the Oztent RX series and may differ from the production model. However, the overall operation will be the same.

Setting Up the Oztent RX-5


Step 1:

Take the Tent out of the bag. Place the poles, pegs and fly away from the Tent space.

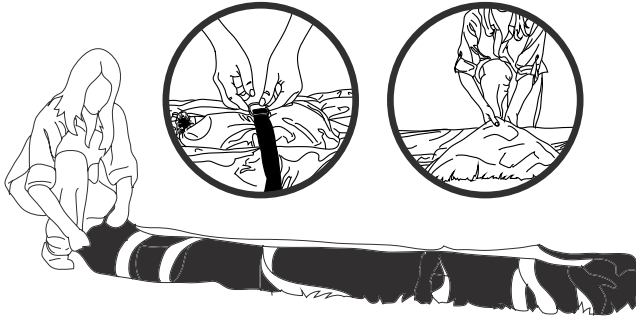

Step 2:

Swing out both arms one at a time.

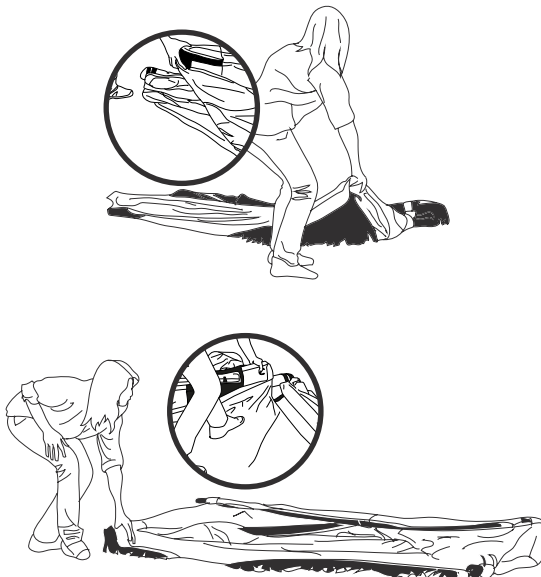


Step 3:

Pull the tent up using the swing tab found near the top frame.




Step 4:

Reach inside the tent and lock the hinges in place, pushing them up.

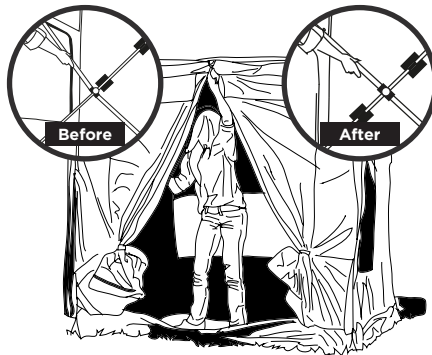


Step 5:

Adjust the tent so it sits properly.

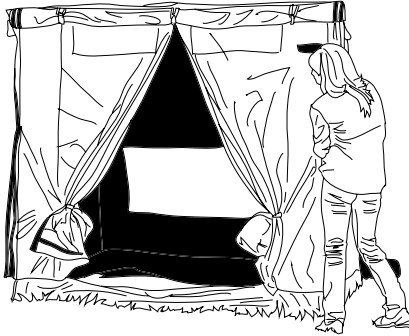



Step 6:

Hammer in all pegs/stakes.

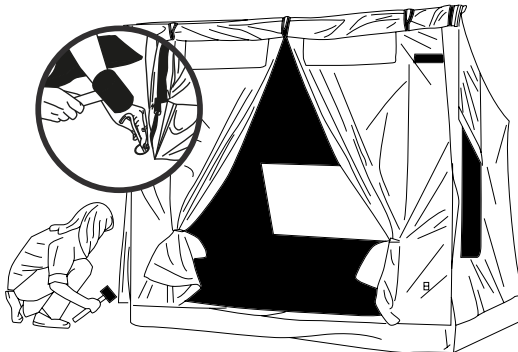

Step 7:


Peg out all guy ropes at approximately a 45 degree angle to secure the tent.

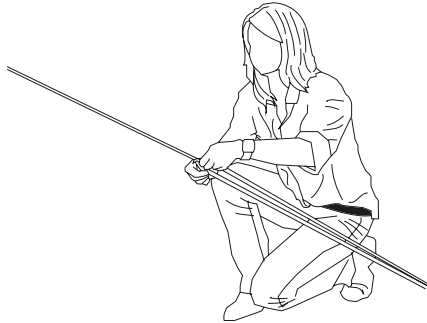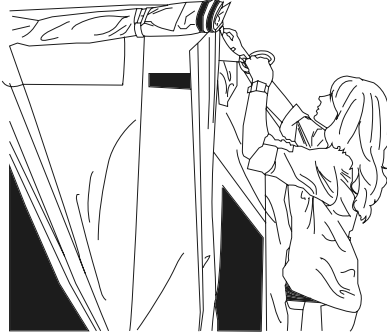

Setting Up the Awning


Step 1:

Extend the awning. Twist to unlock awning poles and twist again to lock at desired height. Pop up the awning and secure with guy ropes as shown.

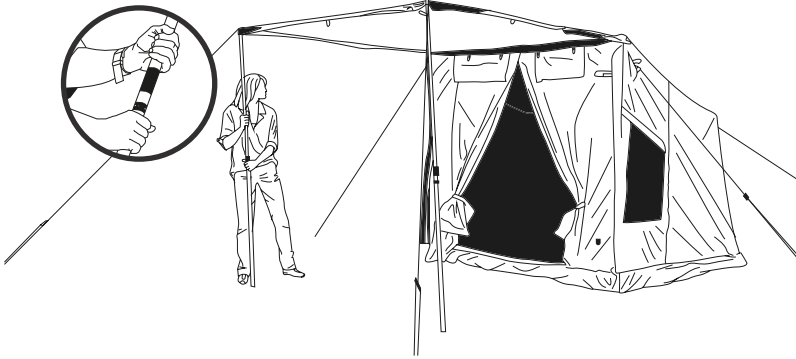

Optional:


Lower one pole during heavy rain.

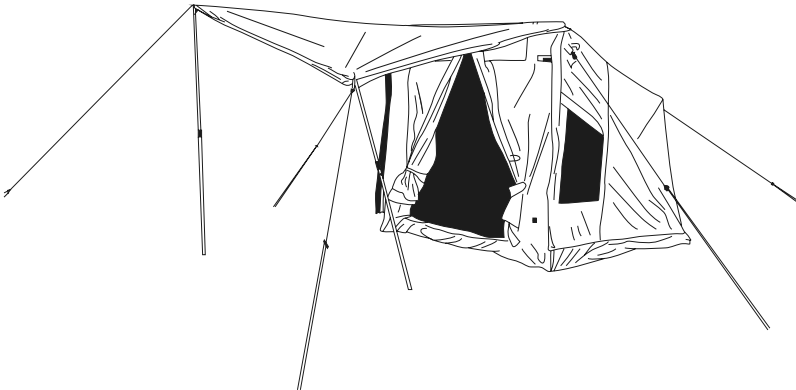

Setting Up Your Oztent RX Fly

Step 1:

Throw the Oztent Fly over the tent. Tilt it forward and zip the Oztent Fly on the top of the tent.

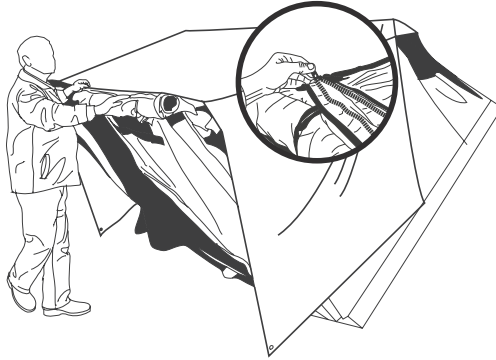

Step 2:


Place the poles on each side to create spacing and secure with guy ropes as shown.



Setting Up the Living Room


Step 1:

Install your peak awning poles. Lock them at the height of your tent roof.

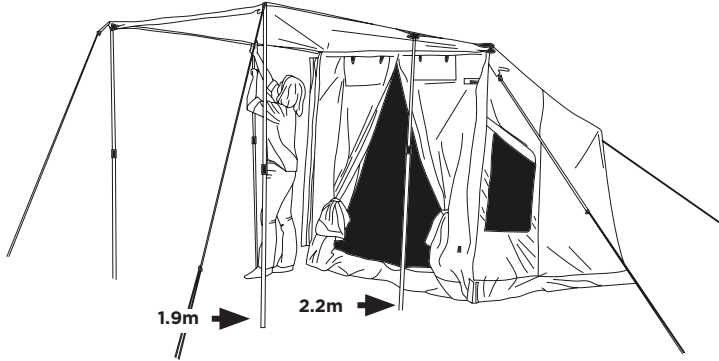

Step 2:

Install your ridge pole. Twist to lock at desired tension.

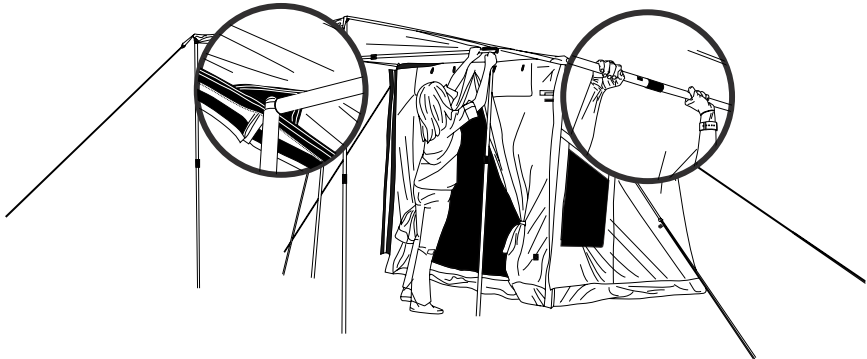

Step 3:

Zip on the Living Room Panel.

Note: For easy set-up, lower down the taller poles before zipping on the panels.



Step 4:

Fully extend the peak awning poles once the Living Room Panel is zipped on.


Note: Ensure that orange pole caps placed over all pole spigots and under any guy ropes.



Step 5:

Place the zip-in floor inside the Living Room and spread out to all four corners making sure to align A and B symbols on tent with A and B on the zip-in floor.


Note: Lift poles gently and slide zip-in floor section under poles. Position pole bases on reinforced panel on zip-in floor.

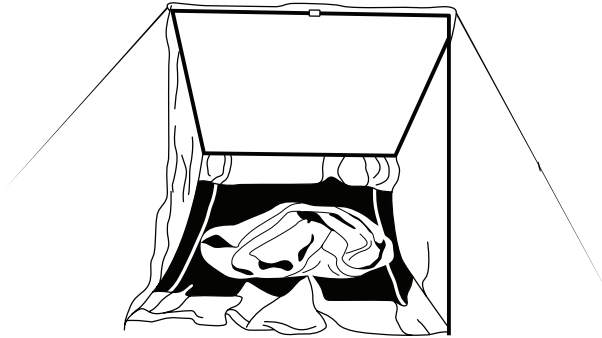

Step 6:


Zip-in orange zipper to front of tent then zip-in black zipper to sides and front of tent.

Note: Ensure to align orange zipper on zip-in floor with orange zipper on front of tent section.

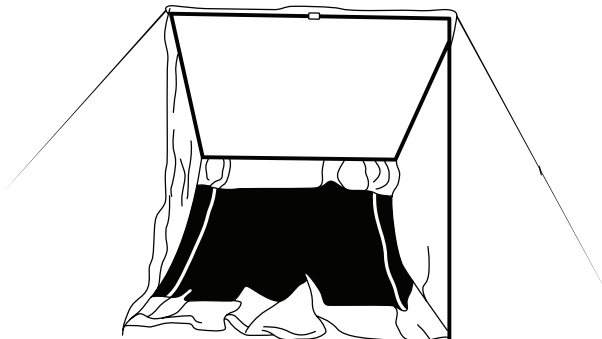

Parts Identification

Item	General Part Name	Part No.
1	Main Extrusion	OZME
2	Hinge	OZH
3	Corner	OZC
4	Foot Fitting	OZFF
5	Foot	OZF
6	M8 Nut, Washer and Slider	OZS
7	Brace Extrusion with Fittings	SZSA

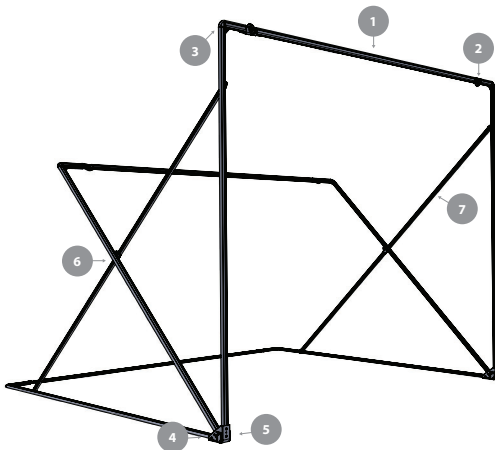

1. Main Extrusion



2. Hinge



3. Corner



4. Foot Fitting



 
5. Foot



6. M8 Nut, Washer and Slider



7. Brace Extrusion with Fittings



Warranty

FOR SALES IN AUSTRALIA USA AND INTERNATIONAL MARKETS. TENTS, FURNITURE AND ACCESSORIES: [OZTENT, MALAMOO, AND FOXWING]

This document sets out the terms and conditions of product warranties for Oztent, Malamoo and Foxwing branded products. It is an important document. Please keep it with your proof of purchase documents in a safe place for future reference should you require service for your Oztent, Malamoo, or Foxwing branded product.

General Terms and Conditions

1. In this warranty
 - (a) 'Oztent' means Oztent Australia Pty Limited ABN 19 050 035 964 in respect of products purchased in Australia, USA and International markets;
 - (b) 'Product' means any Oztent product purchased by you accompanied by this document;
 - (c) 'Warranty Period' means
 - (i) where you use the Product for personal, domestic or household purposes in Australia the period of '12' months and in USA and International markets the period of '12' months;
 - (ii) for Tents and Tent Accessories used for personal, domestic or household purposes (e.g. Peaked Side Panel) the period of '24' months;
 - (iii) for Furniture (e.g. Chairs) and Furniture Accessories used for personal, domestic or household purposes the period of '60' months;
 following the date of original purchase of the Product;
 - (d) 'you' means the purchaser of the Product not having purchased the appliance for re-sale, and 'your' has a corresponding meaning.
2. This warranty only applies to Products purchased and used in Australia, USA or International markets and is in addition to (and does not exclude, restrict, or modify in any way) any non-excludable statutory warranties in Australia, USA or International markets.
3. Oztent warrants that, when dispatched from an Oztent warehouse, the Product is free from defects in materials and workmanship for the Warranty Period.
4. During the Warranty Period Oztent or its Authorised Service Centre will, at no extra charge if your product is readily accessible without special equipment, and subject to these terms and conditions, repair or replace any parts which it considers to be defective. You agree that any replaced Product or parts become the property of Oztent. This warranty does not apply to guy ropes, tent pegs, or similar perishable parts.
5. Parts and Products not supplied by Oztent are not covered by this warranty.
6. Where you are within an Oztent service area, this warranty covers the cost of transport of the Product only to and from Authorised Service Centres of Oztent ("ASC") and travelling costs for representatives of the ASC to and from your home or business. If you are outside an Oztent service area, or you are claiming for an accessory you will bear these costs. For information about whether you are within an Oztent service area, or information on your nearest ASC please phone 1800 OZTENT or 1800 698368 in Australia, +8555 OZTENT or +855 569 8368 in the USA or +61 2 8706 5100 in International markets.
7. Proof of purchase is required before you can make a claim under this warranty.
8. You may not make a claim under this warranty unless the defect claimed is due to faulty or defective parts or workmanship. Oztent is not liable in the following situations (which are not exhaustive):
 - (a) The Product is damaged by:
 - (i) accident
 - (ii) misuse or abuse, including failure to properly maintain or service
 - (iii) normal wear and tear
 - (iv) storm damage or improper storage

- (v) incomplete or improper installation
- (vi) incorrect, improper or inappropriate operation
- (vii) insect or vermin infestation.
- (b) The Product is modified without authority from Oztent in writing.
- (c) The Products model number, serial number or warranty seal has been removed or defaced.
- (d) The Product was serviced or repaired by anyone other than Oztent or its Authorised Service Centres.

9. This warranty, the contract to which it relates and the relationship between you and Oztent are governed by the law applicable in the Australian State where the Product was purchased or the law applicable in the USA or International markets if the Product was purchased in the USA or International markets. Where the Product was purchased in the USA or International markets for business purposes the Consumer Guarantee Act does not apply.

Limitation of Liability

10. To the extent permitted by law:
 - (a) Oztent excludes all warranties other than as contained in this document;
 - (b) Oztent shall not be liable for any loss or damage whether direct or indirect or consequential arising from your purchase, use or non-use of the Product.
11. Provisions of the Trade Practices Act and State consumer legislation in Australia, and the Consumer Guarantees Act, the Sale of Goods Act and the Fair Trading Act in New Zealand or any Act or State consumer legislation in the USA or International markets, imply warranties or conditions, or impose obligations, upon Oztent which cannot be excluded, restricted or modified. To the extent permitted by law, the liability of Oztent (if any) arising out of or in relation to the Product or any services supplied by Oztent shall be limited (where it is fair and reasonable to do so):
 - (a) in the case of Products, at its option, to the replacement or repair of the Product or the supply of equivalent products or the payment of the cost of replacing the Product or having the Product repaired or of acquiring equivalent Product. Upon being replaced, parts and Products become the property of Oztent; or
 - (b) in the case of services, at its option, to the supply of the services again or the payment of the cost of having the services re-supplied; and in the case of Products or services supplied in the USA or International markets, loss or damage whether direct or indirect or consequential that is reasonably foreseeable.

Privacy

You acknowledge that if you make a warranty claim it will be necessary for Oztent and its Authorised Service Centres to exchange information in relation to you to enable Oztent to meet its obligations under this warranty.

Important Notice

Before calling for service please check carefully the owner's manual, use and care instructions and the warranty terms and conditions.

Product Registration

To assist in validating warranty, we kindly ask that you register your product purchase online with Oztent in your country of origin or alternatively complete the warranty card provided with your product (if applicable) and return it to Oztent care of the nominated address.

Please visit our website for more warranty information & to register your Oztent product

oztent.com.au/product-rego





OZTENT[®]

Oztent Australia Pty Ltd

PO Box Q1700 Sydney NSW 2000

Australia Ph: 02 8706 5100

USA Ph: 855 569 8368

International Ph: +61 2 8706 5100

www.oztent.com

