



OWNER'S MANUAL

WARNING

Never use any fuel-burning products (stoves, lanterns, heaters, etc.) inside or within proximity of the Tent. Use of fuel-burning products inside or within proximity of the Tent can result in the accumulation of dangerous concentrations of carbon monoxide – a colourless, odourless and tasteless gas that is slightly denser than air. Breathing carbon monoxide could cause serious injury or death.

Keep all flame and heat sources away from this Tent. This Tent is made with flame resistant fabric but it is not fireproof. The Tent fabric will burn if left in continuous contact with an open flame or other heat source. Failure to keep all flame and heat sources away from this Tent may result in a fire that could cause serious injury or death.

Before using this product, read and fully understand: (1) attached warnings; (2) the Owner's Manual and all accompanying documentation. Failure to follow these directions could cause an unsafe situation leading to fire, burns, severe injury, or death.

USING AND CARING

RAIN PROTECTION

Use the included fly in heavy rain. The Tent is light shower proof without the fly but fully water proof only with the fly installed.

VENTILATION

Maintain adequate ventilation inside the Tent at all times.

CAMPSITE CHOICE

When choosing a campsite, carefully consider the possibility of falling rocks or tree limbs, lightning, flash floods, avalanches, strong winds, and other potential hazards, to reduce the risk of loss or injury.

Select a site that's level, well drained, and is protected from the wind and other elements. Clear the campsite of sharp stones, sticks, and other debris, both for comfort and to protect the floor of the Tent. If possible, avoid setting the Tent on ground that is already wet. If this is not possible keep the Tent well ventilated to minimize humidity and condensation within the Tent.

PEGS AND ROPES

Peg down the Tent properly at all times to reduce the risk of loss or injury to Tent users.

All Tents require pegging to prevent them from being blown away in strong winds. Always anchor the Tent. Tent pegs and ropes are supplied to safely setup the Tent in most situations. It may be necessary to purchase additional and/or specialized pegs and ropes for use in extreme or varied soil conditions. Maintain adequate ventilation inside the Tent at all times.

Tightly tensioning the Tent with attached ropes greatly increases the Tent's strength and stability. This will also reduce fabric sagging and wrinkles and prevent rainwater from pooling.

USING A FLOOR SAVER

A Floor Saver keeps the Tent floor clean and dry and it minimises floor wear and tear by protecting it from excessive abrasion.

CONDENSATION

When warm, moist air comes in contact with the cool tent fabric condensation can form. In most situations condensation can be controlled by allowing air inside the Tent to vent outside. During periods of high humidity, such as during rain storms, it may be difficult to prevent or reduce condensation. In these situations ventilation could actually increase the condensation by drawing in more humid air.

To reduce condensation use the included Tent Fly. The Tent Fly is designed to reduce the temperature difference between the inside and outside of the Tent. It is normal to find the underside of the fly covered in water droplets in humid conditions.

Condensation can also collect on parts of the floor inside the Tent. This is also normal and does not indicate leaking fabric.

ZIPPERS

Be careful when using Tent zippers. Go slow when zipping. Make sure to align the zipper tracks before sliding the zipper and don't exert excessive force on the zipper. If fabric gets caught in the zipper, stop and slowly reverse the zipper to remove. A silicone based lubricant may be used to improve zipping.

When dirt gets in the zipper teeth, it can cause abrasion and damage to the zipper sliders. You can clean the zipper teeth by rinsing them with water. The pressure from a regular garden hose will push out small sand particles.

CLEANING

If the Tent should require cleaning, set it up and use a sponge with warm water to clean. If further cleaning is required, a garden hose can be used to wash off any remaining dirt. Do not use detergent, soap, bleach, or have the Tent dry cleaned, as this may remove the waterproofing and/or damage the fabric. Allow the Tent to air-dry completely before packing or storing.

STORAGE

Packing and storing the Tent while it's wet or damp leads to premature breakdown of the canvas and coatings. Prolonged exposure to moisture causes the waterproof layer to break down, becoming soft, sticky and no longer waterproof. Storing a wet Tent can cause mildew to form on the fabric. Mildew will cause the Tent to stain, smell, and may lead to the premature breakdown of the waterproof coating. Dry the Tent thoroughly after every trip.

ANIMALS


To prevent damage from animals chewing holes in the Tent fabric, never store food or cooking equipment in the Tent.

SETTING UP THE OZTENT OXLEY


PHASE

1

Unpack the Tent and undo the retaining straps. The number of straps may vary depending on Tent size. Do not discard these straps - you will need them for pack up.

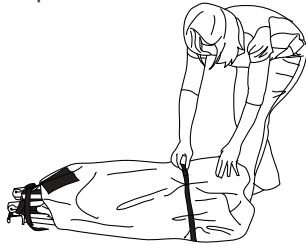

Stand up the Tent. Undo the attached strap restraining the frame (A). Release the folded frame by pulling away the attached nylon loops (B).

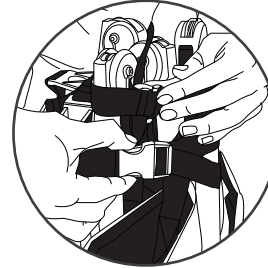

A




B

Allow the frame to unfold itself onto the ground.



Pull all legs out as far as you can and peg them in place.

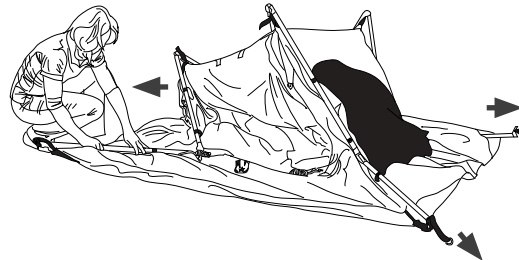


SETTING UP THE OZTENT OXLEY



PHASE

2

Push up the center hub to lock in the roof of the Tent. Lower the locked roof back down gently.

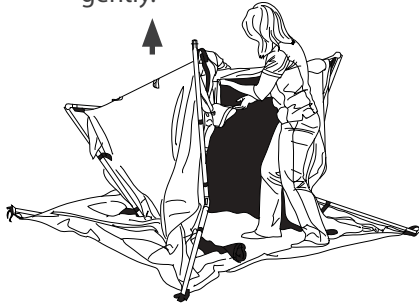


Pull all the arms out from the knuckles to lock the frame into place. You may need to push the Tent up a little to lock in the last knuckle.

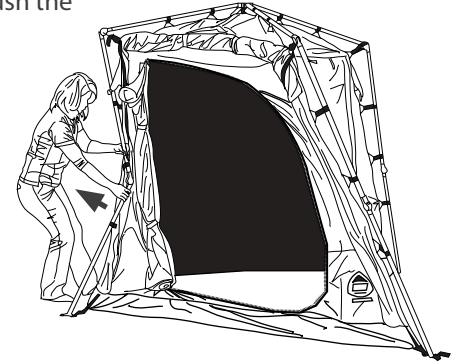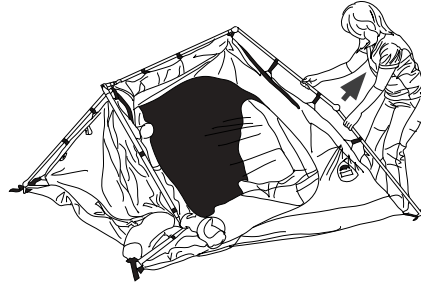

PHASE

3


Peg out all ropes and peg points.

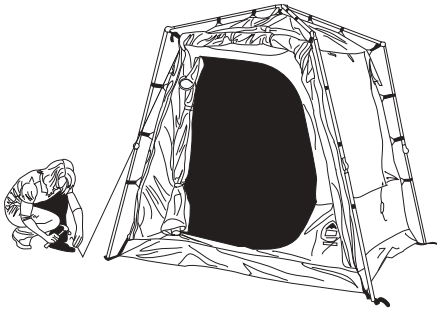

OPTION

A


Release the front awning and use the included Awning Poles and ropes to set it up.

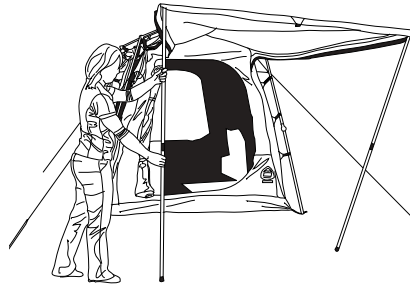

OPTION

B

Throw the fly over the Tent and secure all plastic clips at the bottom. Secure Velcro straps after fitting.

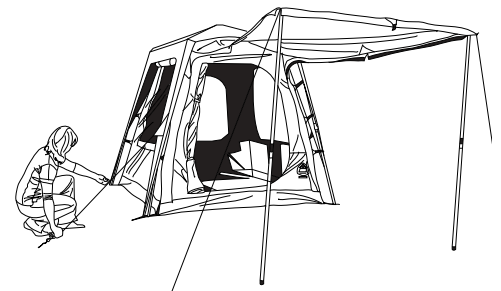


SETTING UP THE OZTENT OXLEY



PHASE

4

Follow phase 1 to 3 for setting up the Tent. Pull out the excess canvas at the back of the Tent and peg at the bottom.

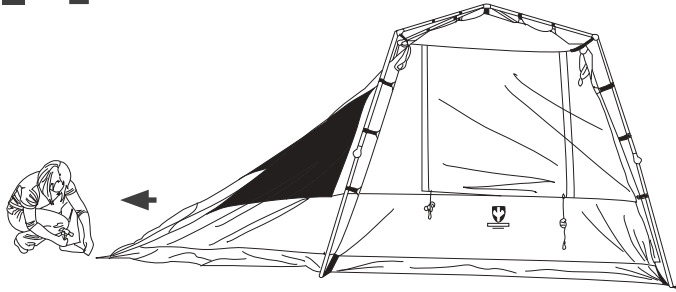

Assemble the Extension Pole. Feed the Extension Pole gently through the sleeve at the back of the Tent. Allow the pole to rotate freely for an easier feed.

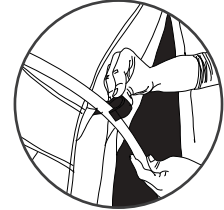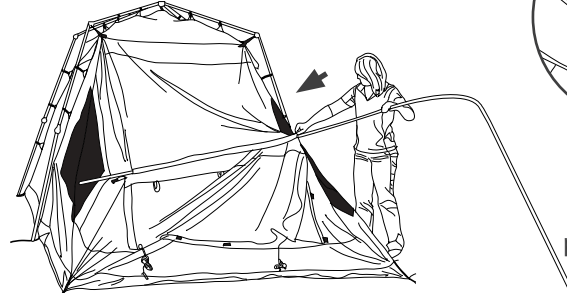


Attach the plastic clips to keep the pole in place.

PHASE


5

Tuck the extension pole in place as shown.

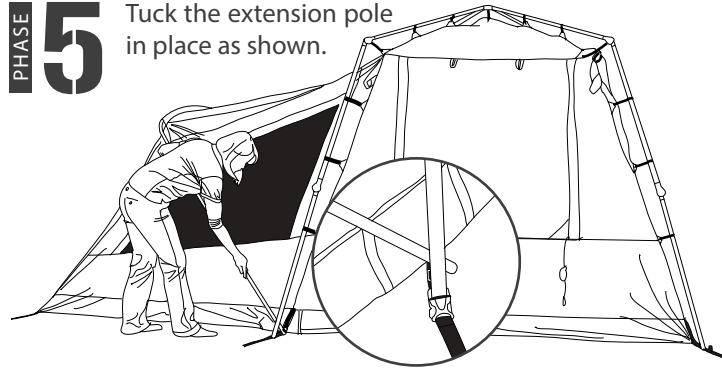


SETTING UP THE OZTENT OXLEY ACCESSORIES


Fully set up the Tent. Use the Peaking Poles included (if applicable) to peak up the Tent as illustrated.

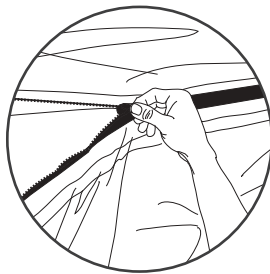

Carefully zip on the panels.

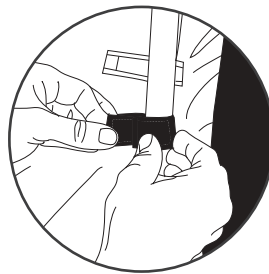

Fix the panels to the awning poles with the attached Velcro straps.

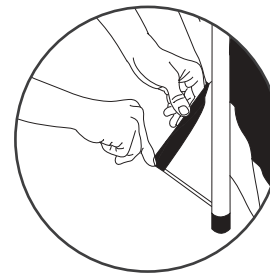

Peg down at all pegging loops.


TAKING DOWN THE OZTENT OXLEY

Note: Before packing the main Tent, detach and pack the Fly and all other accessories. Unpeg and secure all guy ropes and pegs. If you have an extended model take down the extension and pack it inside the main Tent.

PHASE

1

Close all windows. Roll up and secure the attaching awning. Pull down the center hub of the handle attached inside.

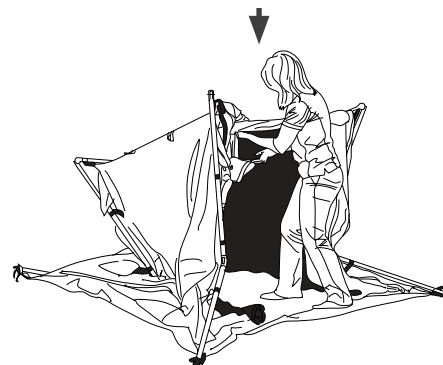


PHASE

2

Unpeg all legs and fold them up to the centre as shown



A

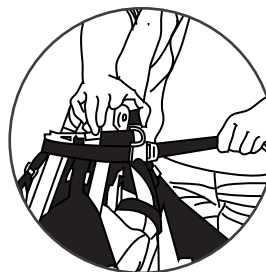

B


Restrain the frame with the attached looped straps (A) and restraining strap (B).

The folded Tent should look similar to this illustration.



TAKING DOWN THE OZTENT OXLEY

PHASE **3** Gently put down the Tent. Roll it up as tight as possible. Restrain with provided retaining straps.

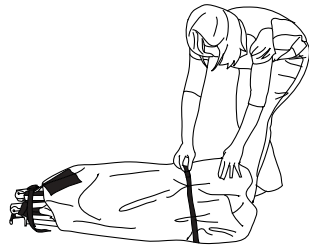

For an easier pack up, release all buckles to loosen the carry bag. Put the carry bag over the rolled Tent. Flip over to zip up.



IMPORTANT – REGISTRATION REQUIRED

FOR SALES IN AUSTRALIA AND NEW ZEALAND

TENTS, FURNITURE AND ACCESSORIES: [OZTENT, MALAMOO, JET TENT AND FOXWING]

This document sets out the terms and conditions of product warranties for Oztent, Malamoo, Jet Tent and Foxwing branded products. It is an important document. Please keep it with your proof of purchase documents in a safe place for future reference should you require service for your Oztent, Malamoo, JetTent or Foxwing branded product.

General Terms and Conditions

1. In this warranty

(a) 'Oztent' means Oztent Australia Pty Limited ABN

19 050 035 964 in respect of products purchased in Australia and New Zealand;

(b) 'Product' means any Oztent product purchased by you accompanied by this document;

(c) 'Warranty Period' means

(i) where you use the Product for personal, domestic or household purposes in Australia the period of '12' months and in New Zealand the period of '12' months;

(ii) where you use the Product for commercial purposes, in Australia the period of '6' months and in New Zealand the period of '6' months, (if the period stated is 0 months you are not covered by this product warranty)

(iii) for Tents and Accessories (e.g. Peaked Side Panel) the period of '24' months;

(iv) for Furniture (e.g. Chairs) the period of '60' months; following the date of original purchase of the Product;

(d) 'you' means the purchaser of the Product not having purchased the appliance for re-sale, and 'your' has a corresponding meaning.

2. This warranty only applies to Products purchased and used in Australia or New Zealand and is in addition to (and does not exclude, restrict, or modify in any way) any non-excludable statutory warranties in Australia or New Zealand.

3. Oztent warrants that, when dispatched from an Oztent warehouse, the Appliance is free from defects in materials and workmanship for the Warranty Period.

4. During the Warranty Period Oztent or its Authorised Service Centre will, at no extra charge if your appliance is readily accessible without special equipment, and subject to these terms and conditions, repair or replace any parts which it considers to be defective. You agree that any replaced Product or parts become the property of Oztent. This warranty does not apply to guy ropes, tent pegs, or similar perishable parts.

5. Parts and Products not supplied by Oztent are not covered by this warranty.

6. Where you are within an Oztent service area, this warranty covers the cost of transport of the Product only to and from Authorised Service Centres of Oztent ("ASC") and travelling costs for representatives of the ASC to and from your home or business. If you are outside an Oztent service area, or you are claiming for an accessory you will bear these costs. For information about whether you are within an Oztent service area, or information on your nearest ASC please phone 1800 OZTENT or 1800 698368 in Australia, or +61 2 8706 5100 in New Zealand.

7. Proof of purchase is required before you can make a claim under this warranty.

8. You may not make a claim under this warranty unless the defect claimed is due to faulty or defective parts or workmanship. Oztent is not liable in the following situations (which are not exhaustive):

- (a) The Product is damaged by:
 - (i) accident
 - (ii) misuse or abuse, including failure to properly maintain or service
 - (iii) normal wear and tear
 - (iv) storm damage or improper storage
 - (v) incomplete or improper installation
 - (vi) incorrect, improper or inappropriate operation
 - (vii) insect or vermin infestation.
- (b) The Product is modified without authority from Oztent in writing.
- (c) The Products model number, serial number or warranty seal has been removed or defaced.
- (d) The Product was serviced or repaired by anyone other than Oztent or its Authorised Service Centres.

9. This warranty, the contract to which it relates and the relationship between you and Oztent are governed by the law applicable in the Australian State where the Product was purchased or the law applicable in New Zealand if the Product was purchased in New Zealand. Where the Product was purchased in New Zealand for business purposes the Consumer Guarantee Act does not apply.

Limitation of Liability

10. To the extent permitted by law:

- (a) Oztent excludes all warranties other than as contained in this document;
- (b) Oztent shall not be liable for any loss or damage whether direct or indirect or consequential arising from your purchase, use or non-use of the Product.

11. Provisions of the Trade Practices Act and State consumer legislation in Australia, and the Consumer Guarantees Act, the Sale of Goods Act and the Fair Trading Act in New Zealand, imply warranties or conditions, or impose obligations, upon Oztent which cannot be excluded, restricted or modified. To the extent permitted by law, the liability of Oztent (if any) arising out of or in relation to the Product or any services supplied by Oztent shall be limited (where it is fair and reasonable to do so);

(a) in the case of Products, at its option, to the replacement or repair of the Product or the supply of equivalent products or the payment of the cost of replacing the Product or having the Product repaired or of acquiring equivalent Product. Upon being replaced, parts and Products become the property of Oztent; or

(b) in the case of services, at its option, to the supply of the services again or the payment of the cost of having the services re-supplied; and in the case of Products or services supplied in New Zealand, loss or damage whether direct or indirect or consequential that is reasonably foreseeable.

Privacy

You acknowledge that in the event that you make a warranty claim it will be necessary for Oztent and its Authorised Service Centres to exchange information in relation to you to enable Oztent to meet its obligations under this warranty.

Important Notice

Before calling for service please check carefully the owner's manual, use and care instructions and the warranty terms and conditions.



Oztent Australia Pty Limited
service@oztent.com | www.oztent.com