

 **OZTENT[®]**

***TRAVELLER PRO
WHEEL BAG***

OZ01WBPA

OWNER'S MANUAL





HELPFUL HINT

We recommend that you set up this product before you leave for your trip. Check that all parts are present and that you familiarise yourself with the assembly and disassembly of the product.



Congratulations and thank you for choosing your new Oztent product.

We are sure that you will find your new Oztent product a pleasure to use and enjoy.

Before set-up or use, we recommend that you read through this entire manual. It provides full user instructions.

To avoid any problems that may occur when you use a new product for the first time, it is important that the Oztent product is set up correctly. Please ensure that you read all instructions contained in this manual carefully. We want you to have a safe and enjoyable experience.

After unpacking your new Oztent product, please check that it is not damaged and that all parts have been supplied. If in doubt, contact your local Oztent Customer Care Centre or dealer.

Contents

Package Contents.....	3
Warning.....	4
Sizing Guide	5
Setup	5
Recovery Board Storage	10
Warranty	13

Package Contents

Item	General Part Name	Qty
1	Oztent Traveller Pro Wheel Bag	1
2	Oztent Traveller Inner Bag	1
3	Retaining Straps	2





Thank you for purchasing your new Oztent Traveller Pro Wheel Bag. Please read the following instructions carefully before fitting your Wheel Bag. Fitting a rear wheel bag is a practical and convenient way to keep your surroundings tidy wherever your travels take you. This guide will step you through the process of fitting your Oztent Traveller Pro Wheel Bag.

Before you get started, there are a couple things you need to know:

Warning

Never place any hot or burning products (wood, coal, disposable BBQs, etc) inside or within proximity of this bag. Keep all flame and heat sources away from this bag. If the bag is left in continuous contact with an open flame or other heat source, the material will burn. Failure to keep all flame and heat sources away from this bag can result in a fire.

Before using this product, read and fully understand the instruction manual and all accompanying documentation. Failure to follow these directions can cause an unsafe situation leading to injury.

Check Your Product

After unpacking your new Oztent Traveller Pro Wheel Bag, thoroughly inspect your new Oztent product, checking that it is not damaged and that all parts have been supplied. If in doubt, contact our Oztent Customer Care Team or your local dealer.

Wheel Access


You must also find the most accessible area between the vehicle and the tyre on your spare wheel setup. This area is usually around the sides of the wheel. If you have a swing away spare wheel setup, you will want to position the wheel away from the rear of your vehicle. If there is still no easy access to the back of the wheel while it is mounted, you may need to loosen your spare wheel to create a gap for the straps to pass through, or potentially detach it from the mount completely and reattach it once you have fitted your wheel bag.

Clean Your Tyre

Before fitting your Oztent Traveller Pro Wheel Bag we recommended cleaning the rear wheel and remove any debris. This will ensure that you and your wheel bag finish your setup clean and tidy as well as preventing injury or damage.

Sizing Guide

The Oztent Traveller Pro Wheel Bag features adjustable clips which allow the bag to be compatible with a large range of tyre sizes. For compatible tyre sizes, please see the illustration below:

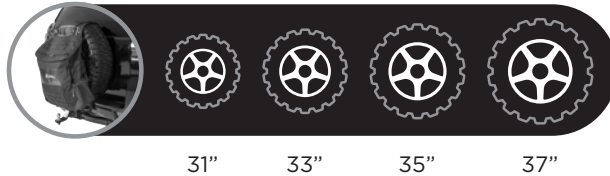

Responsible Rubbish Removal

Using your wheel bag for rubbish storage? Here at Oztent, we are big believers in leaving campsites as good as – if not better than – you find them. With this in mind, please ensure the proper disposal of your rubbish. For recyclables like cans, bottles, cardboard packaging, and glass, please take these items with you and dispose of them responsibly at your local recycling centre or nearest convenient location. If you are at a campsite where the on-site rubbish bins are full, take your rubbish with you as dumping it near the bin may attract wildlife.

Setup

1. Place the bag over the centre of the tyre to gauge the desired position.



2. Release both bottom clasps on the bag.



3. Place both straps through one of the retaining straps.



4. Position the strap near the top of the bag so that it sits behind the wheel towards the top. See below for the recommended position of the strap once the bag is fully installed:



5. Place the top section of the bag over the back of your rear wheel with the retention strap near the top of the bag and the straps down the side of the wheel.



6. Slide the straps down either side of the wheel.



7. Position both straps so that they hang at the bottom of the wheel.



8. Place both straps through the second anti-slip loop.



9. Slide the second retaining strap under and behind the wheel. See below for the recommended position of the strap once the bag is fully installed:



10. Secure the bottom clips.



11. Tighten the straps and place the elastic loops near the bottom of the straps.



12. Slip the excess strap through the elastic and loop the strap to hold in place



13. Tighten and adjust the top clips to reduce the sagging and to raise the position of the bag on the wheel.



14. Give the bag a gentle tug to ensure it is firmly attached to the wheel and does not slip off



Recovery Board Storage

1. Place the recovery boards into the pocket.



2. If your recovery board features handle sections follow the following steps:
 - a. Release the clips and place through the gaps on either side of the board



- b. Secure the clips and tighten the straps



- c. (Optional) For additional security use a cable seal (not included) through the eyelets to lock in place.

Inner Bag

The Oztent Traveller Pro Wheel Bag includes a Traveller Inner Bag, a clip-in internal bag for easy, leak-free storage of rubbish, wet laundry, and other items.

Securing

For easy attachment, the bag features colour-coded clips to secure in place. Start with connecting the orange colour clips; then go around the sides and front, securing the remaining clips.



Inner Bag Use

To ensure contents remain dry, follow these steps:

1. Flatten the top seals together.



2. Roll the sealed top approx. three times and push the central clasps together so they lock into place.



3. Release the internal clips that connect the two bags.



4. Remove the inner bag and responsibly dispose of its contents.



Warranty

FOR SALES IN AUSTRALIA USA AND INTERNATIONAL MARKETS. TENTS, FURNITURE AND ACCESSORIES: [OZTENT, MALAMOO, AND FOXWING]

This document sets out the terms and conditions of product warranties for Oztent, Malamoo and Foxwing branded products. It is an important document. Please keep it with your proof of purchase documents in a safe place for future reference should you require service for your Oztent, Malamoo, or Foxwing branded product.

General Terms and Conditions

- In this warranty
 - 'Oztent' means Oztent Australia Pty Limited ABN 19 050 035 964 in respect of products purchased in Australia, USA and International markets;
 - 'Product' means any Oztent product purchased by you accompanied by this document;
 - 'Warranty Period' means
 - where you use the Product for personal, domestic or household purposes in Australia the period of '12' months and in USA and International markets the period of '12' months;
 - for Tents and Tent Accessories used for personal, domestic or household purposes (e.g. Peaked Side Panel) the period of '24' months;
 - for Furniture (e.g. Chairs) and Furniture Accessories used for personal, domestic or household purposes the period of '60' months;;following the date of original purchase of the Product;
 - 'you' means the purchaser of the Product not having purchased the appliance for re-sale, and 'your' has a corresponding meaning.
- This warranty only applies to Products purchased and used in Australia, USA or International markets and is in addition to (and does not exclude, restrict, or modify in any way) any non-excludable statutory warranties in Australia, USA or International markets.
- Oztent warrants that, when dispatched from an Oztent warehouse, the Product is free from defects in materials and workmanship for the Warranty Period.
- During the Warranty Period Oztent or its Authorised Service Centre will, at no extra charge if your product is readily accessible without special equipment, and subject to these terms and conditions, repair or replace any parts which it considers to be defective. You agree that any replaced Product or parts become the property of Oztent. This warranty does not apply to guy ropes, tent pegs, or similar perishable parts.
- Parts and Products not supplied by Oztent are not covered by this warranty.
- Where you are within an Oztent service area, this warranty covers the cost of transport of the Product only to and from Authorised Service Centres of Oztent ("ASC") and travelling costs for representatives of the ASC to and from your home or business. If you are outside an Oztent service area, or you are claiming for an accessory you will bear these costs. For information about whether you are within an Oztent service area, or information on your nearest ASC please phone 1800 OZTENT or 1800 698368 in Australia, +8555 OZTENT or +855 569 8368 in the USA or +61 2 8706 5100 in International markets.
- Proof of purchase is required before you can make a claim under this warranty.
- You may not make a claim under this warranty unless the defect claimed is due to faulty or defective parts or workmanship. Oztent is not liable in the following situations (which are not exhaustive):
 - The Product is damaged by:
 - accident
 - misuse or abuse, including failure to properly maintain or service
 - normal wear and tear
 - storm damage or improper storage
 - incomplete or improper installation
 - incorrect, improper or inappropriate operation

- (vii) insect or vermin infestation.
- The Product is modified without authority from Oztent in writing.
- The Products model number, serial number or warranty seal has been removed or defaced.
- The Product was serviced or repaired by anyone other than Oztent or its Authorised Service Centres.
- This warranty, the contract to which it relates and the relationship between you and Oztent are governed by the law applicable in the Australian State where the Product was purchased or the law applicable in the USA or International markets if the Product was purchased in the USA or International markets. Where the Product was purchased in the USA or International markets for business purposes the Consumer Guarantee Act does not apply.
 - Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Limitation of Liability

- To the extent permitted by law:
 - Oztent excludes all warranties other than as contained in this document;
 - Oztent shall not be liable for any loss or damage whether direct or indirect or consequential arising from your purchase, use or non-use of the Product.
- Provisions of the Trade Practices Act and State consumer legislation in Australia, and the Consumer Guarantees Act, the Sale of Goods Act and the Fair Trading Act in New Zealand or any Act or State consumer legislation in the USA or International markets, imply warranties or conditions, or impose obligations, upon Oztent which cannot be excluded, restricted or modified. To the extent permitted by law, the liability of Oztent (if any) arising out of or in relation to the Product or any services supplied by Oztent shall be limited (where it is fair and reasonable to do so):
 - In the case of Products, at its option, to the replacement or repair of the Product or the supply of equivalent products or the payment of the cost of replacing the Product or having the Product repaired or of acquiring equivalent Product. Upon being replaced, parts and Products become the property of Oztent;
 - in the case of services, at its option, to the supply of the services again or the payment of the cost of having the services re-supplied;and in the case of Products or services supplied in the USA or International markets, loss or damage whether direct or indirect or consequential that is reasonably foreseeable.

Privacy

You acknowledge that if you make a warranty claim it will be necessary for Oztent and its Authorised Service Centres to exchange information in relation to you to enable Oztent to meet its obligations under this warranty.

Important Notice

Before calling for service please check carefully the owner's manual, use and care instructions and the warranty terms and conditions.

Product Registration

To assist in validating warranty, we kindly ask that you register your product purchase online with Oztent in your country of origin or alternatively complete the warranty card provided with your product (if applicable) and return it to Oztent care of the nominated address.

**Please visit our website
for more warranty
information & to register
your Oztent product**
oztent.com.au/product-rego





OZTENT[®]

Oztent Australia Pty Ltd

PO Box Q1700 Sydney NSW 2000

Australia Ph: 02 8706 5100

USA Ph: 855 569 8368

International Ph: +61 2 8706 5100

www.oztent.com

