

Style Camp
and
Travel Light



BESTARGOT

MODEL#

BSTCH01 Rocket Wood Stove

BSTCH02 Rocket Gas Stove



CAMPING ROCKET WOOD/GAS STOVE INSTALLATION MANUAL

www.bestargotcamp.com

DANGER



CARBON MONOXIDE HAZARD

- **This stove can produce carbon monoxide, which has no odor.**
- **Using it in an enclosed space can kill you.**
- **Never use this stove in an enclosed space such as a camper, tent, car, or home.**

FOR YOUR SAFETY IF YOU SMELL GAS

1. **Do not attempt to light stove.**
2. **Extinguish any open flame.**
3. **Disconnect from fuel canister**


FOR YOUR SAFETY

Do not store or use gasoline or other liquids with flammable vapors in the vicinity of this or any other stove.

Be sure to read this manual before using the product. Keep this manual for future reference, and review its contents regularly to maintain awareness of procedures and warnings. Failure to follow the warnings described in this manual may result in fire, property damage, injury, or death.

- **NEVER** use this product in a house, tent, vehicle, or an unventilated area. This product consumes oxygen and produces carbon monoxide, which can be deadly. Always use the product in a well-ventilated area or outside.
- **NEVER** touch the Body, Receiving Bucket, or any other part of the product directly with the hands or any part of the body when it is in use. To do so may result in injury or burns.
- **NEVER** move, shake, or carry the product when it is in use.
- **NEVER** place your face or any part of your body near the stove when lighting. Always keep a reasonable distance between the charcoal and your body when lighting as close contact may result in burns or injury.
- **NEVER** leave the lighted product unattended.
- **NEVER** allow children to use the product. Always supervise children in the vicinity of this product when it is in use.
- **ALWAYS** supervise pets or animals in the vicinity of the product when it is in use.
- **ALWAYS** place the product on a flat, firm surface when it is in use. The product can be placed on a table top.
- **ALWAYS** make sure that the table top is flat, and stable before the product is used.
- **NEVER** use the product near other heat sources.
- **NEVER** use the product any other way than as described in this annual. The product is intended for outdoor use only.
- **ALWAYS** confirm that charcoal is completely extinguished before disposal.
- **NEVER** use water to extinguish the fire. Failure to comply may result in cracking or distortion of the product.
- **NEVER** use water to extinguish the fire as the steam may cause severe burns.
- **NEVER** overfill with charcoal. Failure to comply may cause cracking or distortion of the product parts.
- **ALWAYS** clean up the grill after use. Dry completely and apply some oil before stowing the unit.
- **NEVER** stow the product when it is hot.
- **ALWAYS** stow the product after it has completely cooled. Failure to comply may cause damage to the carrying case and/or to the product. This may also cause burns.
- **ALWAYS** use two lifters and both hands whenever applicable.
- **ALWAYS** check the product and review this manual before use

• **Name of the parts**

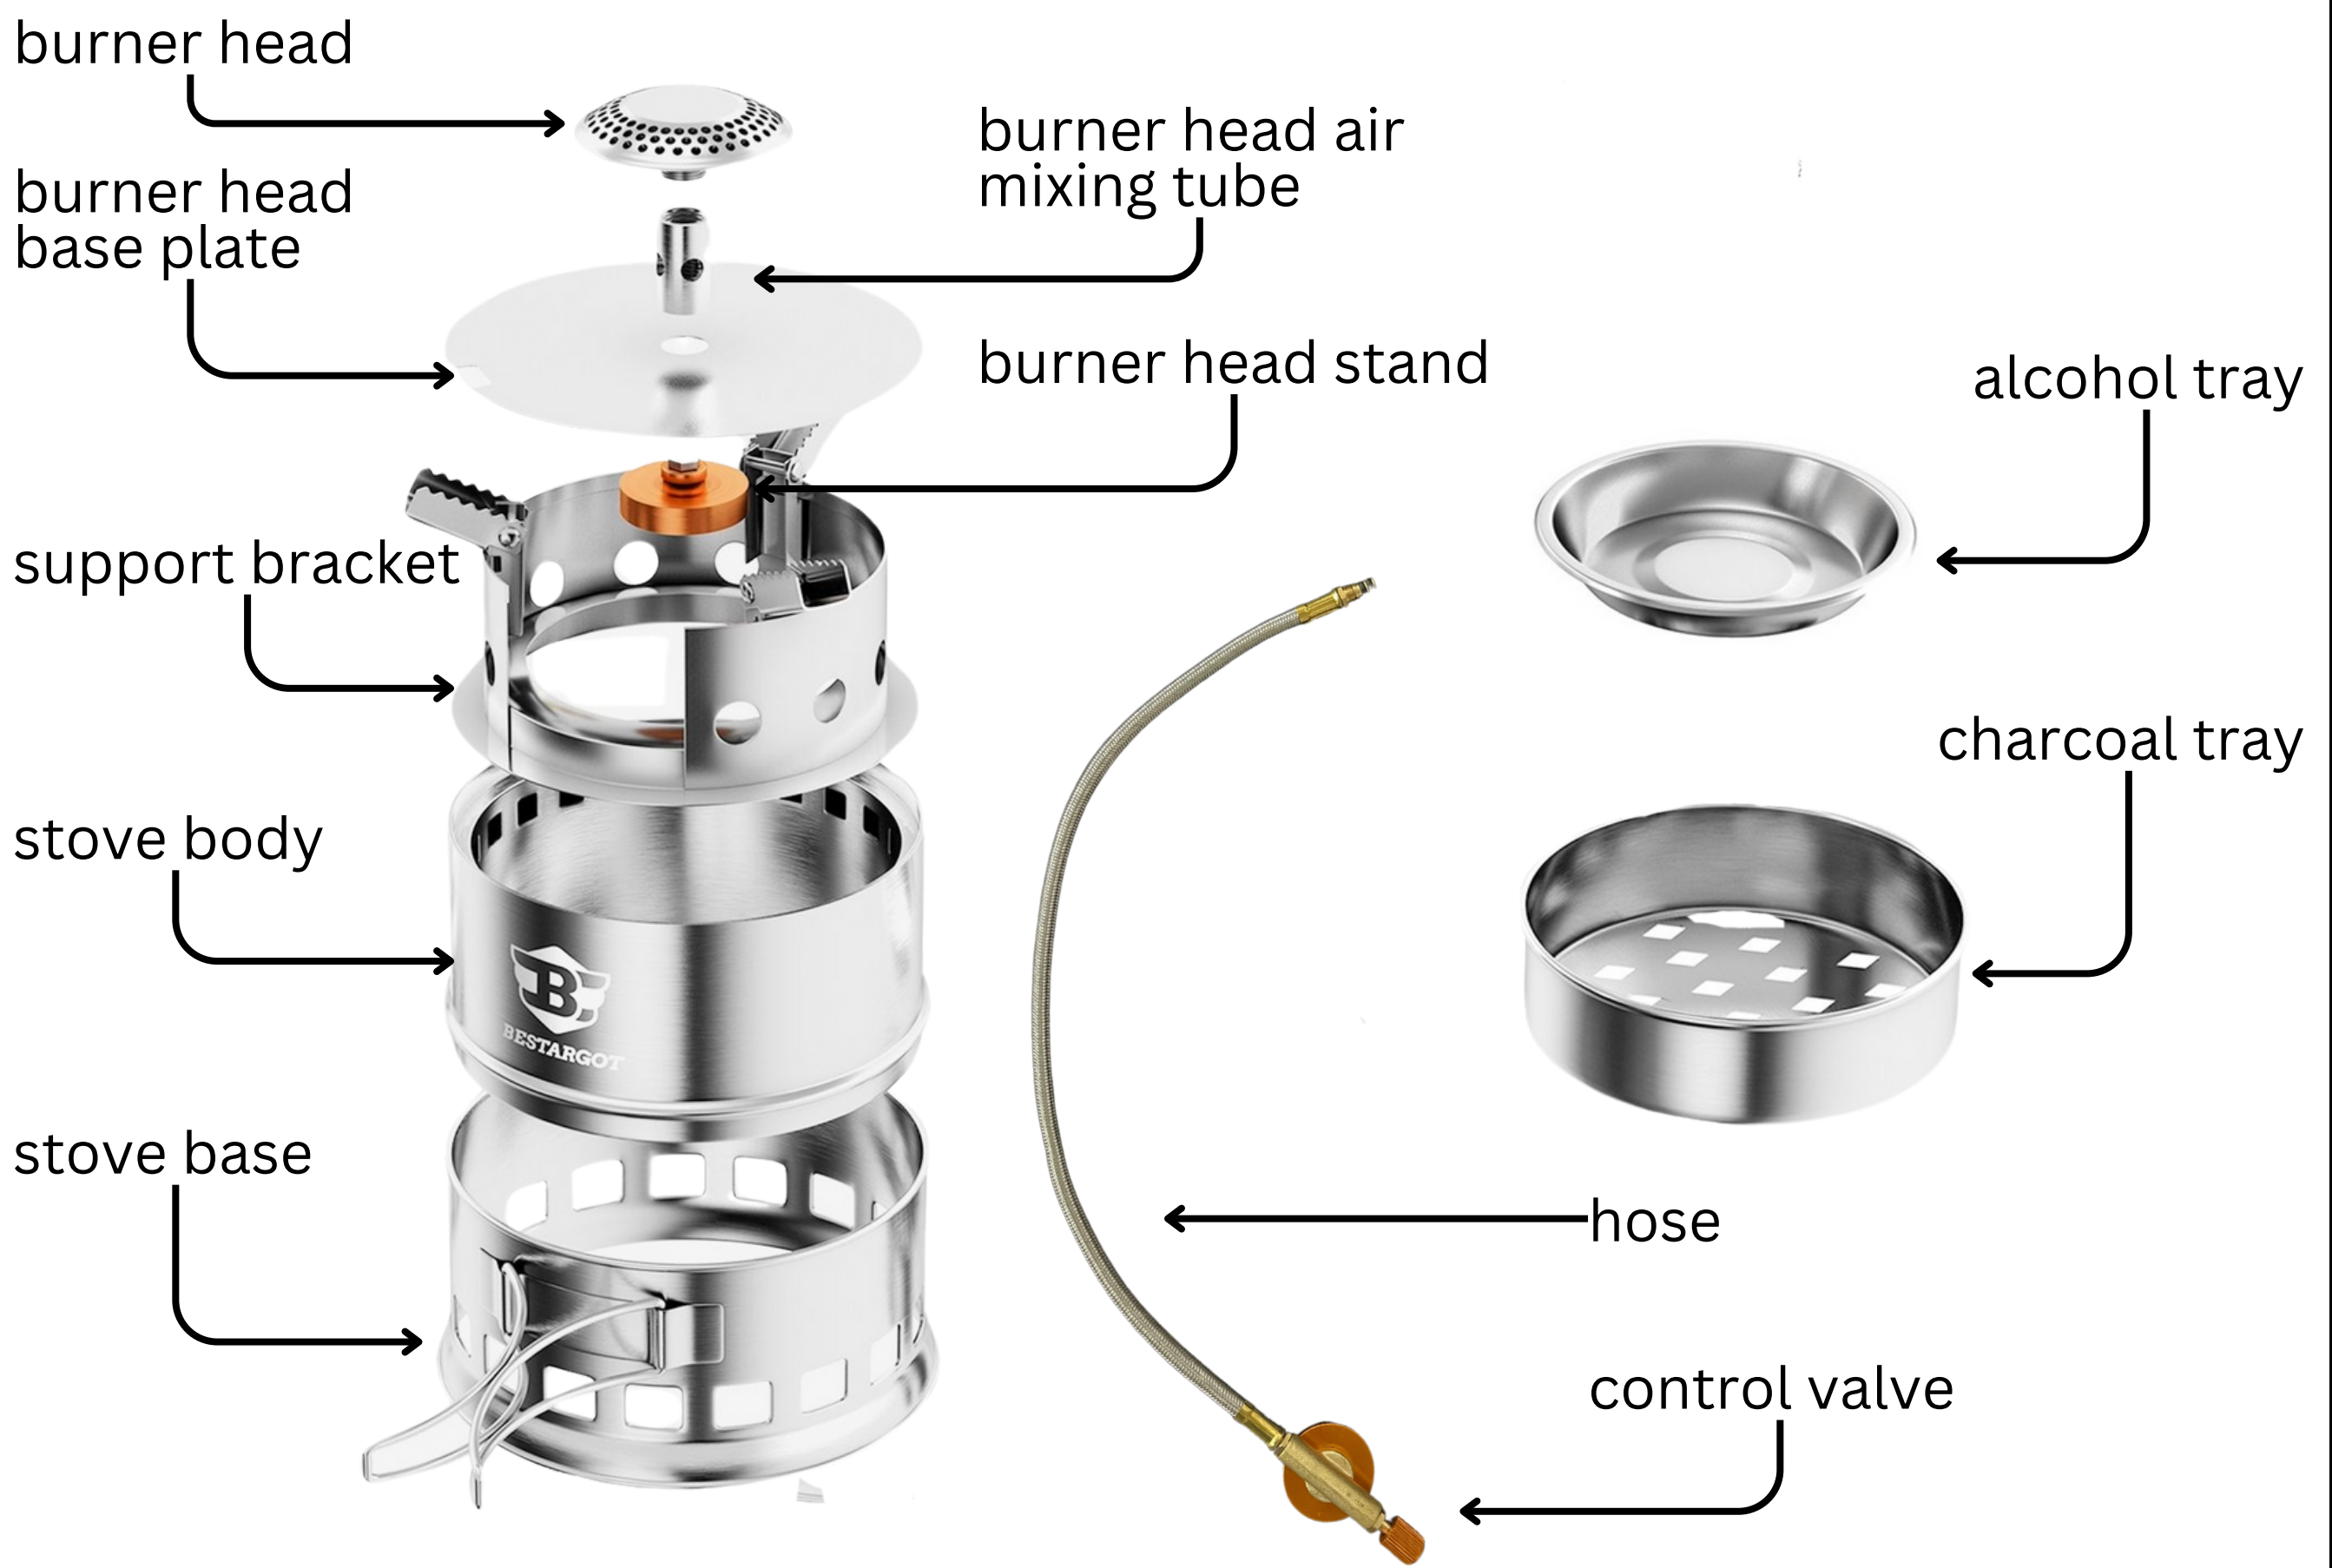

• **Product specifications**

BSTCH01 Rocket Wood Stove

Dimensions when in use:
24 x 13 x 19cm (9.4 x 5.3 x 7.5inch)
Dimensions when stowed:
13 x 13 x 9cm (5.3 x 5.3 x 3.6inch)
Weight: 800g (32oz.)
Supported fuels: wood, charcoal,
alcohol blocks

BSTCH02 Rocket Gas Stove

Dimensions when in use:
24 x 13 x 19cm (9.4 x 5.3 x 7.5inch)
Dimensions when stowed:
13 x 13 x 9cm (5.3 x 5.3 x 3.6inch)
Weight: 900g (32oz.)
Supported fuels: gas tank

CAUTION Confirm that the flame has been extinguished prior to cleaning or stowing.

ALWAYS be cautious about residual flame on the charcoal after use. Make sure that clean up is done after the flame is completely extinguished.

CAUTION NEVER move the product when in use.

CAUTION After using the wood stove, do not invert the stove using the handle. This could cause the product to drop suddenly, leading to burns.

installation steps: **Charcoal Grill Model**



- Begin by placing the stove base **(1)** on a level and firm surface to ensure stability during use. Proceed by inserting the stove body **(2)** into the base **(1)**, followed by the charcoal tray **(3)**. Ensure each component is seated properly and securely. Place the pot support **(4)** on top of the chamber **(2)** to complete the assembly. This will hold your cooking utensil above the flame.
- **For Use with Solid Fuel:** Flip the charcoal tray **(3)** so that the side intended for solid fuel faces downward. Place the solid fuel plate **(5)** on top of the inverted charcoal tray **(3)** to prepare the stove for your solid fuel source.



Setting Up a Camping Wood Stove in **Gas Mode**

- Start by assembling the burner head **(a)**, the air mixing tube **(b)**, the burner base plate **(c)**, the burner head stand **(d)**, and the hose **(e)** together. Make sure all connections are tight and secure to prevent any gas leaks.
- Find a flat and stable surface to place the stove base **(1)**. It's important that the surface is level to ensure the stove is stable during use. Position the stove body **(2)** onto the base **(1)**. Ensure it sits firmly and is properly aligned.
- Take the other end of the hose **(e)** and thread it from the inside to the outside through one of the ventilation holes in the stove base **(1)**. Insert the end of the hose **(3)** into the gas control valve **(f)**. Make sure the connection is secure to prevent gas from escaping.
- Attach the assembled burner unit to the top of the stove body **(2)**. Place the support bracket **(4)** onto the stove body **(2)**. This is where you will place your cooking pot or pan.

